American DJ®

User Instructions

FS-2500 DMX

PRO DMX FOLLOWSPOT

HALOGEN LAMP WARNING!

This fixture is fitted with a halogen lamp which are highly susceptible to damage if improperly handled. Never touch lamp with bare fingers as the oil from your hands will shorten lamp life. Also, never move fixture until lamp has had ample time to cool. Remember, lamps are not covered under warranty conditions.

Caution! Always disconnect from main power before replacing lamps or servicing unit. Remember to always replace with same lamp and fuse.

CAUTION! WARNING! The top of unit gets extremely hot, watch where you rest your hands, or objects that can melt or burn.

Model: FS-2500 DMX SPECIFICATIONS:

Lamp: ELC 24V 250W

Power: 110V/60Hz Fuse: 5A GMA

Ventilation: Fan Cooling Working Position: Any DMX Channels: 2 Weight: 18 lbs.

VVEIGITE. 10 105.

Size: 22.5" x 12.5" x 9.5"

Beam Spread:

From 30 ft. : 5 1/2 ft. From 60 ft. : 10 3/4 ft



Thank you for purchasing this American DJ® product. For your convenience this lighting effect has been lamped and is ready to be used, there is no assembly required. Please read the following instructions before installing or using your new unit.


Operating Instructions:

Unit is ready to be hung or set on a Tripod. The FS-2500 DMX features 2 DMX channels, a bright ELC 250 watt lamp, dual focusing knobs for precise, full focusing, iris control knob at top of unit can also blackout, color wheel with 7 colors plus white, and a hanging bracket. Optional LTS-5 tripod stand sold seperately.

Notice: When unit is brand new smoke will emit from the inside of unit. This is the paint on the inside burning off. There is no problem with the unit, this is normal.

To replace the lamp; locate and unscrew the two thumb screws on the top of the unit, remove the lamp access panel, replace the bulb and reassemble. Do not forget to unplug unit before replacing bulb!

The fuse is located underneath the power switch

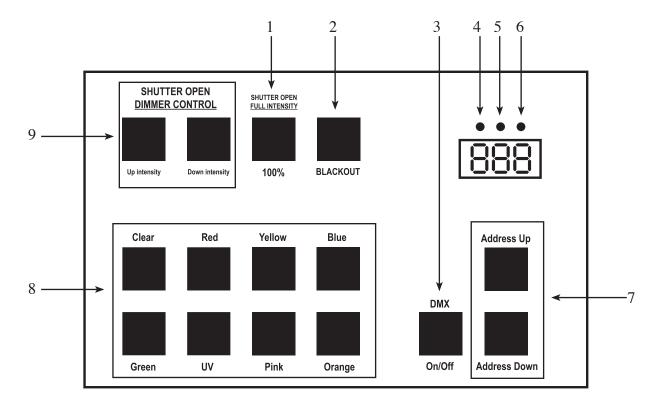

Controls & Functions:

- 1. Shutter Open (Full Intensity): This button will open the shutter and give 100% intensity.
- 2. Blackout: This button will cause the all functions to blackout.
- **3. DMX On/Off:** Switches DMX mode on and off. The fixture has 2 DMX channels, the first channel controls the Color Wheel, and the second channel controls the dimmer. Dimmer channel starts at shutter closed and goes to full intensity.
- **4. DMX Receive LED:** This LED will glow when the fixture is receiving a DMX signal.
- **5. Manual LED:** This LED will glow when the fixture is in manual mode.
- **6. DMX LED:** This LED will glow when you are in DMX mode.
- 7. DMX Address Up/Down: These buttons allow you to scroll to your desired DMX address.
- **8. Color Selections:** Choose from 7 different color spots plus white.
- **9. Dimmer Control:** Use these buttons to control the intensity. If you want 100% intenstiy press the Shutter Open button.

Customer Support:

American DJ® provides a toll free customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at www.americandj.com for any comments or suggestions.

Service Hours are Monday through Friday 9:00 a.m. to 6:00 p.m. Pacific Standard Time.

Voice: (800) 322-6337 Fax: (323) 582-2610

E-mail: support@americandj.com

To purchase parts online visit http://parts.americandj.com