

American DJ® FS-DMXT™ DMX TIMER REMOTE

Thank you for purchasing this American DJ® product. Please read the manual before using your new FS-DMXT control.

DMX Timer Remote: With the DMX Timer Remote you can operate the fog output automatically and turn either the Fog Storm 1200HD™ or 1700HD™ into a two channel DMX intelligent unit. The DMX Timer Remote must be connected to both the fog machine and a universal DMX-512 controller such as the Elation® DMX Operator™ or Show Designer.™

WHEN DMX MODE IS ACTIVE THE TIMER FUNCTION WILL NOT WORK.

1. Assign a DMX address to the Fog Storm 1200HD™ or 1700HD™ using the dipswitches on the side of the DMX Timer Remote.

NOTE: The dipswitches on the side of the DMX Timer Remote are for addressing the fog machine only.

2. Connect the male XLR cable of the DMX Timer Remote to the female input connection of the universal DMX-512 controller. Channel 1 controls fog duration and Channel 2 controls the interval time.
3. You can now daisy chain other DMX intelligent lights. Start with the female input connector on the front of the DMX Timer Remote.

NOTE: The DMX Timer Remote must be the first unit connected to the universal DMX-512 controller.

Timer Function: The timer function allows haze to be emitted at designated intervals. The remote has three (3) L.E.D.s that indicate different functions.

WHEN DMX MODE IS ACTIVE THE TIMER FUNCTION WILL NOT WORK.

- The RED L.E.D. located to the left will indicate the timer and controller is turned on and is activated.
- The GREEN L.E.D. will indicate fog output is available and ready.
- The RED L.E.D. located to the right is for manual fogging, wait for the GREEN L.E.D. to light up, then press the button.

The remote also contains two rotary knobs.

- The Duration knob serves two functions 1) Turns the timer on and off. 2) Sets the timers duration (Length of fog output).
- The interval knob sets the amount of time in between fog output from 30 seconds to 10 minutes. Turning these knobs in a clockwise direction will increase their values, turning them in a counter-clockwise direction will decrease their values.

Caution: Before removing or replacing the remote control unit disconnect the power supply.

Caution! No user serviceable parts inside do not attempt repairs. In the event your timer remote should fail, contact AmericanDJ®.

Customer Support: American DJ® provides a toll free customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at www.americandj.com for any comments or suggestions. Service Hours are Monday through Friday 9:00 a.m. to 5:00 p.m. Pacific Standard Time.

Voice: (800) 322-6337 Fax: (323) 582-2610 E-mail: support@americandj.com

The FS-DMXT™ carries a 1 year (365 days) limited warranty. Please fill out the enclosed warranty card to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. If the remote is under warranty you must provide a copy of your proof of purchase invoice. Please contact American DJ® customer support for a R.A. number.

DMX TRAITS:

CHANNEL 1: DURATION

VALUE	TIME	VALUE	TIME
0 - 15	FOG OFF	135 - 139	6 Secs.
16 - 31	CONSTANT FOG	140 - 144	6.2 Secs.
32 - 34	0.5 Secs.	145 - 149	6.5 Secs.
35 - 39	0.7 Secs.	150 - 154	7 Secs.
40 - 44	1 Secs.	155 - 159	7.2 Secs.
45 - 49	1.5 Secs.	160 - 164	7.6 Secs.
50 - 54	1.6 Secs.	165 - 169	7.8 Secs.
55 - 59	1.8 Secs.	170 - 174	8 Secs.
60 - 64	2 Secs.	175 - 179	8.4 Secs.
65 - 69	2.3 Secs.	180 - 184	8.6 Secs.
70 - 74	2.5 Secs.	185 - 189	8.8 Secs.
75 - 79	2.8 Secs.	190 - 194	9 Secs.
80 - 84	3 Secs.	195 - 199	9.5 Secs.
85 - 89	3.3 Secs.	200 - 204	9.8 Secs.
90 - 94	3.7 Secs.	205 - 209	10 Secs.
95 - 99	4 Secs.	210 - 214	10.2 Secs.
100 - 104	4.2 Secs.	215 - 219	10.5 Secs.
105 - 109	4.4 Secs.	220 - 224	10.8 Secs.
110 - 114	4.8 Secs.	225 - 229	11 Secs.
115 - 119	5 Secs.	230 - 234	11.3 Secs.
120 - 124	5.2 Secs.	235 - 239	11.5 Secs.
125 - 129	5.5 Secs.	240 - 244	11.8 Secs.
125 - 129	5.5 Secs.	245 - 249	12 Secs.
130 - 134	5.7 Secs.	250 - 254	12.5 Secs.
		255	12.7 Secs.

DMX TRAITS:

CHANNEL 2: INTERVAL

VALUE	TIME	VALUE	TIME
0 - 15	9 Secs.	128 - 143	110 - 114 Secs.
16 - 31	10 Secs.	144 - 159	130 - 133 Secs.
32 - 47	20 - 23 Secs.	160 - 175	150 - 154 Secs.
48 - 63	33 - 36 Secs.	176 - 191	170 - 176 Secs.
64 - 79	46 - 49 Secs.	192 - 207	193 - 200 Secs.
80 - 95	60 - 63 Secs.	208 - 223	213 - 220 Secs.
96 - 111	75 - 78 Secs.	224 - 239	233 - 248 Secs.
112 - 127	92 - 96 Secs.	240 - 255	268 - 278 Secs.