

American DJ®

POCKET SCAN



User Instructions

Pocket Scan™

Introduction

General instructions: To optimize the performance of this product, please read these operating instructions carefully to familiarize yourself with the basic operations of this unit. These instructions contain important safety information regarding the use and maintenance of this unit. Please keep this manual with the unit, for future reference.

Unpacking: Thank you for purchasing the Pocket Scan™ by American DJ®. Every Pocket Scan™ has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your fixture for any damage and be sure all accessories necessary to operate the unit has arrived intact. In the case damage has been found or parts are missing, please contact our toll free customer support number for further instructions. Do not return this unit to your dealer without first contacting customer support.

Introduction: The Pocket Scan™ is part of American DJ's continuing pursuit for creating high quality affordable intelligent fixtures. The Pocket Scan™ is our most compact full featured scanner ever. The Pocket Scan™ is a DMX scanner with a built-in 4.9mW diode laser. Both the laser and the lamp can be operated at the same time for truly amazing effects. This unit is light weight and compact which makes it a great piece for mobile DJ's and clubs. For best results use this unit with a fog machine to enhance the output of the beams and laser.

Customer Support: American DJ® provides a toll free customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at www.americandj.com for any comments or suggestions. Service Hours are Monday through Friday 9:00 a.m. to 5:00 p.m. Pacific Standard Time.

Voice: (800) 322-6337

Fax: (323) 582-2610

E-mail: support@americandj.com

To purchase parts online visit <http://parts.americandj.com>

Caution! There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, doing so will void your manufactures warranty. In the unlikely event your unit may require service please contact American DJ®.

©American DJ Supply® - www.americandj.com - Pocket Scan™ Instruction Manual Page 2

Quick Start Stand Alone Mode

Connect all your units together via the XLR connector. You can connect up to 16 units together in Master/Slave mode. The master unit will run the slaves to the masters built in programs and internal microphone. Plug in all units. When the Pocket Scan™ is first turned on, it will run through an internal self test where it moves all motors to their zero position. After the self test the units will react to sound, and chase to the several built in programs.

- Scanner and Laser in one effect
- 4.9mW diode laser
- 15 colors plus white
- Split colors
- 13 gobos plus spot
- Separate color and gobo wheels
- High Speed Shutter with variable Speed
- 170 degree pan / 110 degree tilt
- Full Micro-stepping, with 4 stepper motors.
- Built in Microphone
- Auto switch to Stand-Alone (Master/Slave) operation when DMX signal is disconnected
- Run up to 16 heads without controller
- DMX-512 protocol
- Full Focusing
- Fan cooled
- Uses 4 DMX Channels
- Digital DMX display

The Pocket Scan™ carries a one year (365 days) limited warranty. Please fill out the enclosed warranty card to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. If the unit is under warranty you must provide a copy of your proof of purchase invoice. Please contact American DJ® customer support for a R.A. number.



CAUTION IMPORTANT! When installing this projector, make sure that it is mounted in a manner that prevents the audience from looking directly into the beam, and the beam from striking the audience.

Safety Issue: This unit may blow a fuse if the maximum allotted load of 2 amps is reached. If the fuse needs replacement, please see the fuse replacement guidelines on page 13.

- To reduce the risk of electrical shock or fire, do not expose this unit rain or moisture
- Do not spill water or other liquids into or on to your unit.
- Be sure that the local power outlet match that of the required voltage for your unit.
- Do not attempt to operate this unit if the power cord has been frayed or broken. Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- Disconnect from main power before making any type of connection.
- Do not remove the cover under any conditions. There are no user serviceable parts inside.
- Never operate this unit when it's cover is removed.
- Never plug this unit in to a dimmer pack
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Do not attempt to operate this unit, if it becomes damaged.
- This unit is intended for indoor use only, use of this product outdoors voids all warranties.
- During long periods of non-use, disconnect the unit's main power.
- Always mount this unit in safe and stable matter.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them,

- paying particular attention to the point they exit from the unit.
- Cleaning -The fixture should be cleaned only as recommended by the manufacturer. See page 14 for cleaning details.
 - Heat -The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
 - The fixture should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged.
 - B. Objects have fallen, or liquid has been spilled into the appliance.
 - C. The appliance has been exposed to rain or water.
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance.

NON-INTERLOCKED HOUSING WARNING

The Pocket Scan™ contains high power laser devices internally. **Do not** open the laser housing, due to the potential exposure to unsafe levels of laser radiation. The laser power levels, if the unit is opened, can cause instant blindness, skin burns and fires.

STOP AND READ ALL LASER SAFETY DATA OPERATION INSTRUCTIONS AND LASER SAFETY

The light source emitted from this product can potentially cause eye injury if not set up and used properly. The light source emitted from a laser is very different from any other light sources with which you may be aware of. Laser light is thousands of times more concentrated than any light from any other kind of light source. This concentration of light can cause instant eye injuries, primarily by burning the retina (the back of your eyeball containing cells that are sensitive to light). Even if you cannot feel “heat” from a laser beam, it can still potentially injure or blind you or your audience. Even very small amounts of laser beam light are potentially hazardous even at long distances. Laser eye injuries can be sustained faster than you can blink.

Do not think that because this laser splits the laser beam into hundreds of beams and that the laser beam is scanned out in high speed, that an individual laser beam is safe for eye exposure. This laser uses dozens of milliwatts of laser power (Class 3B levels internally) before it splits into multiple beams (Class 3R levels). Many of the individual beams are potentially hazardous to the eyes.

Do not think that because the laser light is moving, it is safe. This is not true. Nor, do the laser beams always move. Since eye injuries can occur instantly, it is critical to prevent even the smallest possibility of any direct eye exposure. In the laser safety regulation, it is not legal to aim Class 3R lasers in areas which people can get exposed. This is true even if it is aimed below people’s faces, such as on a dance floor.

Do not operate the laser without first reading and understanding all safety and technical data in this manual.

Always set up and install all laser effects so that all laser light is at least 3 meters (9.8 feet) above the floor on which people can stand.

After setting up, and before public use, test laser to ensure proper function. Do not use if any defect is detected. Do not use if laser emits only one or two laser beams rather than dozens/hundreds, as this could indicate damage to the diffraction grating optic, and could allow emission of higher laser levels above Class 3R.

Do not point lasers at people or animals. Never look into the laser aperture or laser beams.

Do not point lasers in areas in which people can potentially get exposed, such as uncontrolled balconies, etc.

Do not point lasers at highly reflective surfaces, such as windows, mirrors and shiny metal. Even laser reflections can be hazardous.

Never point a laser at aircraft, this is a federal offense.

Never point un-terminated laser beams into the sky.

Do not expose the output optic (aperture) to cleaning chemicals.

Do not use laser if the laser appears to be emitting only one or two beams.

Do not use the laser if the housing is damaged, the housing is open, or if the optics appear damaged in any way.

Never open the laser housing. The high laser power levels inside of the protective housing can start fires, burn skin and will cause instant eye injury.

Never leave this device running unattended.

The operation of a class 3R laser show is only allowed if the show is controlled by a skilled and well- trained operator, familiar with the data included in this manual.

The legal requirements for using laser entertainment products vary from country to country. The user is responsible for the legal requirements at the location/country of use.

Always use proper lighting safety cables when hanging lights and effects overhead.




This Laser product complies with the CDRH/BRH radiation performance standards. 21 CFR Subchapter J.

"DANGER -Laser radiation when open. AVOID DIRECT EYE EXPOSURE." For Class IIIa accessible laser radiation with an irradiance greater than $25 \times 10^{-3} \text{ Wcm}^{-2}$

AVOID EXPOSURE

Laser light is emitted from this aperture

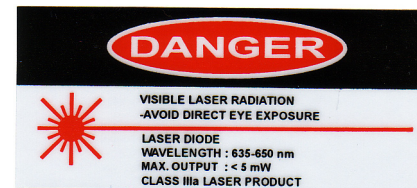

Power Supply: Before plugging your unit in, be sure the source voltage in your area matches the required voltage for your American DJ® Pocket Scan.™ The American DJ® Pocket Scan™ is available in a 120v and 220v version. Because line voltage may vary from venue to venue, you should be sure your unit voltages matches the wall outlet voltage before attempting to operate you fixture.

DMX-512: DMX is short for Digital Multiplex. This is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA “IN” and DATA “OUT” XLR terminals located on all DMX fixtures (most controllers only have a DATA “OUT” terminal).

DMX Linking: DMX is a language allowing all makes and models of different manufactures to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

Data Cable (DMX Cable) Requirements (For DMX and Master/Slave Operation): The Pocket Scan™ can be controlled via DMX-512 protocol. The American DJ® Pocket Scan™ is a four channel DMX unit. The DMX address is set on the front panel of the Pocket Scan™. Your unit and your DMX controller require a standard 3-pin XLR connector for data input and data output (Figure 1). If you are making your own cables, be sure to use standard two conductor shielded cable (This cable may be purchased at almost all pro sound and lighting stores). Your cables should be made with a male and female XLR connector on either end of the cable. Also remember that DMX cable must be daisy chained and can not be split.



Figure 1

Notice: Be sure to follow figures two and three when making your own cables. Do not use the ground lug on the XLR connector. Do not connect the cable’s shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR’s outer casing. Grounding the shield could cause a short circuit and erratic behavior.

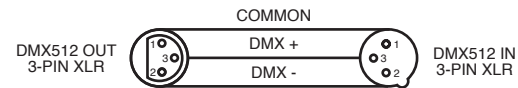


Figure 2

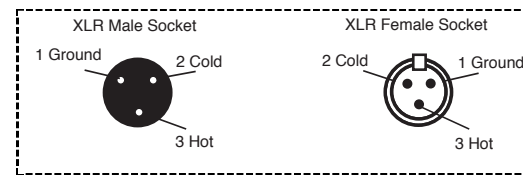


Figure 3

XLR Pin Configuration	
Pin 1 =	Ground
Pin 2 =	Data Compliment (negative)
Pin 3 =	Data True (positive)

Special Note: Line Termination. When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behavior. A terminator is a 90-120 ohm 1/4 watt resistor which is connected between pins 2 and 3 of a male XLR connector (DATA + and DATA -). This unit is inserted in the female XLR connector of the last unit in your daisy chain to terminate the line. Using a cable terminator (ADJ part number Z-DMX/T) will decrease the possibilities of erratic behavior.



Termination reduces signal errors and avoids signal transmission problems and interference. It is always advisable to connect a DMX terminal, (Resistance 120 Ohm 1/4 W) between PIN 2 (DMX-) and PIN 3 (DMX +) of the last fixture.

Figure 4

5-Pin XLR DMX Connectors. Some manufactures use 5-pin XLR connectors for DATA transmission in place of 3-pin. 5-pin XLR fixtures may be implemented in a 3-pin XLR DMX line. When inserting standard 5-pin XLR connectors in to a 3-pin line a cable adaptor must be used, these adaptors are readily available at most electric stores. The chart below details a proper cable conversion.

3-Pin XLR to 5-Pin XLR Conversion		
Conductor	3-Pin XLR Female (Out)	5-Pin XLR Male (In)
Ground/Shield	Pin 1	Pin 1
Data Compliment (- signal)	Pin 2	Pin 2
Data True (+ signal)	Pin 3	Pin 3
Not Used		Do Not Use
Not Used		Do Not Use

CAUTION IMPORTANT! When installing this projector, make sure that it is mounted in a manner that prevents the audience from looking directly into the beam, and the beam from striking the audience.

Operating Modes:

You can use the Pocket Scan™ in three ways:

- Stand alone mode - The unit will react to sound, chasing through the several built in programs. You can also use the optional Pocket Scan/RF Remote Control to set blackout, strobe or slow scan mode.
- Master/Slave mode - You can daisy chain up to 16 units together to get a synchronized light show that will react to sound chasing through several built in programs.
- DMX control mode - This function will allow you to control each individual fixtures traits with a standard DMX 512 controller such as the American DJ Show Designer.™

Stand Alone Mode:


The Pocket Scan™ has a sophisticated built-in light show™ that will run to sound when there is no DMX signal present. Plug the fixture in and it will chase through its programs via sound. You can also use the optional remote to blackout, strobe, or slow scan the units.

Master-Slave Operation:

This function will allow you to link up to 16 units together to run in a Master-Slave mode. In Master-Slave operation one unit will act as the controlling unit and the others will react to the controlling units built-in programs. Any unit can act as a Master or as a Slave however, units must be programmed to act as “Masters” or as “Slaves.” There are two Master-Slave modes, Fast and Slow.

Master-Slave Connections:

1. Daisy chain your units via the XLR connector on the top of the unit. Use standard XLR microphone cables to link your units together. Remember that the Male XLR connector is the input and the Female XLR connector is the output. The first unit in the chain (master) will use the female XLR connector only. The last unit in the chain will use the male XLR connector only.

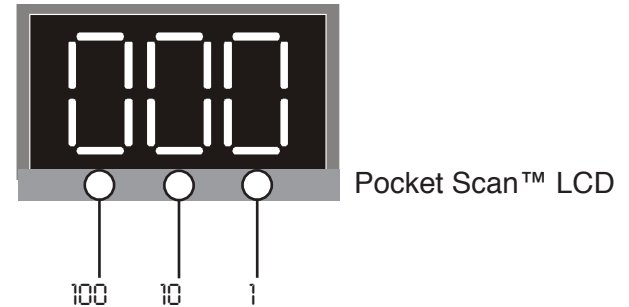

Setting Units as Masters or Slaves:

This section will detail the procedure for switching units between Masters and Slaves. Each unit can function as a “Master” or as a “Slave” To adjust the settings:

1. Be sure the main power switch is set to the “OFF” position.
2. With the power off press and hold down the LCD “100-Key,” and turn the power on.
3. When the power is applied, the LCD will display the current DMX address and then display the current Master-Slave mode. Master-Slave modes will be displayed as followed:
 - “5-F” will equal Master/Send Fast Mode
 - “5-S” will equal Master/Send Slow Mode
 - “REC” will equal Slave/Recieve Mode
4. To toggle between Master and Slave mode repeat steps one and two.

Adjusting the Speed of the internal Program:

This section will detail the procedure for changing the Master Unit operating mode. The master mode may be changed to operate in Fast or Slow modes.

1. Be sure your unit is in Master mode, see Setting Units as Masters or as Slaves, above.
2. Be sure the main power switch is set to the “OFF” position.
3. With the power off press and hold down the LCD “10-Key,” and turn the power on.
4. When the power is applied, the LCD will display the current DMX address and then display the current Master-Slave mode. Master-Slave modes will be displayed as followed:

Pocket Scan™

Operation Cont.

“S-F” will equal Master/Send Fast Mode

“S-S” will equal Master/Send Slow Mode


4. To toggle between Fast and Slow modes repeat steps one and two.

Note: The remote control only operates in Stand-Alone or Master-Slave modes. If the remote is used while the units are in DMX mode, the remote will not function. If the unit does not receive an active DMX signal, the unit will automatically react to sound in the Master/Slave mode.

DMX Mode:

Operating through a DMX controller give the user the freedom to create their own programs tailored to their own individual needs. This function also allows you to use your fixtures as spot lights.

1. This function will allow you to control each individual fixture's traits with a standard DMX 512 controller such as the American DJ® Show Designer™ or the American DJ® DMX Operator.™
2. The Pocket Scan™ uses seven DMX channels to operate; Channel 1 is mirror pan, channel 2 is mirror tilt, channel 3 is color, channel 4 is gobo, channel 5 is shutter, channel 6 is speed, and channel 7 controls the laser.
3. To run your fixture in DMX mode, plug in the fixture via the XLR connections to any standard DMX controller. - Follow the set-up specifications that come with your DMX controller.

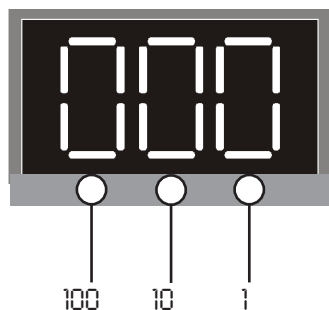

Pocket Scan™ LCD

Pocket Scan™

Operation Cont.

Adjusting The DMX address:

The DMX address is adjusted by using the “1, 10, and 100” keys directly below the LCD. Each press of a button will increase the selected value of one. Please note that each tap of the keys will only increase the displayed value, you may decrease the value.

Pocket Scan™

Reset Function

This function will reset all functions to their default setting. You may reset the fixture by turning the unit on and off. If your units are being controlled through a DMX controller, you may also reset the fixtures by adjusting DMX channel seven to a value of 240-250.

This function will automatically shut off the lamp if the shutter is closed for 10 - 15 minute in DMX mode.

Pocket Scan™

Cleaning

Due to fog residue, smoke, and dust cleaning the internal and external optical lenses must be carried out periodically to optimize light output.

1. Use normal glass cleaner and a soft cloth to wipe down the outside casing.
2. Use a brush to wipe down the fan grill.
3. Clean the external optics with glass cleaner and a soft cloth every 20 days.
4. Clean the internal optics with glass cleaner and a soft cloth every 30-60 days.
5. Always be sure to dry all parts completely before plugging the unit back in.

Cleaning frequency depends on the environment in which the fixture operates (i.e. smoke, fog residue, dust, dew).

Pocket Scan™

Fuse Replacement

Fuse Replacement: Caution! Always disconnect the main power before attempting to replace the fuse. Remember always replace with the same type lamp and fuse.

1. With a flat screwdriver wedge the fuse holder out of the its housing
2. Remove the old fuse from the holder and replace with the exact same type fuse.
3. Replace the fuse holder in to the fuse holder housing.
4. Reconnect main power.

Pocket Scan™

Lamp Replacement

Lamp Replacement: Caution! Never open the unit when in use. Always disconnect the main power before attempting to replace the lamp. Remember always replace with the same type lamp and fuse.

1. Be sure to follow the proper procedures when handling halogen bulbs.
2. Lamp replacement has been made simple by incorporating the use of a removable lamp cover and a thumb screw.
3. Loosen the thumb screw on front lower cover.
4. Remove the lamp cover.
5. Remove and replace the bulb.
6. Reassemble.

Pocket Scan™


Focusing

1. To focus the Pocket Scan™ it is best to first turn down the music so the mirror stops moving.
2. Loosen the thumb screw on the front of the unit that hold the lens in place.
3. Adjust the focus by moving the lens up and down, until you reach proper focus.
4. Tighten the thumb screws after you achieve your desired focus.

Pocket Scan™

DMX Settings


DMX CHANNEL									
DMX512 LEVEL RANGE 0 - 255	1	2	3	4	5	6	7		
	PAN	TILT	COLOR	GOBO	SHUTTER	SPEED	LASER		
255			AUDIO MODE	AUDIO MODE	OPEN	AUDIO MODE	UNIT RESET		
200			ROTATION CCW	ROTATION CCW	FAST STROBE	FAST	OPEN		
99			ROTATION CW	ROTATION CW	↑	↑	↑		
95			WHITE	WHITE	GOBO 14	GOBO 13	GOBO 12	FAST STROBE	
89			ORANGE 306	ORANGE 306	GOBO 11	GOBO 10	GOBO 9	↑	
85			YELLOW 601	YELLOW 601	GOBO 8	GOBO 7	GOBO 6	SLOW	
79			GREEN 204	GREEN 204	GOBO 5	GOBO 4	GOBO 3	RELATIVE	
75			UV108	UV108	GOBO 2	GOBO 1	CLOSED	↑	
69			MAGENTA 501	MAGENTA 501	TORQUES 208	PINK 310	YELLOW 603	BLUE 101	SLOW STROBE
65			MAGENTA 507	MAGENTA 507	ORANGE 302	GREEN 201	BLACKOUT		CLOSED
59			CYAN 104	CYAN 104					
55			RED304	RED304					
49									
45									
39									
35									
29									
25									
19									
15									
9									
5									
0									

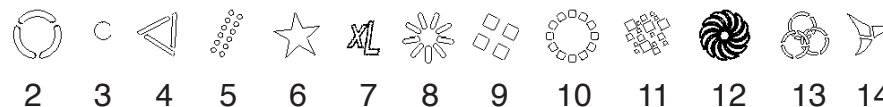

Gobo layout. Note gobo one is Large Spot - Open Shutter.

Pocket Scan™

Halogen Lamp Warning

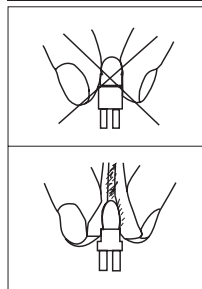

This fixture is fitted with halogen lamps which are highly susceptible to damage if improperly handled. Never touch the lamps with your bare fingers as the oil from your hands will shorten lamp life. Also, never move the fixture until the lamps have had ample time to cool. Remember, lamps are not covered under warranty conditions.

Listed below are a few common problems the user may encounter, with solutions.

No light from the unit;

1. Check if the 'Power On' (red) LED is lit and the fan is running. If not, there is no main supply.
2. Check the fuse in the back panel.
3. Check if lamp is lit. The user should be able to see some light escape through the fan. If power is present but the lamp is not lit, lamp may need to be replaced.

Note: The unit has been designed to shut the lamp down after 60 seconds of inactivity. This is a way of extending lamp life, be assured this is not a problem with the fixture.

Unit not responding to DMX;

1. If the RED LED in the LCD is flashing, the unit is definitely receiving DMX
2. Check for proper DMX addressing.
3. If the DMX LED is not lit, check that the DMX cables are connected properly and are wired correctly (pin 3 is 'hot'; on some other DMX devices pin 2 may be 'hot'). Also, check that all cables are connected to the right connectors; it does matter which way the inputs and outputs are connected.
4. If it is a bad connection, the RED LED may flash when cables are wiggled (but remember it may also be the unit sensing audio!)
5. If DMX connectors are fairly short, ordinary microphone cables may be used. For longer runs, this may cause

data transmission problems (which will show up as random or incorrect movements) for best result, use proper balanced data transmission cable.

Unit does not respond to sound;

1. Check to see if the unit is receiving DMX (the RED LED should be off).
2. Quiet or high pitched sounds will not activate the unit.

Unit blacks out in stand alone mode;

1. Some of the units' built-in patterns include special effects such as blackout sweeps. When connecting two units up, only one is ever blackened out at once, and the blackout 'swaps' between the units.

If problems are not resolved; Contact your American DJ® dealer for service.

Model: Pocket Scan™

SPECIFICATIONS:

Working Position:	Any safe working position
Voltage:	120V
Lamp:	ZB-JCR 12V/100W
Weight:	10 lbs.
Dimensions:	11.5" x 4.75" x 6"
Fuse:	2A GMA
Colors:	15 plus white
Gobos:	13 plus spot

The Pocket Scan™ comes with a 1 year limited warranty. We recommend filling out the warranty registration card that came with your fixture to validate your warranty. You may also register your product on-line at www.americandj.com.

American DJ®

American DJ World Headquarters:

6122 S. Eastern Ave. Los Angeles, CA 90040 USA

Tel: 323-582-2650 / Fax: 323-725-6100

Web: www.americandj.com / E-mail: info@americandj.com