




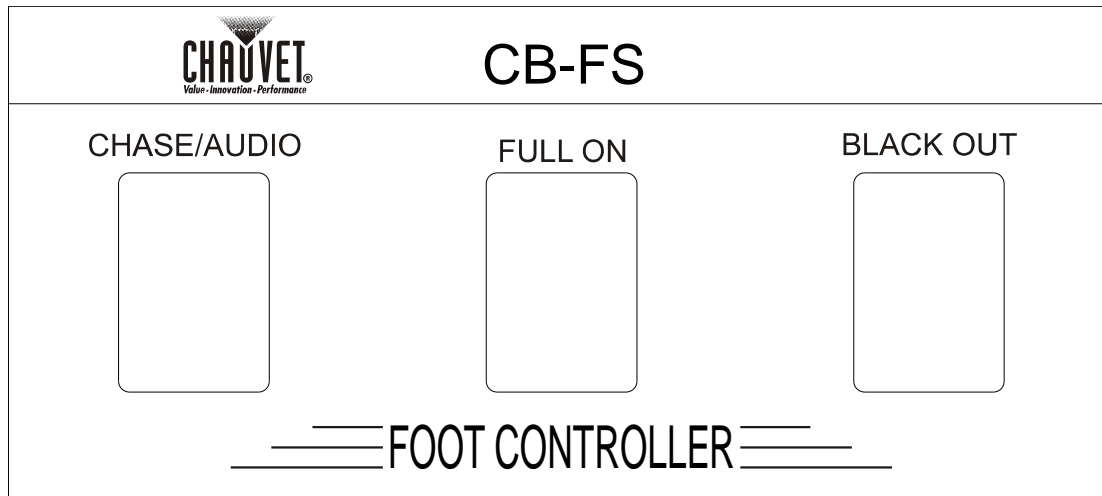
# CB-FS

## Color Bank™ Foot Controller

### Quick Overview

The CB-FS Footswitch controller provides pedal control for the CH-158 and CH-175 Color Bank™ 8 & 12 Wash lights.

PEDAL	FUNCTION	CB-FS FOOTSWITCH
AUDIO/CHASE	AUDIO: Activates <b>Audio</b> mode CHASE: Activate <b>Chase Speed</b> mode	
FULL ON	All lights will be turned on.	
BLACKOUT	All lights will be turned off.	



If you have misplaced the User's Manual for the fixture you are attempting to control, you can locate it by visiting [WWW.CHAUVETLIGHTING.COM](http://WWW.CHAUVETLIGHTING.COM)