


Quick Reference Guide

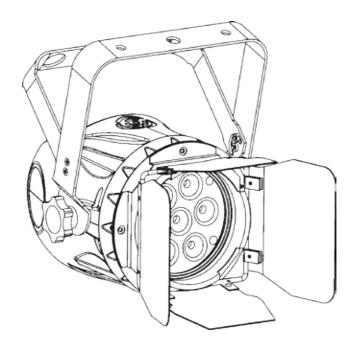



About this Guide

The COLORdashTM Par-Tri Quick Reference Guide (QRG) only contains the product's connection and mounting information as well as the menu options and the DMX values.

Disclaimer

This Quick Reference Guide DOES NOT replace the product's User Manual, which you can download from www.chauvetlighting.com.

Read ALL the disclaimers and safety notes in this document as well as those in the product's user manual before installing, operating, or maintaining this product.

Safety Notes

- DO NOT open this fixture unless instructed. It contains no userserviceable parts.
- · DO NOT look at the light source when this fixture is on.
- DO NOT touch the fixture when it is operating because it may be hot.
- DO NOT cover the ventilation slots when the fixture is operating to avoid internal overheating.
- DO NOT install or operate this fixture where there is less than 50 cm to the nearest surface to allow adequate ventilation around it.
- DO NOT leave any flammable material within 50 cm from this fixture while operating or connected to the power outlet to minimize the risk of fire.
- · DO NOT mount this fixture overhead without using a safety cable.
- DO NOT operate this fixture outdoors or in any location where dust, excessive heat, water, or humidity may affect it.
- DO NOT operate this fixture if you see damage on the housing, lenses, or cables. In any of these cases, have the damaged parts replaced by an authorized technician at once.
- DO NOT connect this fixture to a dimmer or rheostat.
- ONLY connect this fixture to a grounded and protected circuit.

What is Included

- · One COLORdashTM Par-Tri (with barn doors pre-installed)
- One power input cable with plug
- One power linking cable (6.6 ft/2 m)
- · One set of replacement screws for barn doors removal
- Warranty Card
- · Quick Reference Guide

Features

- 3, 4, or 9-channel tri color LED wash fixture with ID addressing
- Operating modes:

3-channel: RGB control 4-channel: RGB, dimmer

9-channel: RGB, dimmer, color macro, strobe, auto/custom,

auto speed, ID addressing

- RGB color mixing with or without DMX control
- · Automatic (pre-set) and custom (editable) programs
- · Recall auto and custom programs via DMX
- · Pre-programmed color macros
- Color temperature presets (3,200~8,500 K)
- Master/Slave operation
- Transfer custom programs between fixtures
- · High-power, 3 W tri-color LEDs
- IEC power connectors
- Power linking: max 20 units @ 120 V
- · Includes 6.6 ft (2 m) power extension cable
- 3-pin DMX input and output connectors
- · LCD display with password protection
- Double-bracketed yoke for overhead or floor mounting
- Adjustable barn doors to direct output (includes gel frame)
- Additional threaded hole on rear for mounting (size M 10)

Options

• 33 ft (10 m) power extension cable (EXT-2)

AC Power

This product has an auto-ranging power supply that can work with an input voltage range of 100~240 VAC, 50/60 Hz.

Power Linking


You can link up to twenty (20) COLORdashTM Par-Tri units to this fixture at 120 VAC. Make sure to never exceed this number when linking this fixture.

Fuse Replacement

- 1. With a Phillips #2 head screwdriver, unscrew the fuse holder cap from its housing.
- 2. Remove the blown fuse from the fuse holder cap and replace it with a good fuse of the exact same type and rating.
- 3. Screw the fuse holder cap back in its place and reconnect power.

Mounting

Before mounting this product, read the Safety Notes at the beginning of this guide and in the product's user manual. Then, follow the mounting procedure indicated in the Setup chapter of the User Manual.

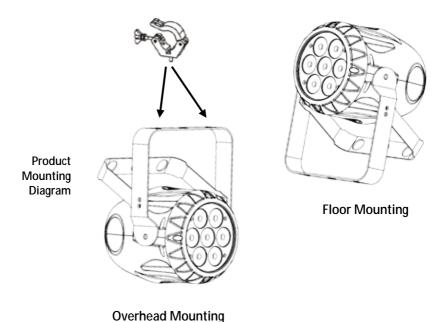

Control Panel Description

В	utton	Function		
<n< th=""><th>IENU></th><th colspan="3">Exits from the current menu or function</th></n<>	IENU>	Exits from the current menu or function		
< E l	NTER>	Enables the currently displayed menu or sets the currently selected value into the selected function		
<	(UP>	Navigates upwards through the menu list and increases the numeric value when in a function		
<down></down>		Navigates downwards through the menu list and decreases the numeric value when in a function		

Programming

For details on how to program this product, please refer to the product's user manual.

Password After being prompted to enter the password, press:

<UP>, <DOWN>, <UP>, <DOWN>, and <ENTER>

Menu Options

Main Level	Level 2 nd Level		3 rd Level		Description	
	Red		000~255		Combine red, green, and blue to generate a custom color.	
STATIC	Green					
STATIC	Blue					
	Stro	obe	00~20		Select a strobe frequency (0~20 Hz)	
AUTO	Auto 1~10		0~255		Choose from 10 automatic programs	
	Custom 1~10				Choose from 10 customizable programs	
ADDRESS	001~	-512			Sets the DMX starting address	
RUN	DMX/Slave				DMX = Receives signals from DMX controller Slave = Receives signals from master fixture	
	STA	GE1	N/A		9-channel (D-RGB-CM-S-A/C-A/S-ID)	
PERSON	ARC1				3-channel (RGB)	
	ARC1 + D				4-channel (RGB-D)	
ID	0~66				Assigns the ID address to a fixture	
	HIGH		- N/A		Selects fan speed	
FAN	NORMAL					
FAN	AUTO					
	LOW					
	сиѕтом	SCENE (01~30)	RED		Combine red, green, and blue to generate a custom color (0~100%)	
			GREEN	000~255		
EDIT			BLUE			
LDII	(1~10)		STROBE	00~20	Selects the strobe frequency (0~20 Hz)	
			TIME	000~255	Defines the step duration (0~100%)	
			FADE	000~233	Defines the fade duration (0~100%)	
	ID ON/OFF		ON/OFF		Turns ID addressing on or off	
	Reset to Factory?		Press <enter></enter> twice		Defaults the fixture to factory settings	
SETTINGS	Upload Custom?				Uploads custom programs to other fixtures	
	COLOR		OFF		RGB max = max output / unbalanced white	
			UC		RGB max = matches older fixtures' output	
PASSWORD ON/OFF		N/A		Turns the password on or off Password automatically activates after 30 s of control panel inactivity		

DMX Values

STAGE 1

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ර 255	0~100%
	Red	000 (055	0~100%
2	Step Time	000 Ó 255	Only if playing a custom program
	Green	000 Ó 255	0~100%
3	Fade Time		Only if playing a custom program
4	Blue	000 Ó 255	0~100%
5	Color Macro + White Balance	000 o 010 011 o 035 036 o 060 061 o 085 086 o 110 111 o 135 136 o 160 161 o 185 186 o 210 211 o 215 216 o 220 221 o 225 226 o 230 231 o 235 236 o 240 241 o 245 246 o 250 251 o 255	No Function R: 100% G: Up B: 0% R: Down G: 100% B: 0% R: 0% G: 100% B: 100% R: 0% G: Down B: 100% R: Up G: 0% B: 100% R: 100% G: Up B: Up R: Down G: Down B: 100% White 1: 3,200 K White 3: 4,200 K White 4: 4,900 K White 5: 5,600 K White 7: 6,500 K White 8: 7,200 K White 8: 7,200 K White 9: 8,500 K
6	Strobe	000 Ó 010 011 Ó 255	No Function 0~20 Hz
7	Auto + Custom Programs	000 6 020 021 6 030 031 6 040 041 6 050 051 6 060 061 6 070 071 6 080 081 6 090 091 6 100 101 6 110 111 6 120 121 6 130 131 6 140 141 6 150 161 6 170 171 6 180 181 6 190 191 6 200 201 6 210 221 6 255	No Function Auto 1 Auto 2 Auto 3 Auto 4 Auto 5 Auto 6 Auto 7 Auto 8 Auto 9 Auto 10 Custom 1 Custom 2 Custom 3 Custom 4 Custom 5 Custom 6 Custom 7 Custom 8 Custom 9 Custom 10 No function
8	Auto Speed	000 Ó 255	Only if playing an auto program

STAGE 1	
(Cont.)	

Channel	Function	Value	Setting	Value	Setting	Value	Setting
9	ID Addressing	020 6 029 030 6 039 040 6 049 050 6 059 060 6 069 070 6 079 080 6 089 090 6 099 100 6 109 110 6 119 120 6 129 130 6 139 140 6 159 160 6 169 170 6 179 180 6 189 190 6 199	All IDs ID 1 ID 2 ID 3 ID 4 ID 5 ID 6 ID 7 ID 8 ID 9 ID 10 ID 11 ID 12 ID 13 ID 14 ID 15 ID 16 ID 17 ID 18 ID 19 ID 19 ID 10 ID 17 ID 18 ID 19 ID 10 ID 10 ID 11 ID 12 ID 13 ID 14 ID 15 ID 16 ID 10 ID 10 I	212 213 214 215 216 217 218 219 220 221 222 223 224 225 226 227 228 229 230 231 232 233 233	ID 23 ID 24 ID 25 ID 26 ID 27 ID 28 ID 29 ID 30 ID 31 ID 32 ID 33 ID 34 ID 35 ID 36 ID 37 ID 38 ID 39 ID 40 ID 41 ID 41 ID 41 ID 43 ID 44 ID 45	235 236 237 238 239 240 241 242 243 244 245 246 247 248 249 250 251 252 253 254 255	ID 46 ID 47 ID 48 ID 49 ID 50 ID 51 ID 52 ID 53 ID 55 ID 56 ID 57 ID 58 ID 59 ID 60 ID 61 ID 62 ID 63 ID 64 ID 65 ID 66

ARC1

C	Channel Function		Value	Percent/Setting
	1	Red	000 Ó 255	0~100%
	2	Green	000 Ó 255	0~100%
	3	Blue	000 Ó 255	0~100%

ARC1 + D

Channel Function		Value	Percent/Setting
1	Dimmer	000 Ó 255	0~100%
2	Red 00		0~100%
3	Green	000 Ó 255	0~100%
4	Blue	000 Ó 255	0~100%

Contact Us

World Headquarters

CHAUVET®

General Information

Address: 5200 NW 108th Avenue Sunrise, FL 33351
Voice: (954) 929-1115
Fax: (954) 929-5560
Toll free: (800) 762-1084

Technical Support

Voice: (954) 929-1115 (Press 4)
Fax: (954) 756-8015
Email: tech@chauvetlighting.com

World Wide Web

www.chauvetpro.com

Technical Support

World Wide Web

United Kingdom and Ireland

Unit 1C

NG16 6NT

Brookhill Road Industrial Estate

uktech@chauvetlighting.com

Pinxton, Nottingham, UK

+44 (0)1773 511115

+44 (0)1773 511110

CHAUVET® Europe Ltd.

General Information

Address:

Voice: Fax:

Email:

www.chauvetlighting.co.uk

Outside the U.S., United Kingdom, or Ireland, contact your distributor of record. Follow their instructions to request support or to return a product. Visit our website for contact details.

COLORdashTM Par-Tri QRG – Rev. 03 © Copyright 2012 CHAUVET® All rights reserved. Printed in the P. R. C.

