

## Technical Specifications

Power	AC 120V 60Hz	AC 230~250V 50/60Hz
Fuse	20mm Glass 10A Fast Blow	20mm Glass 10A Fast Blow
Lamps	MSD 250W (2000hrs)	
Dimension	560mm x 250mm x 205mm / 22in x 9.8in x 8.1in	
Weight	17 kg / 37.4 lbs	13.5 kg / 29.7 lbs



# TRACKSCAN 250R

## DMX-606R

### User Guide

Please read these instructions carefully before use

User Information (Please complete for your records)

Data Purchased :    /    /    Serial No. :

Dealer Stamp :                    Model : TRACKSCAN DMX-606R

**World-wide Headquarters:**

**3000 North 29<sup>th</sup> Ct., Hollywood, Florida, USA, FL 33020**

**Tel: +1-954-929-1115 Fax: +1-954-929-5560**

**[www.ChauvetLighting.com](http://www.ChauvetLighting.com)**

## TABLE OF CONTENTS

1. Safety Instruction
2. Technical Specification
  - 2.1 Inserting / Exchanging rotating gobos
3. Lamp
  - 3.1 How to change the frequency 50Hz / 60Hz
4. How To Set The Unit
  - 4.1 Control Panel
  - 4.2 Main Function
5. How To Control The Unit
  - 5.1 Master/Slave Built-In Preprogrammed Function.
  - 5.2 Easy Controller
  - 5.3 Universal DMX Controller
  - 5.4 DMX512 Configuration
  - 5.5 DMX512 Connection
6. Troubleshooting
7. Fixture Cleaning

### **7. Fixture Cleaning**

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics.

- Clean with soft cloth using normal glass cleaning fluid.
- Always dry the parts carefully.
- Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days.

### EC Declaration of Conformity

We declare that our products (lighting equipments) comply with the following specification and bears CE mark in accordance with the provision of the Electromagnetic Compatibility (EMC) Directive 89/336/EEC.

EN55014-1: 1993, EN61000-3-2: 1995, EN61000-3-3:1995  
EN55014-2: 1997 CATEGORY II  
EN61000-4-2: 1995, EN61000-4-3: 1995, EN61000-4-4:1995  
EN61000-4-5: 1995, EN61000-4-6: 1995, EN61000-4-11: 1994

&

### Harmonized Standard

EN60598-1: 1993  
Safety of household and similar electrical appliances  
Part 1 : General requirements

Following the provisions of the Low Voltage Directive 73/23/EEC and 93/68/EEC.

### EC Declaration of Conformity

We declare that our products (remote controller) comply with the following specification and bears CE mark in accordance with the provision of the Electromagnetic Compatibility (EMC) Directive 89/336/EEC.

EN55015: 1993  
EN50082-1: 1997  
EN61000-3-2: 1995  
EN61000-3-3: 1995

## 1. Safety Instruction



WARNING

**Please read carefully the instruction, which includes important information about the installation, usage and maintenance.**

- Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet
- Unpack and check carefully there is no transportation damage before using the unit.
- Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.
- The unit is designed for use with the MSD 250W . Do not use any other type of lamp.
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.

- The unit is for indoor use only. Use only in a dry location.
- The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Disconnect main power before fuse/lamp replacement or servicing.
- Replace fuse/lamp only with the same type.
- Make sure there is no flammable materials close to the unit while operating as it is fire hazard.
- Maximum ambient temperature is TA: 40°C . Don't operate it at where the temperature is higher than this.
- Unit surface temperature may reach up to 85C. Don't touch the housing bare-hand during its operation, and allow about 15 minutes to cool down before replacing bulb or serving, as the unit could be very hot.
- In the event of serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- Don't connect the device to any dimmer pack.
- Do not touch any wire during operation as high voltage might be causing electric shock.

■

### Warning

- 3
- **To prevent or reduce the risk of electrical shock or fire, do not expose the unit to rain or moisture.**
  - Never touch bulb with bare fingers as it is very hot after using.
  - Hot lamp explosion hazard. Do not open the unit within five minutes after switching off.
  - Do not start on the unit without bulb enclosure or housing are damaged.
  - The housing, the lenses, or the ultraviolet filter must be replaced if they are visibly damaged.
  - Do not look directly at the light while the bulb is on.

### Caution

There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs yourself. In the unlikely event your unit may require service please contact your nearest dealer.

### Installation

The unit should be mounted via its screw holes on the bracket. Always ensure that the unit firmly fixed to avoid vibration and slipping while operating. Always ensure that the structure which you are attaching the unit is secure and is able to support a weight of 20kgs for each unit.

## 6. Troubleshooting

Following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

### A. The unit does not work, no light and the fan does not work

1. Check the connect power and main fuse.
2. Measure the mains voltage on the main connector.
3. Check the power on LED.

### B. Not responding to DMX controller

1. DMX LED should be on. If not, check DMX connectors, cables to see if link properly.
2. If the DMX LED is on and no response to the channel, check the address settings and DMX polarity.
3. If you have intermittent DMX signal problems, check the pins on connectors or on PCB of the unit or the previous one.
4. Try to use another DMX controller.
5. Check if the DMX cables run near or run alongside to high voltage cables that may cause damage or interference to DMX interface circuit.

### C. Some units don't respond to the easy controller

1. You may have a break in the DMX cabling. Check the LED for the response of the master/slave mode signal.
2. Wrong DMX address in the unit. Set the proper address.

### D. No response to the sound

1. Check the unit that is not receiving DMX signal.
2. Check the unit that is not set to display mode
3. Check microphone to see if it is good by tapping the microphone

### E. One of the channels is not working well


1. The stepper motor might be damaged or the cable connected to the PCB is broken.
2. The motor's drive IC on the PCB might be out of condition.

### F. The lamp is cutting out intermittently

1. The lamp is not working well. Check the main voltage either too high or too low.
2. Internal temperature may be too high. Check and if necessary replace the fan on the h

## 5.5 DMX512 Connection

The DMX512 is widely used in intelligent lighting control, with a maximum of 512 chan

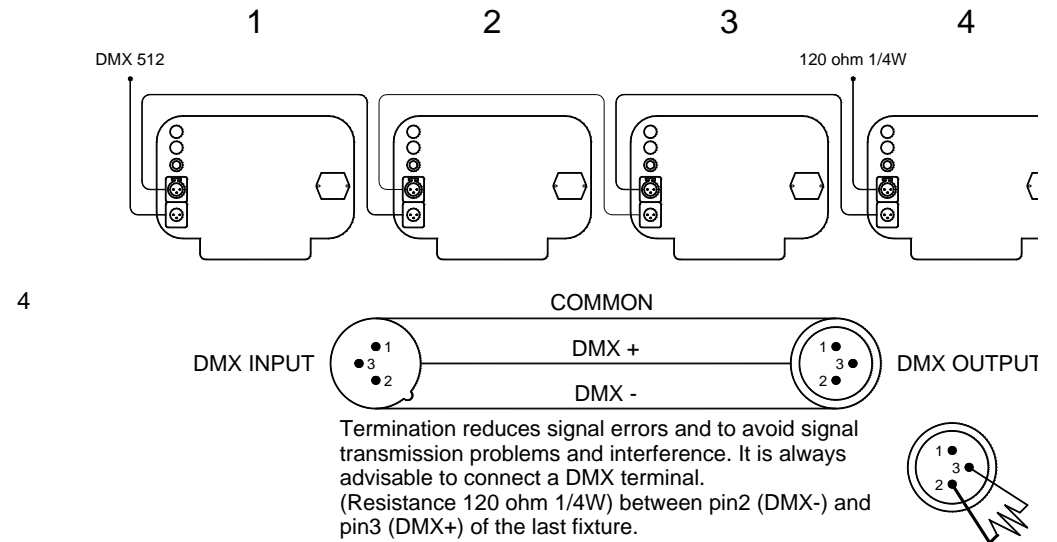

1. If you using a controller with 5 pins DMX output, you need to use a 5 to 3 pin adapter-cable.
2. At last unit, the DMX cable has to be terminated with a terminator. Solder a 120 ohm 1/4W resistor between pin 2(DMX-) and pin 3(DMX+) into a 3-pin XLR-plug and plug it in the DMX-output of the last unit.
3. Connect the unit together in a `daisy chain` by XLR plug from the output of the unit to the input of the next unit. The cable can not be branched or split to a `Y` cable. DMX512 is a very high-speed signal. Inadequate or damaged cables, soldered joints or corroded connectors can easily distort the signal and shut down the system.
4. The DMX output and input connectors are pass-through to maintain the DMX circuit, wh power is disconnected to the unit.
5. Each lighting unit needs to have an address set to receive the data sent by the controller. The address number is between 0-511 (usually 0 & 1 are equal to 1).
6. The end of the DMX512 system should be terminated to reduce signal errors.

7.3 pin XLR connectors are more popular than 5 pin XLR.

3 pin XLR: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+)

5 pin XLR: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+)

## 2. Technical Specification

### Power supply

- AC 120V~60Hz
- AC 230/240/250V~50/60Hz

### Lamp

- Discharge MSD 250W or NSD 250W GY 9.5

### Optical system

- Standard 13° focused beam angle.
- Focus can be adjusted by manual.

### Shutter

- Blackout, dimmer and strobe speed variable(1~12 flashes per second).

### Gobo wheel

- Independent gobo wheel with 7 gobos plus open.
- Gobo wheel rotates with variable speed and rainbow effect.

### Gobo rotation

- 7 metal gobos, rotating in both directions at different speeds.
- Outside diameter 27.8 mm, image diameter 18 mm.

### Color wheel

- Independent color wheel with 9 dichroic mirrors plus white.
- Color wheel rotates with variable speed and rainbow effect.

### Movement

- Pan : 180° in 0.5 second.
- Tilt : 70° in 0.3 second.

### DMX Channels

- Standard DMX512 signal addressing and can be controlled by any universal DMX controller.

Channel 1 = Shutter

Channel 2 = Gobos

Channel 3 = Gobo rotation

Channel 4 = Colors


Channel 5 = Pan motion

Channel 6 = Tilt motion

**Dimension** : 560mm x 250mm x 205 mm (without bracket)

**Weight** : 17 kg (AC 120V) / 13.5 kg (AC 230~250V)

**Luminous intensity:**

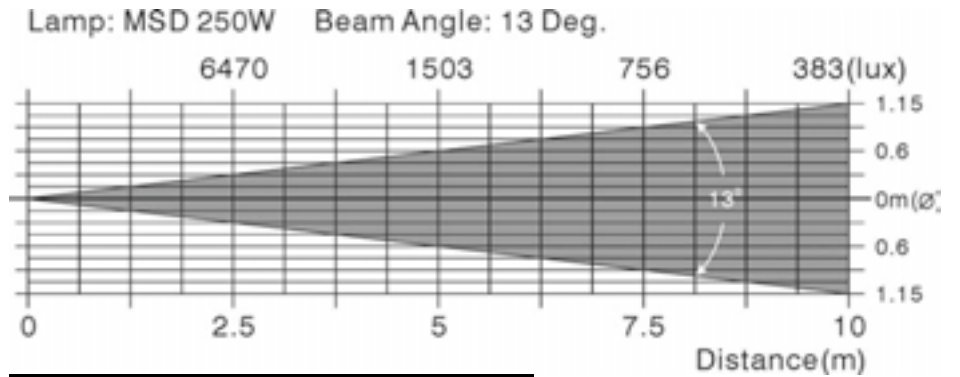


## 2.1 Inserting/Exchanging rotating gobos

**DANGER!**  
Install the gobos with the device switched off only.  
Unplug from mains before!

Open the cover by loosening the fastening screw at the sides of the cover. If you wish to use other forms and patterns as the standard-gobos, or if the gobos are to be exchanged, remove the fixation ring with an appropriate tool. Remove the gobo and insert the new gobo. Press the fixation-ring together and insert it in the front of the gobo.

5

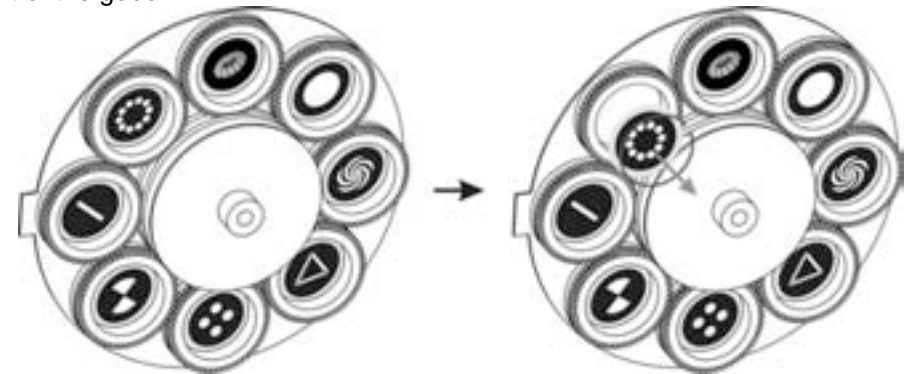

**CAUTION!**  
Never unscrew the screws of the rotating gobo as the ball bearing will otherwise be opened!

## 5.4. DMX512 Configuration

DMX512 configuration						
Channel 1	Channel 2	Channel 3	Channel 4		Channel 5	Channel 6
Shutter	Gobo	Gobo Rotation	Full Color	Split Color	Pan	Tilt
Open 248-255	Fastest speed 255	Stopped 246-255	Fastest speed 255			

Shaking 168-247	Slowest speed 128	245	Slowest speed 128			
Shutter 88-167	120	135		Light green 116-127	Light green 121-127	
		120		Amber 103-115	Amber- Light green 114-120	
Dimmer 08-87	112-127	10		Amber 103-115	Amber 108-113	
	96-111			Magenta- Amber 101-107		
	80-95			Magenta 94-100		
	64-79			Pink-Magenta 88-93		
	48-63			Pink 81-87		
	32-47			Orange-Pink 74-80		
	16-31			Orange 67-73		
				UV Purple-Orange 61-66		
				UV Purple 54-60		
				Green-UV Purple 47-53		
	Green 41-46					
	Yellow-Green 34-40					
	Yellow 27-33					
	Blue-Yellow 21-26					
	Blue 14-20					



		Stopped 00-00	White 00-00	White-Blue 00-00	
Blackout 00-07				White 00-06	

### 5.2 Easy Controller

The easy remote control is used only in master/slave mode. By connecting to the 1/4" microphone jack of the first unit, you will find that the remote control on the first unit will control all the other units for Stand by, Strobe/Next and Fast/Slow function.

- STAND BY** : To blackout all the unit.
- STROBE/NEXT** : Under FAST mode, the light will strobe in three different ways:
  - Strobe in different gobos and colors.
  - Synchronous strobe in white color.
  - Two-light strobe in white color.
 If the unit in slow mode, press NEXT button to choose desired color and gobo. It change ten colors and then change one gobo.
- FAST/SLOW** : When the LED is off, it is in FAST mode. The unit's movement- Pan/Tilt & Gobo/Color is sound activated. If the LED on, it is in SLOW mode, Pan/Tilt is sound activated but Gobo/Color wheel are static, controlled by Next button.

### 5.3 Universal DMX Controller

If you use a universal DMX controller to control the units, you have to set DMX address from 1 to 512 channel so that the units can receive DMX signal.

Press the **MENU** button up to when the **Addr** is showing on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to change the DMX512 address. Once the address has been selected, press and keep **ENTER** button pressed up when the display stops blinking or storing automatically 8 seconds later. To go back to the functions without any change press the **MENU** button again. Please refer to the following diagram to address your DMX512 channel for the first 4 units.



### 3. Lamp




**In case of replacement of the lamp or maintenance, do not open the fixture within 15 minutes until the unit cools down after switching of**

Because of its high internal pressure, there might be a risk that the Discharge lamp would explode during operation. The lamp emits intense UV radiation which is harmful to the eyes and skin. The high luminance of the arc can cause severe damage to the retina if looked directly at the lamp.

Lamp : Discharge lamp MSD 250W  
 Color Temperature : 8000K  
 Average Life : 2000 hours

1. Always switch off the main supply and never handle the lamp or luminaries when is hot.
2. Do not touch the bulb with bare hands. If this happens, clean the lamp with denatured alcohol and wipe it with a lint free cloth before installation.
3. The lamp generates UV radiation. Never operate the lamp without appropriate shielding.
4. When burning, the lamp operates at high pressure and there is a slight risk of arc tube rupture. The risk increases with age, temperature and improper handling of the lamp. Do not use the lamp any longer than its specified life.
5. Make sure the lamp is located in the center of the reflector for the best spot.

**Diagram for Lamp changing**

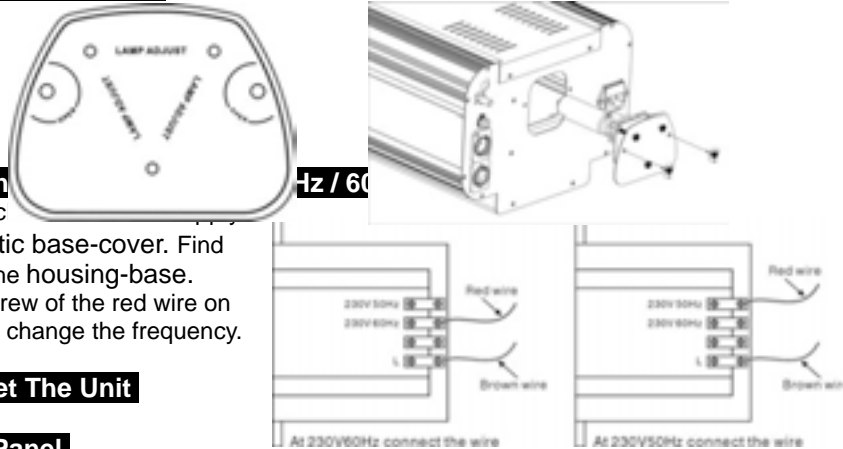


**3.1 How to change frequency**

1. Always switch off the main supply, open the plastic base-cover. Find the ballast on the housing-base.
2. Loosen the screw of the red wire on the ballast, and change the frequency.
3. Reinstall all.

**4. How To Set The Unit**

**4.1 Control Panel**

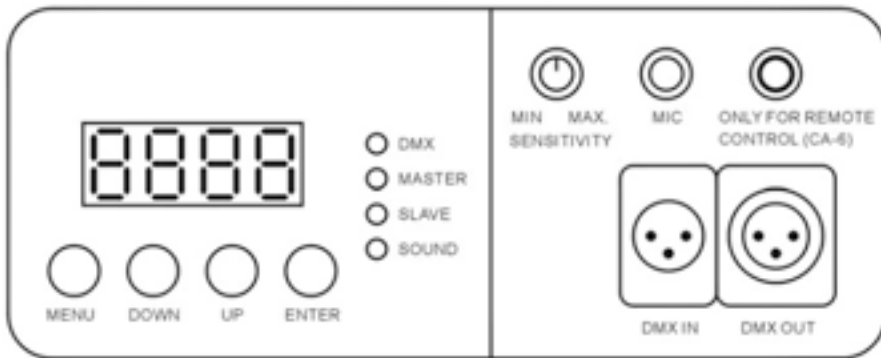

**Display**

To show the various menu and the selected functions.

**LED**

DMX	On	DMX input present
MASTER	On	master mode
SLAVE	On	slave mode
SOUND	Flashing	sound activation

**Button**

MENU	to select the programming functions
DOWN	to go backward in the selected functions
UP	to go forward in the selected functions
ENTER	to confirm the selected functions

**Remote controller input**

By connect to the 1/4" microphone jack to control the unit for Stand by, Strobe/Next and Fast/Slow function.

**Sensitivity**

To adjust the microphone-receiving sensitivity.

**Microphone**

To receives audio signal for sound activation.

**DMX input/output**

For DMX512 link, use 3-pin XLR plug cable to link the unit together.

**5. How To Control The Unit**

You can operate the unit in three ways:

1. By master/slave built-in preprogram function
2. By easy controller
3. By universal DMX controller

No need to turn the unit off when you change the DMX address, as new DMX address setting will be effected at once. Every time you turn the unit on, it will show A660 on the display and move all the motors to their 'home' position and you may hear some noises for about 20 seconds. After that the unit will be ready to receive DMX signal or run the built in programs.

**5.1 Master/Slave Built In Preprogrammed Function**

By linking the units in master/slave connection, the first unit will control the other units give an automatic, sound activated, synchronized light show. This function is good when you want an instant show. You have to set the first unit in master mode **SH1** and select **SH1** (show 1) or **SH2** (show 2) mode. Its DMX input jack will have nothing plugged in it, and its master LED will be constantly on and sound LED will flash to the music. The other units will have to set in slave mode **SL1** and select **NO** (normal) or **2LSH** (2 light show) mode, Their DMX cables plugged into the DMX input jacks (daisy chain) and the slave LED lights will constantly on.

**2-light show**

In **SL1** (slave mode), **NO** means the unit works normally and **2LSH** means 2-light show. In order to create a great light show, you can set **2LSH** on the second unit to get contrast movement to each other, even if you have two units only.

### Self-Test

Press the **MENU** button up to when the **EESE** is blinking on the display. Pressing **ENTER** button and the unit will run self-test by built in program. To go back to the functions press the **MENU** button again.

### Fixture Hours


Press the **MENU** button up to when the **FhrS** is blinking on the display. Pressing **ENTER** button and the display will show the number of working hours of the unit. To go back to the functions press the **MENU** button again.

### Reset

Press the **MENU** button up to when the **rSEt** is blinking on the display. Pressing **ENTER** button and all channels of the unit will return to their standard position. To go back to the functions press the **MENU** button again.

## 4.2 Main Function

To select any of the given functions, press the **MENU** button up to when the required one is showing on the display. Select the function by **ENTER** button and the display will blink. Use **DOWN** and **UP** button to change the mode. Once the required mode has been selected, press the **ENTER** button to setup or it will automatically return to the main functions without any change after idling 8 seconds. To go back to the functions without any change press the **MENU** button. The main functions are showing below:

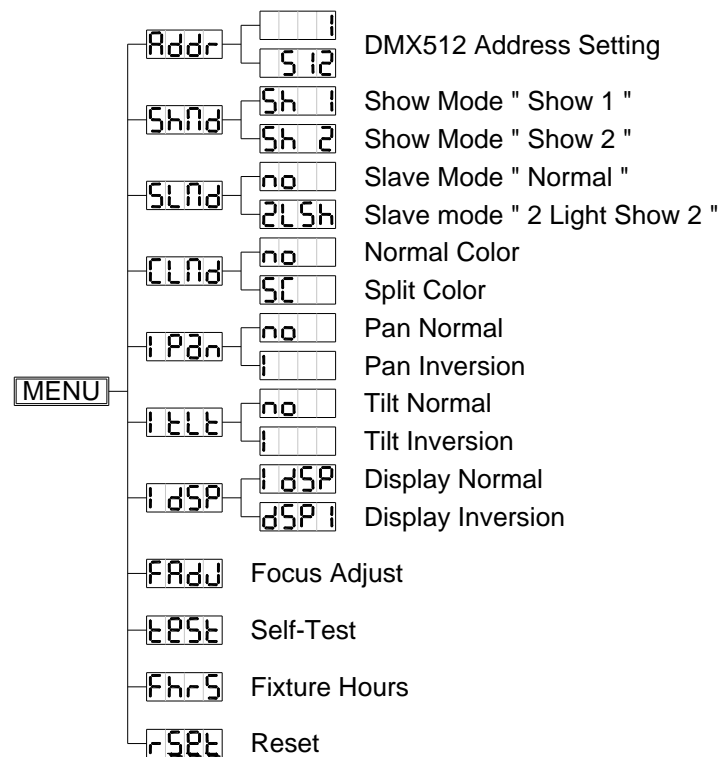

### DMX512 Address Setting

Press the **MENU** button up to when the **Addr** is showing on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to change the DMX512 address. Once the address has been selected, press the **ENTER** button to setup or automatically return to the main functions without any change after 8 seconds. To go back to the functions without any change press the **MENU** button again.

### Show Mode

Press the **MENU** button up To when the **Shnd** is showing on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to select the **Sh 1** (show 1) or **Sh 2** (show 2) mode. Once the mode has been selected, press the **ENTER**



button to setup or automatically return to the main functions without any change after 8 seconds. To go back to the functions without any change press the **MENU** button again.

### **SLnd** Slave Mode

Press the **MENU** button up to when the **SLnd** is showing on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to select the **no** (normal) or **2LSH** (2 light show) mode. Once the mode has been selected, press the **ENTER** button to setup or automatically return to the main functions without any change after 8 seconds. To go back to the functions without any change press the **MENU** button again.

### **CLnd** Color Mode

Press the **MENU** button up to when the **CLnd** is showing on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to select the **no** (normal) or **SC** (split color) mode. Once the mode has been selected, press the **ENTER** button to setup or automatically return to the main functions without any change after 8 seconds. To go back to the functions without any change press the **MENU** button again.



### **IPdn** Pan Inversion

Press the **MENU** button up to when the **IPdn** is showing on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to select the **no** (normal) or **II** (pan inversion) mode. Once the mode has been selected, press the **ENTER** button to setup or automatically return to the main functions without any change after 8 seconds. To go back to the functions without any change press the **MENU** button again.

### **TELE** Tilt Inversion

Press the **MENU** button up to when the **TELE** is showing on the display. Pressing **ENTER** button and the display will blink. Use **DOWN** and **UP** button to select the **no** (normal) or **TI** (tilt inversion) mode. Once the mode has been selected, press the **ENTER** button to setup or automatically return to the main functions without any change after 8 seconds. To go back to the functions without any change press the **MENU** button again.

### **IdSP** Display Inversion

It is good for you to install the unit on the truss or under ceiling. Press the **MENU** button up to when the **IdSP** is blinking on the display. Use the **ENTER** button to change to the mode **dSPi** (display inversion), It will automatically store after 8 seconds. Or press the **ENTER** button again return to the mode **IdSP** (display normal). To go back to the functions press the **MENU** button.

**IdSP** Display normal mode for the fixture putting on the floor.

**dSPi** Display inversion mode for the fixture fixing under ceiling.

### **FAdU** Focus Adjust

Press the **MENU** button up to when the **FAdU** is blinking on the display. Pressing **ENTER** button, the unit will focus on center position. To go back to the functions press the **MENU** button again.