



Wired Timer Controller (FC-T) Quick Start Guide

1. Plug in the fog machine to power and turn the power switch to the fixture on.
2. Plug in the timer remote to the Manual Controller socket on the rear of the fog machine.
3. Press the TIMER ON/OFF button on the timer remote. The Timer LED Indicator above the button should light up.
4. Set the INTERVAL and DURATION adjustment knobs to the desired positions.
 - INTERVAL is the time in between bursts of fog.
 - DURATION is the time that the fog machine will run during the burst.

