POCKETSPOT[®]**LED**



User Manual

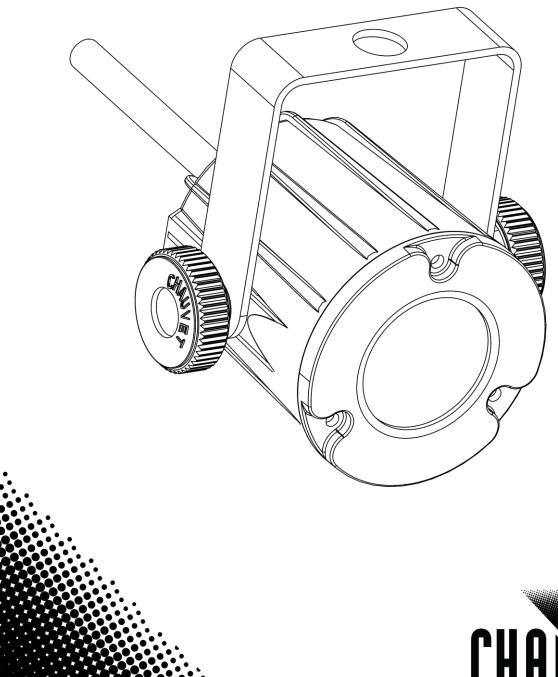




TABLE OF CONTENTS

1. BEFORE YOU BEGIN	
WHAT IS INCLUDED	3
UNPACKING INSTRUCTIONS	
ICONS	
SAFETY INSTRUCTIONS	4
2. INTRODUCTION	
Features	
Product Overview	5
3. SETUP	
AC Power	
Mounting	
Orientation	
Rigging	
5. APPENDIX	
GENERAL TROUBLESHOOTING	
GENERAL MAINTENANCE	
RETURNS PROCEDURE	
CLAIMS	
TECHNICAL SPECIFICATIONS	
CONTACT US	

1. BEFORE YOU BEGIN

What is included

- 1 x Pocketspot™ LED
- 1 x Warranty Card
- 1 x User Manual

Unpacking Instructions

Immediately upon receiving a fixture, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

lcons

This manual uses the following icons to indicate information that requires special attention on the part of the user.

ICONS	MEANING	
	This paragraph contains critical installation, configuration or operation information. Failure to comply with this information may render the fixture partially or completely inoperative, cause damage to the fixture or cause harm to the user.	
Í	This paragraph contains important installation or configuration informat Failure to comply with this information may prevent the fixture f functioning correctly.	
	This paragraph reminds you of useful, although not critical, information.	

Safety Instructions



Please read these instructions carefully. It includes important information about the installation, usage and maintenance of this product.


- Please keep this User Manual for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.
- Always make sure that you are connecting to the proper voltage, and that the line voltage you are connecting to is not higher than that stated on the decal or rear panel of the fixture.
- This product is intended for indoor use only! To prevent risk of fire or shock, do not expose fixture to rain or moisture.
- Make sure there are no flammable materials close to the unit while operating.
- The unit must be installed in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Always disconnect from power source before servicing or replacing fuse and be sure to replace with same fuse source.
- Secure fixture to fastening device using a safety chain.
- Maximum ambient temperature (Ta) is 104° F (40° C). Do not operate fixture at temperatures higher than this.
- In the event of a serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center.
- Never connect the device to a dimmer pack.
- Make sure the power cord is never crimped or damaged.
- Never disconnect the power cord by pulling or tugging on the cord.
- Never carry the fixture directly from the cord. Always use the hanging/mounting bracket.
- Avoid direct eye exposure to the light source while it is on.

2. INTRODUCTION

Features

- Extremely compact LED pinspot
 Produces a soft-edge, narrow beam
 High-power, 4 W (1 A) LED

Product Overview

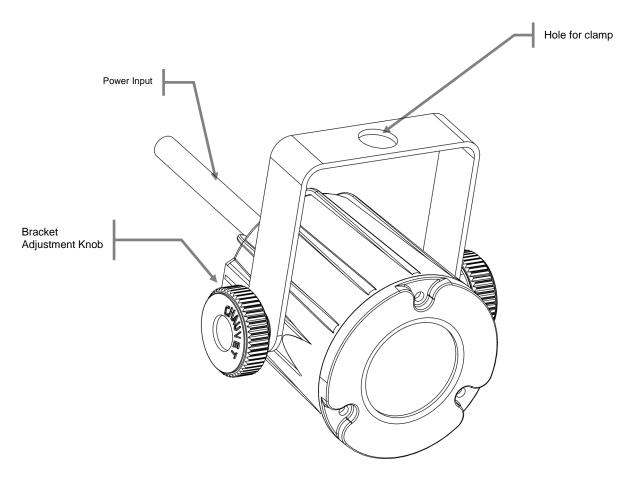

3. SETUP

AC Power

This fixture runs on 100~240 VAC, 50/60 Hz. Before powering on the unit, make sure the line voltage to which you are connecting it is within the range of accepted voltages.

To determine the power requirements for a particular fixture, see the label affixed to the back plate of the fixture or refer to the fixture's specifications chart. A fixture's listed current rating indicates its average current draw under normal conditions.



Always connect the fixture to a switched circuit. Never connect the fixture to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel is used only as a 0 to 100% switch.



Always connect the fixture to a circuit with a suitable electrical ground.

Mounting


Orientation

The Pocketspot[™] LED may be mounted in any position provided there is adequate room for ventilation.

Rigging

Be sure that the structure can support the weight of the fixture. Please see the "Technical Specifications" section of this manual for a detailed weight listing. Mount the fixture securely. This may be done with a screw, nut and bolt, or a hanging clamp. The hole in each bracket is 13 mm in size. When rigging consider routine maintenance access. Please see the following note on installation.

• When aiming the fixtures, you may use the bracket adjustment knob. Loosen the knob, adjust to the desired angle, and then tighten the knob by turning clockwise. Do not use tools for this step, as it may cause damage.

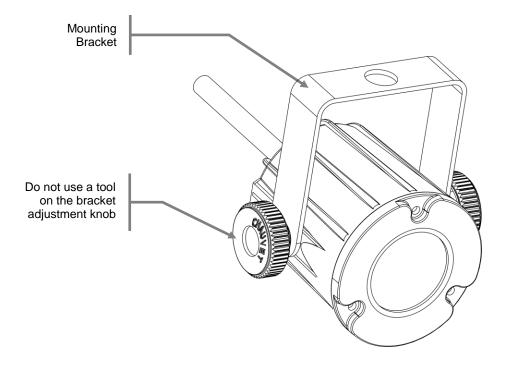

5. APPENDIX

General Troubleshooting

Symptom	POSSIBLE CAUSE(S)	POSSIBLE ACTION(S)
Breaker/Fuse	Excessive circuit load	 Check total load placed on the electrical circuit.
keeps blowing	 Short circuit along the power wires 	 Check for a short in the electrical wiring (internal and/or external).
Device does not	No power	Check for power on Mains.
power up	Loose power cord	 Check power cord



If you still have a problem after trying the above solutions, please contact CHAUVET $\ensuremath{\mathbb{R}}$ Technical Support.

General Maintenance

To maintain optimum performance and minimize wear, fixtures should be cleaned frequently. Usage and environment are contributing factors in determining frequency. As a general rule, fixtures should be cleaned at least twice a month. Dust build up reduces light output performance and can cause overheating. This can lead to reduced lamp life and increased mechanical wear. Be sure to power off fixture before conducting maintenance.

- Unplug fixture from power.
- Use a vacuum or air compressor and a soft brush to remove dust collected on external vents.
- Clean all lenses when the fixture is cold with a mild solution of glass cleaner or Isopropyl Alcohol and a soft lint free cotton cloth or lens tissue.
- Apply solution to the cloth or tissue and drag dirt and grime to the outside of the lens.
- Gently polish optical surfaces until they are free of haze and lint.

The cleaning of external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates. Damp, smoky or particularly dirty surroundings can cause greater accumulation of dirt on the unit's optics. Clean with soft cloth using normal glass cleaning fluid. Clean the external optics at least every 20 days. Clean the fixture at least every 30/60 days.



Always dry the parts carefully after cleaning them.

Never spin a fan using compressed air.

Returns Procedure

Returned merchandise must be sent prepaid and in the original packing; call tags will not be issued. Package must be clearly labeled with a Return Merchandize Authorization Number (RMA #). Products returned without the RMA # will be refused. Call CHAUVET and request an RMA # prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to pack fixture properly; any shipping damage resulting from inadequate packaging is the customer's responsibility. As a suggestion, proper UPS packing or double-boxing is always a safe method to use. CHAUVET reserves the right to use its own discretion to repair or replace product(s).



If you are given an RMA #, please include the following information on a piece of paper inside the box:

- 1) Your name
- 2) Your address
- 3) Your phone number
- 4) The RMA #
- 5) A brief description of the symptoms

Claims

Damage incurred in shipping is the responsibility of the shipper; therefore, the damage must be reported to the carrier upon receipt of merchandise. It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Any other claim for items such as missing component/part, damage not related to shipping, and concealed damage, must be made within seven (7) days of receiving merchandise.

TECHNICAL SPECIFICATIONS

WEIGHT & DIMENSIONS Length	
Width	· · ·
Height0 Weight0	
-	
POWER	
Auto-ranging Power Supply	
Power Consumption @ 230 V	k, 0.2 A inrush
LIGHT SOURCE LED 1 x 4 W (1 A) (whi	ta) 50 000 hra
LED	te) 50,000 hrs
PHOTO OPTIC	
Beam angle	
Field angle Lux @ 1 m	
THERMAL	
Maximum ambient temperature	104° F (40° C)
INDOOR/OUTDOOR	
RatingFor in	door use only
•	
ORDERING INFORMATION Pocketspot LEDPOCK	
POCKEISPOI LED POCK	EISPOILED
WARRANTY INFORMATION	
Warranty1-year lin	nited warranty

CONTACT US

World Wide		
	General Information	CHAUVET® 5200 NW 108 th Ave Sunrise, FL 33351 voice: 954.929.1115 fax: 954.929.5560 toll free: 800.762.1084
	Technical Support	CHAUVET® 5200 NW 108 th Ave Sunrise, FL 33351 voice: 954.929.1115 (Press 4) fax: 954.929.5560 (Attention: Service)
	World Wide Web	www.chauvetlighting.com