


# LED Techno Strobe RGB™

## ST-4000RGB

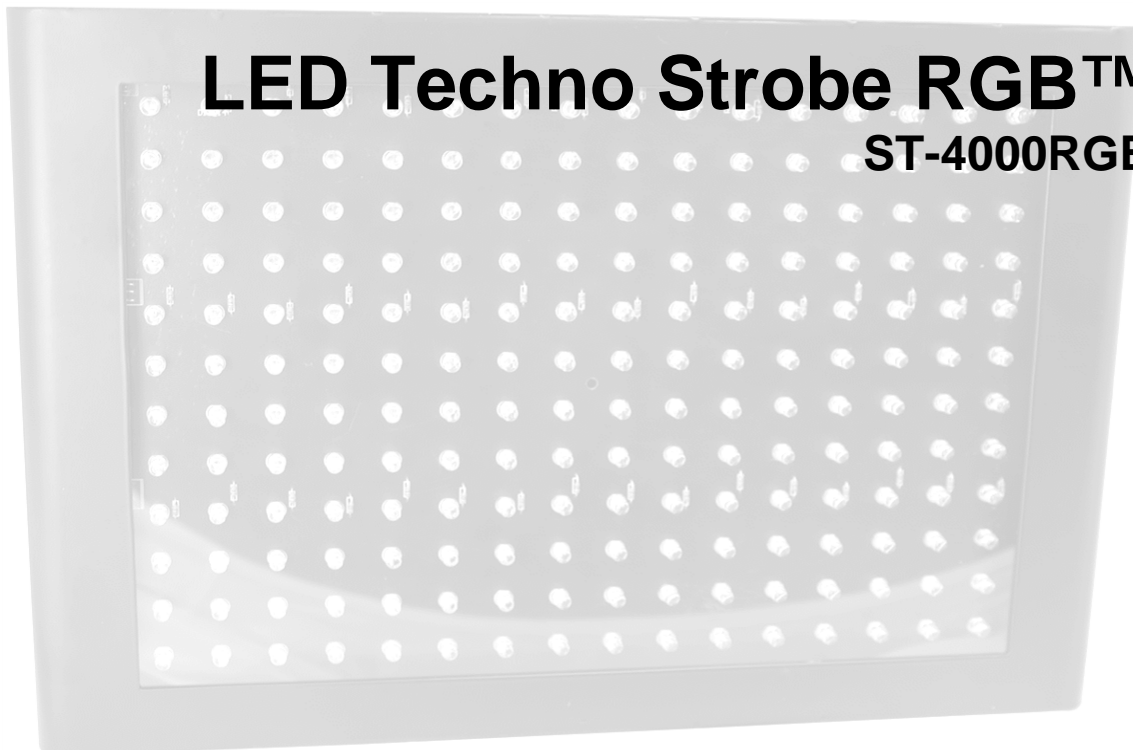

USER MANUAL



CHAUVET5200 NW 108th Avenue, Sunrise, FL 33351 U.S.A  
(800) 762-1084 – (954) 929-1115  
FAX (954) 929-5560  
[www.chauvetlighting.com](http://www.chauvetlighting.com)

# Table of Contents

<b>1. BEFORE YOU BEGIN.....</b>	<b>3</b>
WHAT IS INCLUDED.....	3
UNPACKING INSTRUCTIONS.....	3
CLAIMS.....	3
SAFETY NOTES.....	3
<b>2. INTRODUCTION.....</b>	<b>4</b>
FEATURES.....	4
DMX CHANNEL SUMMARY.....	4
PRODUCT OVERVIEW.....	5
<b>3. SETUP.....</b>	<b>6</b>
AC POWER.....	6
MOUNTING.....	6
<i>Orientation.....</i>	6
<i>Rigging.....</i>	6
<i>Flush Mounting.....</i>	6
FIXTURE LINKING.....	6
<i>Data Cabling.....</i>	7
SETTING UP A DMX SERIAL DATA LINK.....	7
STANDALONE/MASTER-SLAVE FIXTURE LINKING.....	7
<b>4. OPERATING INSTRUCTIONS.....</b>	<b>8</b>
STANDALONE MODE.....	8
<i>Single-Fixture Mode.....</i>	8
<i>Master-Slave Mode.....</i>	8
Setup.....	8
<i>DIPswitch Options.....</i>	8
BINARY & DMX DIPSWITCH ADDRESSING.....	8
DMX CONTROL MODE.....	9
<i>Configuring for DMX control.....</i>	9
<i>Setting the DMX address.....</i>	9
DMX CHANNEL VALUES.....	9
<b>5. APPENDIX.....</b>	<b>10</b>
MAINTENANCE.....	10
RETURNS.....	10
BINARY ADDRESSING QUICK REFERENCE CHART.....	11
TECHNICAL SPECIFICATIONS.....	12
CONTACT US.....	12

©CHAUVET, 2012, All Rights Reserved

Information and specifications in this User Manual are subject to change without notice. CHAUVET assumes no responsibility or liability for any errors or inaccuracies that may appear in this manual.

# 1. Before You Begin

## What is Included

- 1 x LED Techno Strobe RGB™ ST-4000RGB
- 1 x Power cable
- 2 x Flush Mount Brackets with screws
- Warranty Card
- User Manual

## Unpacking Instructions

Carefully unpack the carton and check the contents to ensure that all parts are present and in good condition. If anything in the carton appears damaged, notify the shipper immediately, not CHAUVET®. **Save the carton and all packing materials.** In the event that a fixture must be returned to the factory, return it in the original factory box and packing.

## Claims

Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise. It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Any other claim for items such as missing component/part, damage not related to shipping, and concealed damage, must be made within seven (7) days of receiving merchandise.

## Safety Notes



This product is designed for professional use. It is not intended for use in a household environment or permanent installation. **Read this manual** before installing or powering the fixture, follow the safety precautions listed below and observe all warnings in this manual and on the fixture. If you have any questions about how to operate the fixture safely, please contact CHAUVET®.

- Always disconnect from AC power source before servicing or replacing lamp or fuse and be sure to replace with same lamp source.
- Connected to circuits with a suitable Earth Ground.
- To prevent risk of fire or shock, do not expose fixture to rain or moisture. Make sure there are no flammable materials close to the unit while operating.
- Do not operate the fixture if covers are open or if any internal component is missing or damaged: an unshielded discharge lamp emits dangerous UV radiation that can cause burns and eye damage.
- Make sure power cord is never crimped or damaged.
- Never disconnect power cord by pulling or tugging on the cord.
- This product is designed to be used with very specific lamp(s). Use of any other type of lamp not stated in this manual may create a fire hazard due to possible risk of lamp explosion. Using the wrong type of lamp in this product VOIDS the warranty.
- Always make sure that you are connecting to the proper voltage and that the line voltage you are connecting to is not higher than that stated on decal or rear panel of the fixture.
- The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Maintain a minimum distance of 1 meter (3.28 feet) from combustible materials.
- Allow this product to cool for a minimum of 15 minutes before opening, handling or removing the lamp in this product.
- Maximum ambient temperature is Ta: 40°. Do not operate fixture at temperatures higher than this.
- Avoid direct eye exposure to lamp while it is on.
- Do not operate the fixture if covers are open or if any internal component is missing or damaged.
- Secure fixture to fastening device using a safety chain.
- A hot lamp is an explosion hazard. Do not open fixture for a minimum of 15 minutes after switching off. Wear eye and hand protection when re-lamping.
- Fixture surface may reach temperatures of up to 160° C (320° F). Handle fixture after it cools.
- In the event of serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.

### Caution!

***There are no user-serviceable parts inside the unit. Do not open the housing or attempt any repairs yourself. In the unlikely event your unit may require service, please contact CHAUVET®.***

## 2. Introduction




### Features

- 6-channel DMX-512 LED strobe system
- Blackout and static/strobing
- Built-in automatic programs
- Built-in sound programs
- Dimming
- RGB color mixing with or without controller
- Automatic built-in programs with sound activation
- Linkable with LED Techno Strobe™ & LED Shadow™ in standalone mode
- Low power consumption
- Additional power output for power linking

### DMX Channel Summary

1		2	3	4	5	6	DMX Channel (Columns)
RGB Mode	000~024	Red 000~255	Green 000~255	Blue 000~255	Strobing 000~255	Dimming 000~255	
Preset Programs (1 ~ 8)	025~224	No Function	No Function	No Function	Program Speed 000~255	No Function	
Sound Mode	225~255				No Function		
CONTROL MODES & OPTIONS (Rows)							

# Product Overview

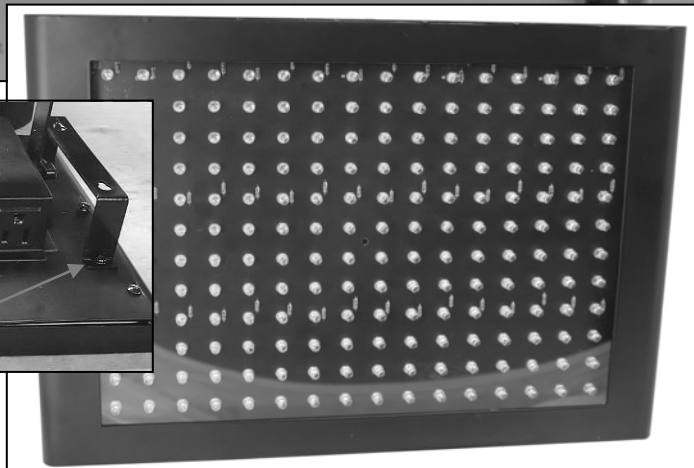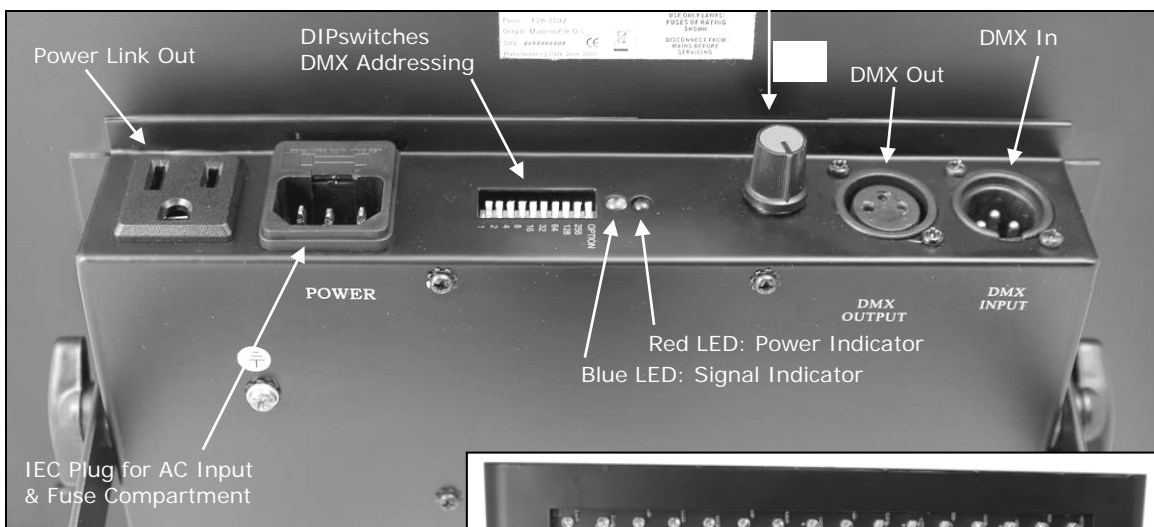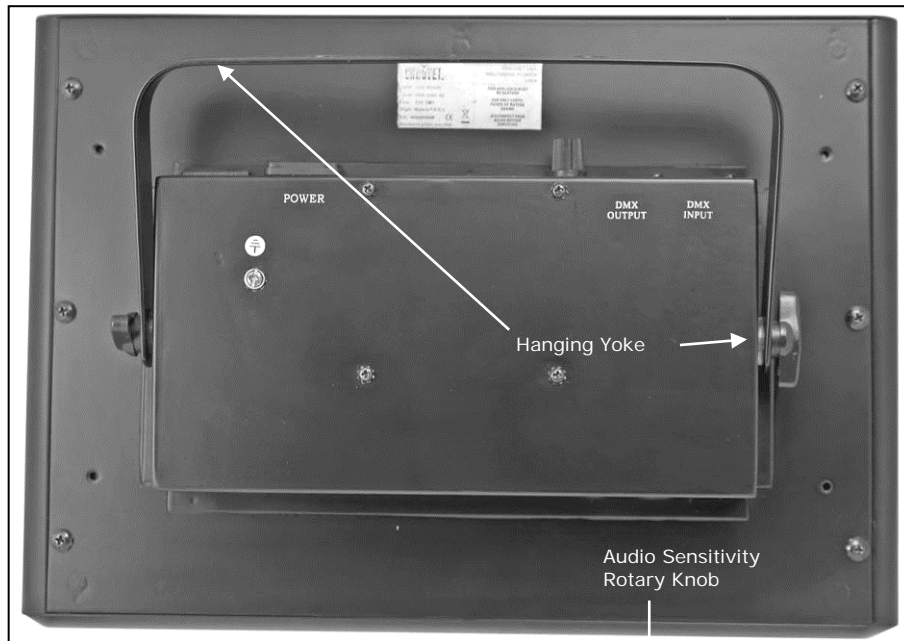

Flush Mounting Bracket

LED Front Panel

# 3. Setup

## AC Power

### Warning!

**Verify that the power requirement label on your unit matches the line voltage applied. All fixtures must be connected to circuits with a suitable Earth Ground.**

- To determine the power requirements for a particular fixture, see the label affixed to the back plate of the fixture or refer to the fixture's specifications chart.
- A fixture's listed current rating is its average current draw under normal conditions.
- All fixtures must be powered directly off a switched circuit and cannot be run off a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel is used solely for a 0% to 100% switch.
- Before applying power to a fixture, check that the source voltage matches the fixture's requirement.
- All fixtures must be connected to circuits with a suitable Earth Ground.

### Power Cable Configuration

CABLE	Pin	International	Screw Color
BROWN	Live	L	Yellow or Brass
BLUE	Neutral	N	Silver
YELLOW/GREEN	Earth	EG (Ground)	Green

## Mounting

### Orientation


This fixture can be mounted on a truss using a clamp in any position or against a flat surface using the brackets provided.

### Rigging

The fixture includes a mounting yoke to which 1 rigging clamp can be bolted and (2) Flush Mount Brackets for flush mounting to flat surfaces. You must supply your own clamp and make sure the clamp is capable of supporting the weight of this fixture. You can order C-clamps from any CHAUVET dealer or distributor.

1. Block access below the work area and use suitable and stable platform when installing or servicing fixture.
2. Align the clamp screw with the center hole on the yoke and tighten.
3. Verify the structure can hold 10 times the weight of all to-be installed fixtures.
4. Adjust the angle on the yoke arm as necessary.
5. Always use a safety cable or chain as a secondary source of attachment. The safety cable must hold 10 times the weight of the fixture. If safety cable attachment point is provided that is permanently affixed to the surface or body of the fixture, use that instead of looping through a hanging yoke/arm.

Hanging Clamp

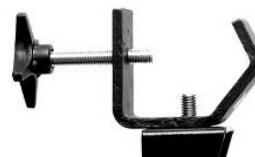

Flush Mounting Bracket



### Flush Mounting

1. Draw a screw hole template on a large piece of vellum or transparent paper for best alignment.
2. Place paper against the mounting surface and drill holes or mark the surface for drilling.
3. Hang Panel.

## Fixture Linking

You will need a serial data link to run light shows of one or more fixtures using a DMX-512 controller or to run synchronized shows on two or more fixtures set to a master/slave operating mode. The

combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support. If you are unfamiliar with DMX, download the DMX Primer from [www.chauvetlighting.com](http://www.chauvetlighting.com).

The ST-4000RGB™ fixtures use 6 channels of DMX control.

**Important:** Fixtures on a serial data link must be daisy-chained in one single line. To comply with the EIA-485 standard, no more than 32 devices should be connected on one data link. Connecting more than 32 fixtures on one serial data link without the use of a DMX optically isolated splitter may result in deterioration of the digital DMX signal.

Maximum recommended serial data link distance: 500 meters (1640 ft.)

Maximum recommended number of fixtures on a serial data link: 32 fixtures

## Data Cabling

To link fixtures together you must obtain data cables. You can purchase CHAUVET® certified DMX cables directly from a dealer/distributor or construct your own cable. If you choose to create your own cable please use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.



## Setting up a DMX Serial Data Link

1. Connect the (male) 3 pin connector side of the DMX cable to the output (female) 3 pin connector of the controller.
2. Connect the end of the cable coming from the controller which will have a (female) 3 pin connector to the input connector of the next fixture consisting of a (male) 3 pin connector.
3. Then, proceed to connect from the output as stated above to the input of the following fixture and so on.


### CHAUVET® Certified DMX Data Cables

Order Code	Description
DMX1.5	DMX Cable 1.5m/4.9ft
DMX4.5	DMX Cable 4.5m/14.8ft
DMX10	DMX Cable 10m/32.8ft

Universal DMX Controller

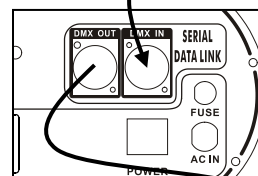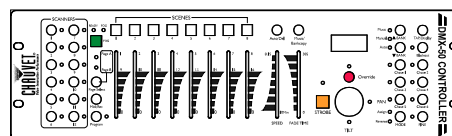

This drawing provides a general illustration of the DMX Input/Output panel of a lighting fixture.

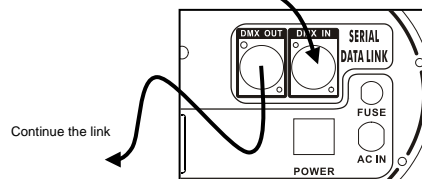

## Standalone/Master-Slave Fixture Linking

1. Connect the (male) 3-pin connector side of the DMX cable to the output (female) 3-pin connector of the first fixture.
2. Connect the end of the cable coming from the first fixture which will have a (female) 3-pin connector to the input connector of the next fixture consisting of a (male) 3-pin connector. Then, proceed to connect from the output as stated above to the input of the following fixture and so on.

# 4. Operating Instructions

The ST-4000RGB™ is a DMX-512 controllable, full RGB color mix LED panel made up of highly efficient and super bright LEDs. The ST-4000RGB™ can operate in Stand-Alone, Master/Slave and via DMX-512 control utilizing 5 channels.

## Standalone Mode

The ST-4000RGB™ can be operated without a DMX controller in a standalone mode. It can be operated as a single fixture or together with several other ST-4000RGB™ fixtures in what is called a "Master/Slave" configuration.

- *Note: to set this fixture up with smooth standalone fade programs, you must use only dipswitches 4-7. Dipswitch 4 activates the function, while the combination of dipswitches 5-7 adjusts the fade time.*

## Single-Fixture Mode

The ST-4000RGB™ can be set to operate independently of other fixtures or a DMX controller in either a sound-active or automatic mode. A serial data-link is not necessary for this mode of operation and it is recommended that no connection to other fixtures be made at all.

1. Simply choose from any one of 11 built-in "DIP-switch Options" from the table below.

## Master-Slave Mode

A master-slave mode setup consists of more than one fixture connected in a serial data link without the use of a controller. In a master-slave operation the slave fixtures will synchronize and will behave either identically or in a planned chase pattern to the master unit which must be the first in the serial daisy chain. A Master-Slave ST-4000RGB™ system can consist of an unlimited range of fixtures or at least the number stated to conform to EIA-485 standards.

### Setup

1. The ST-4000RGB sets up automatically for Master-Slave, no DIP-switch settings are required other than for selecting DIP-switch Options.
2. Connect the end of the cable coming from the first fixture which will have a (female) 3 pin connector to the **DMX IN** input connector of the Slave fixture consisting of a (male) 3 pin connector. Continue the loop from **DMX OUT** to **DMX IN**.

## DIPswitch Options

FUNCTIONS	DIPSWITCHES ( ON )	NOTES & DESCRIPTION
	None	Blackout
Red LEDs	1	Red LEDs
Green LEDs	2	Green LEDs
Blue LEDs	3	Blue LEDs
Dimmer/Auto Fade	4	75% Intensity
Dimmer/Speed in Auto Fade	5	50% Intensity
Strobe/Speed in Auto Fade	6	Slow
Strobe/Speed in Auto Fade	7	Medium
Strobe/Strobe in Auto Fade	8	Fast
Sound	9	Music: Sound Activated, Rotary knob sets sound sensitivity
Auto Flash	10	Preset Programs run in Automatic speed

## Binary & DMX DIPswitch Addressing

Each DIP-switch has an associated value. Adding the value of each switch in the ON position will provide the final address. Determining which switches to toggle ON given a specific desired address or value can be accomplished in the following manner. By subtracting the largest switch value possible from the selected start address which does not cause a negative number. See also the Binary Quick Reference chart in the Appendix.



## DMX Control Mode

The ST-4000RGB™ can be operated from a DMX controller. This control mode environment gives the user the greatest flexibility when it comes to customizing or creating a show by enabling the control of each individual trait of the fixture and each fixture independently.

### Configuring for DMX control

1. Connect the (male) 3 pin connector side of the DMX cable to the output (female) 3 pin connector of the controller.
2. Connect the end of the cable coming from the controller which will have a (female) 3 pin connector to the input connector of the next fixture consisting of a (male) 3 pin connector.
3. Then, proceed to connect from the DMX output as stated above to the DMX input of the following fixture and so on.
4. If you need help setting the DMX address read the section titled "Setting the DMX address" in this Chapter.

### Setting the DMX address

Each fixture requires a "start address" from 1 to 511. A fixture requiring one or more channels for control begins to read the data on the channel indicated by the start address. For example, a fixture that occupies or uses 7 channels of DMX and was addressed to start on DMX channel 100, would read data from channels: 100, 101, 102, 103, 104, 105 and 106. Choose start addresses so that the channels used do not overlap and notate the start address selected for future reference. If this is your first time, read the DMX Primer in the Appendix Section.

## DMX Channel Values

**NOTE! Please read all instructions carefully on fixture DMX control mode and addressing.**

DMX channels 2, 3, 4 and 5 functions are determined by the current settings of channel 1. For example, while Channel 1 is set between 000 and 024 the following conditions will apply;

- Channel 2 will control the Red LEDs
- Channel 3 will control the Green LEDs
- Channel 4 will control the Blue LEDs

Channel	Value	Function	Ch 2	Ch 3	Ch 4	Ch 5	Ch 6
1	000 ⇔ 024	<b>RGB Control Mode</b>	<b>Red</b> 000 ⇔ 255	<b>Green</b> 000 ⇔ 255	<b>Blue</b> 000 ⇔ 255	<b>Strobing</b> 000 ⇔ 255	<b>Dimming</b> 100% ⇔ 0%
	025 ⇔ 049	<b>Program 1</b>	<b>No Function</b>	<b>No Function</b>	<b>No Function</b>	<b>Speed</b> 000 ⇔ 255	<b>No Function</b>
	050 ⇔ 074	<b>Program 2</b>					
	075 ⇔ 099	<b>Program 3</b>					
	100 ⇔ 124	<b>Program 4</b>					
	125 ⇔ 149	<b>Program 5</b>					
	150 ⇔ 174	<b>Program 6</b>					
	175 ⇔ 199	<b>Program 7</b>					
	200 ⇔ 224	<b>Program 8</b>					
	225 ⇔ 255	<b>Sound</b>					

# 5. Appendix

## Maintenance

To maintain optimum performance and minimize wear, fixtures should be cleaned frequently. Usage and environment are contributing factors in determining frequency. As a general rule, fixtures should be cleaned at least twice a month. Dust build up reduces light output performance and can cause overheating. This can lead to reduced lamp life and increased mechanical wear. Be sure to power off fixture before conducting maintenance.

Unplug fixture from power. Use a vacuum or air compressor and a soft brush to remove dust collected on external vents and internal components. Clean all glass when the fixture is cold with a mild solution of glass cleaner or Isopropyl Alcohol and a soft lint free cotton cloth or lens tissue. Apply solution to the cloth or tissue and drag dirt and grime to the outside of the lens. Gently polish optical surfaces until they are free of haze and lint. Do not touch the lamp glass when cleaning fixture. Oil and dirt can cause damage and premature aging of the lamp. In the event that the lamp is touched or becomes dirty, clean the lamps with an alcohol wipe.

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics. Clean with soft cloth using normal glass cleaning fluid. - Always dry the parts carefully. - Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days.

## Returns

Returning Products to CHAUVET® Call the corresponding CHAUVET® Tech Support office and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause for the return.

You must send the merchandise prepaid, in its original box, and with its original packing and accessories. CHAUVET® will not issue call tags.

Clearly label the package with the RMA number. CHAUVET® will refuse any product returned without an RMA number.



**Write the RMA number on a properly affixed label. DO NOT write the RMA number directly on the box.**

Before sending the product, clearly write the following information on a piece of paper and place it inside the box:

- Your name
- Your address
- Your phone number
- The RMA number
- A brief description of the problem

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be your responsibility. As a suggestion, proper FedEx packing or double-boxing are recommended packaging methods.



**CHAUVET® reserves the right to use its own discretion to repair or replace returned product(s).**

# Binary Addressing Quick Reference Chart

## DMX & Binary Address Quick Reference Chart

DIP-switch Position

DMX DIP-SWITCH SET					#9	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1
0=OFF					#8	0	0	0	0	1	1	1	1	0	0	0	0	1	1	1	1
1=ON					#7	0	0	1	1	0	0	1	1	0	0	1	1	0	0	1	1
X=OFF or ON					#6	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1
#1	#2	#3	#4	#5																	
0	0	0	0	0		32	64	96	128	160	192	224	256	288	320	352	384	416	448	480	
1	0	0	0	0	1	33	65	97	129	161	193	225	257	289	321	353	385	417	449	481	
0	1	0	0	0	2	34	66	98	130	162	194	226	258	290	322	354	386	418	450	482	
1	1	0	0	0	3	35	67	99	131	163	195	227	259	291	323	355	387	419	451	483	
0	0	1	0	0	4	36	68	100	132	164	196	228	260	292	324	356	388	420	452	484	
1	0	1	0	0	5	37	69	101	133	165	197	229	261	293	325	357	389	421	453	485	
0	1	1	0	0	6	38	70	102	134	166	198	230	262	294	326	358	390	422	454	486	
1	1	1	0	0	7	39	71	103	135	167	199	231	263	295	327	359	391	423	455	487	
0	0	0	1	0	8	40	72	104	136	168	200	232	264	296	328	360	392	424	456	488	
1	0	0	1	0	9	41	73	105	137	169	201	233	265	297	329	361	393	425	457	489	
0	1	0	1	0	10	42	74	106	138	170	202	234	266	298	330	362	394	426	458	490	
1	1	0	1	0	11	43	75	107	139	171	203	235	267	299	331	363	395	427	459	491	
0	0	1	1	0	12	44	76	108	140	172	204	236	268	300	332	364	396	428	460	492	
1	0	1	1	0	13	45	77	109	141	173	205	237	269	301	333	365	397	429	461	493	
0	1	1	1	0	14	46	78	110	142	174	206	238	270	302	334	366	398	430	462	494	
1	1	1	1	0	15	47	79	111	143	175	207	239	271	303	335	367	399	431	463	495	
0	0	0	0	1	16	48	80	112	144	176	208	240	272	304	336	368	400	432	464	496	
1	0	0	0	1	17	49	81	113	145	177	209	241	273	305	337	369	401	433	465	497	
0	1	0	0	1	18	50	82	114	146	178	210	242	274	306	338	370	402	434	466	498	
1	1	0	0	1	19	51	83	115	147	179	211	243	275	307	339	371	403	435	467	499	
0	0	1	0	1	20	52	84	116	148	180	212	244	276	308	340	372	404	436	468	500	
1	0	1	0	1	21	53	85	117	149	181	213	245	277	309	341	373	405	437	469	501	
0	1	1	0	1	22	54	86	118	150	182	214	246	278	310	342	374	406	438	470	502	
1	1	1	0	1	23	55	87	119	151	183	215	247	279	311	343	375	407	439	471	503	
0	0	0	1	1	24	56	88	120	152	184	216	248	280	312	344	376	408	440	472	504	
1	0	0	1	1	25	57	89	121	153	185	217	249	281	313	345	377	409	441	473	505	
0	1	0	1	1	26	58	90	122	154	186	218	250	282	314	346	378	410	442	474	506	
1	1	0	1	1	27	59	91	123	155	187	219	251	283	315	347	379	411	443	475	507	
0	0	1	1	1	28	60	92	124	156	188	220	252	284	316	348	380	412	444	476	508	
1	0	1	1	1	29	61	93	125	157	189	221	253	285	317	349	381	413	445	477	509	
0	1	1	1	1	30	62	94	126	158	190	222	254	286	318	350	382	414	446	478	510	
1	1	1	1	1	31	63	95	127	159	191	223	255	287	319	351	383	415	447	479	511	

DIP-switch Position                      DMX Address

# Technical Specifications

## WEIGHT & DIMENSIONS

Length.....	355.6 mm (14.0 in)
Width.....	247.65 mm (9.75 in)
Height.....	165.1 mm (6.5 in)
Weight.....	2.22 Kgs (4.9 lbs)
Master Pack.....	(4 pcs) 12.84 Kgs (28.3 lbs)

## POWER

Operating Voltage.....	90V ~ 240V 50/60 Hz
AC input.....	IEC 60320 C14
Current draw.....	(peak <12W @ 120V), (inrush <24W @ 120V)

## FUSE

Main.....	20mm Glass 2A Fast Blow
-----------	-------------------------

## LED

Quantity.....	192 Total, (Red 64, Green 64, Blue 64)
---------------	--

Beam Angle.....	28°
Illuminance.....	(51.3fc or 552lux) @ 1 meter

## CONTROL & PROGRAMMING

Data input.....	locking 3-pin XLR male socket
Data output.....	locking 3-pin XLR female socket
Data pin configuration.....	pin 1 shield, pin 2 (-), pin 3 (+)
Protocols.....	DMX-512 USITT
DMX Channels.....	6

## ORDERING INFORMATION

LED Techno Strobe RGB™.....	LED-ST4000RGB
-----------------------------	---------------



# Contact Us

## Worldwide

### General Information

Chauvet Lighting  
 5200 NW 108th Avenue  
 Sunrise, FL 33351  
 voice: 954.929.1115  
 fax: 954.929.5560  
 toll free: 800.762.1084

### Technical Support

Chauvet Lighting  
 5200 NW 108th Avenue  
 Sunrise, FL 33351  
 voice: 954.929.1115 **(Press 4)**  
 fax: 954.929.5560 **(Attention: Service)**

### World Wide Web

[www.chauvetlighting.com](http://www.chauvetlighting.com)