


# Q-Spot™ 575

## USER MANUAL

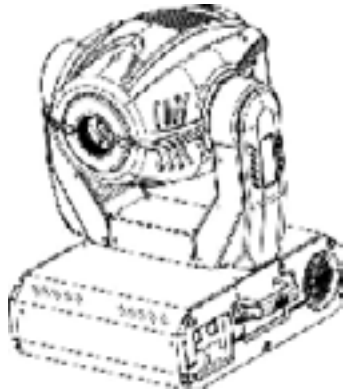

**CHAUVET.**  
*Value · Innovation · Performance*

CHAUVET, 3000 N 29<sup>th</sup> Ct, Hollywood, FL 33020 U.S.A  
(800) 762-1084 – (954) 929-1115  
FAX (954) 929-5560  
[www.chauvetlighting.com](http://www.chauvetlighting.com)

# Table of Content

<b>BEFORE YOU BEGIN.....</b>	<b>3</b>
WHAT IS INCLUDED .....	3
UNPACKING INSTRUCTIONS.....	3
AC POWER .....	3
SAFETY INSTRUCTIONS.....	3
<b>INTRODUCTION .....</b>	<b>4</b>
TECHNICAL FEATURES.....	4
FEATURES.....	4
DMX CHANNEL SUMMARY .....	4
PRODUCT OVERVIEW.....	5
<b>SETUP .....</b>	<b>6</b>
LAMP .....	6
Maximizing the life of your lamp.....	6
Lamp Installation .....	6
POWER .....	7
EXCHANGING GOBOS .....	7
MOUNTING .....	7
MOUNTING .....	8
<b>OPERATING INSTRUCTIONS.....</b>	<b>9</b>
CONTROL PANEL .....	9
CONTROL PANEL FUNCTIONS.....	9
APPLYING CHANGES TO FUNCTIONS (QUICK INSTRUCTIONS) .....	9
OPERATING MODES.....	10
Master/Stand Alone.....	10
Setting Slave Fixtures .....	10
DMX Mode.....	10
Daisy Chain Connection.....	10
DMX-512 addressing.....	11
Setting the starting address .....	11
User Configurations .....	11
Pan Invert & Tilt Invert.....	11
Color Wheel (split colors) .....	11
Service Functions .....	11
Fixture Reset (all motors).....	11
<b>APPENDIX .....</b>	<b>12</b>
DMX PRIMER .....	12
Fixture Linking .....	12
DMX VALUES .....	13
MAINTENANCE.....	15
RETURNS PROCEDURE .....	15
CLAIMS .....	15
GOBO IMAGES .....	15
GENERAL TROUBLESHOOTING .....	16
TECHNICAL SPECIFICATIONS.....	17
TECHNICAL SUPPORT .....	17

# BEFORE YOU BEGIN

## What is included


- Q-Spot™ 575
- 5 extra gobos
- Power cord with plug
- HMI-575 Discharge lamp
- Manual
- Warranty Card
- 230V fuse

## Unpacking Instructions

Immediately upon receiving a fixture, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

## AC Power

To determine the power requirements for a particular fixture, see the label affixed to the back plate of the fixture or refer to the fixture's specifications chart. A fixture's listed current rating is its average current draw under normal conditions. All fixtures must be powered directly off a switched circuit and cannot be run off a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel is used solely for a 0% to 100% switch. Before applying power to a fixture, check that the source voltage matches the fixture's requirement. Check the fixture or device carefully to make sure that if a voltage selection switch exists that it is set to the correct line voltage you will use.

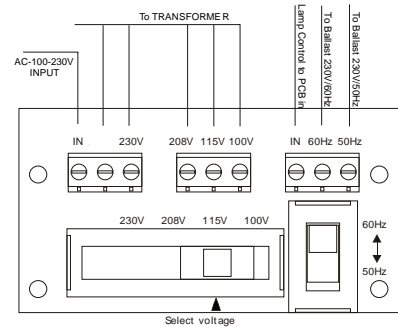

### Warning!

**Verify that the internal multi-tap transformer is set to match the line voltage applied. All fixtures must be connected to circuits with a suitable Earth Ground.**

## Safety Instructions



Please read these instructions carefully, which includes important information about the installation, usage and maintenance?



- Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.
- Always make sure that you are connecting to the proper voltage and that the line voltage you are connecting to is not higher than that stated on decal or rear panel of the fixture.
- This product is intended for indoor use only!
- To prevent risk of fire or shock, do not expose fixture to rain or moisture. Make sure there are no flammable materials close to the unit while operating.
- The unit must be installed in a location with adequate ventilation, at least 50cm (20in) from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Always disconnect from power source before servicing or replacing lamp or fuse and be sure to replace with same lamp source.
- Secure fixture to fastening device using a safety chain. Never carry the fixture solely by its head. Use its carrying handles.
- Maximum ambient temperature is  $T_a: 40^\circ$ . Do not operate fixture at temperatures higher than this.
- In the event of serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- Don't connect the device to a dimmer pack.
- Make sure power cord is never crimped or damaged.
- Never disconnect power cord by pulling or tugging on the cord.
- Avoid direct eye exposure to lamp while it is on.

### Caution!

**There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs yourself. In the unlikely event your unit may require service, please contact CHAUVET.**

# INTRODUCTION

## Technical Features

- 16 channel DMX-512 moving yoke
- Pan: 540° / Tilt: 280°
  - 16 bit movement resolution
  - 21° beam angle
- Pan/Tilt speed channel
- Lamp ON/OFF
- Remote fixture reset
- Color wheel
  - 8 colors + white
  - 1 split color & 1 quad-color
  - Rainbow color spin in both directions at variable speeds
  - Linear color wheel movement for color splits
- 3-facet high speed rotating prism
  - Rotating prism in both directions at variable speeds
- Static gobo wheel
  - 9 interchangeable gobos + open
  - Gobo wheel spin in both directions at variable speeds
- Rotating gobos
  - 6 interchangeable rotating plus open
  - 3 metal, 3 dichroic installed
  - Additional gobos: 1 dichroic & 4 metal
  - Rotating gobo wheel spin in both directions at variable speeds
- Motorized focus
- Variable strobe/shutter
- Mechanical dimmer (0~100%)


## Features

- Automatic Pan & Tilt correction
- Micro-stepping motors
- LED display
- Display auto off
- Thermal switch
- Fan cooled
- Removable air filter

## DMX Channel Summary

CHANNEL	FUNCTION	CHANNEL	FUNCTION
1	Pan	9	Prism Rotation
2	Tilt	10	Static Gobos
3	Pan (Fine) 16 bit	11	Rotating Gobos
4	Tilt (Fine) 16 bit	12	Gobo Rotation
5	Pan/Tilt Speed	13	No Function
6	Lamp on/off & reset	14	Motorized Focus
7	Colors	15	Shutter/Strobe
8	Prism	16	Dimmer

# Product Overview

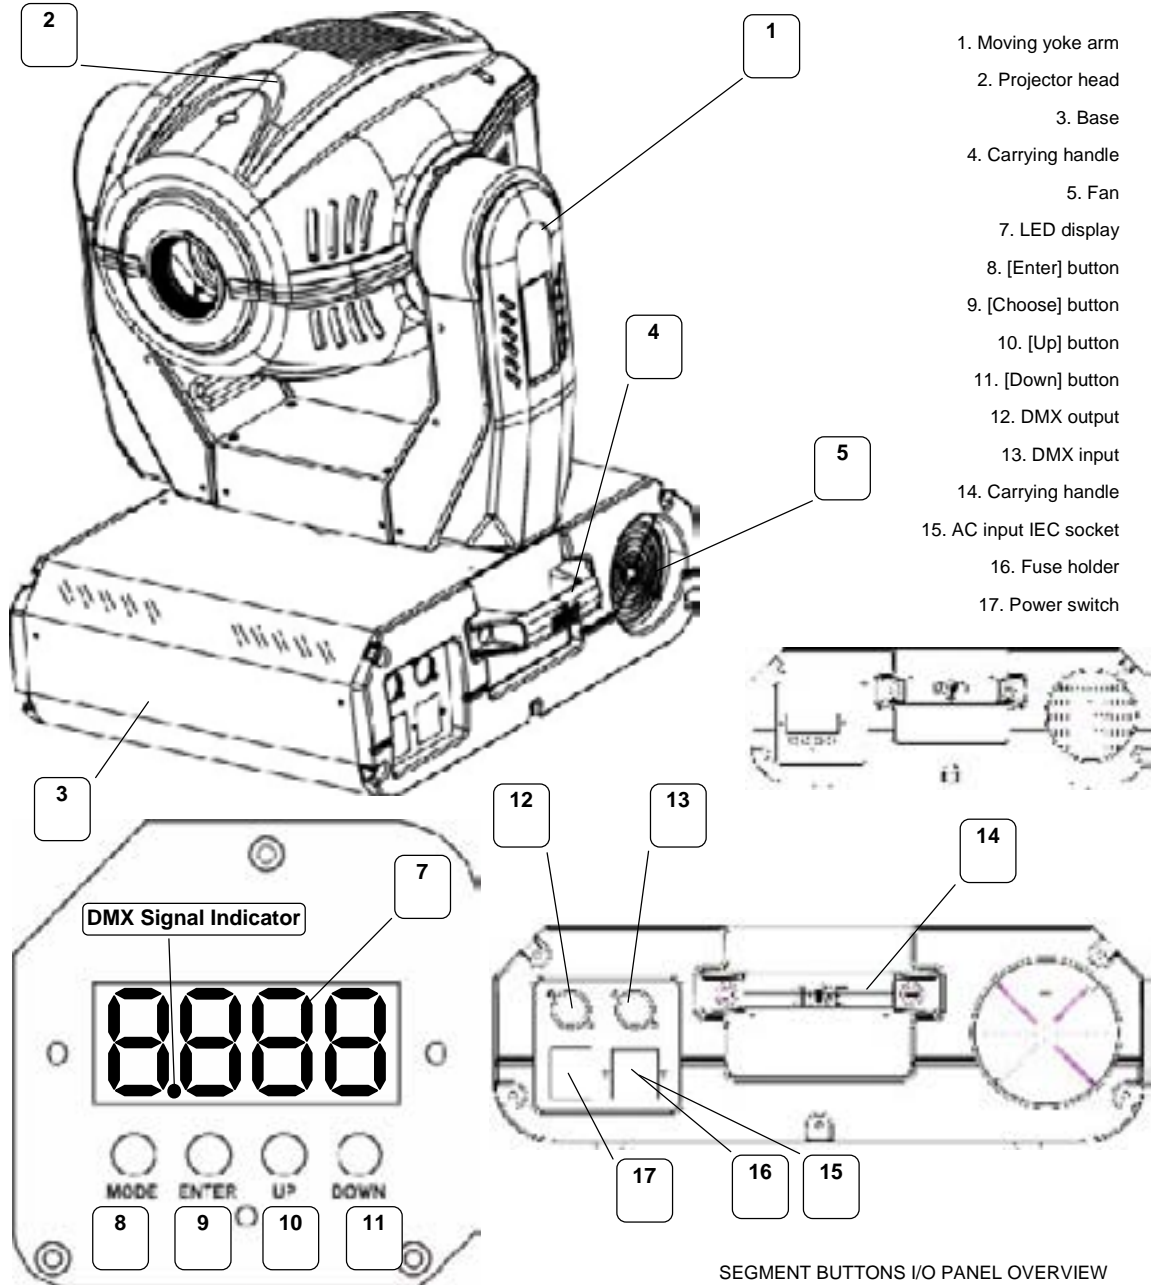

- 1. Moving yoke arm
- 2. Projector head
- 3. Base
- 4. Carrying handle
- 5. Fan
- 7. LED display
- 8. [Enter] button
- 9. [Choose] button
- 10. [Up] button
- 11. [Down] button
- 12. DMX output
- 13. DMX input
- 14. Carrying handle
- 15. AC input IEC socket
- 16. Fuse holder
- 17. Power switch

BUTTONS	
<b>MODE</b>	Toggles programming functions
<b>DOWN</b>	Steps backward through menu functions
<b>UP</b>	Steps forward through menu functions
<b>ENTER</b>	Confirms selected menu function

I/O PANEL	
<b>DMX Out &amp; In</b>	DMX-512 connectors
<b>Power</b>	AC input IEC 60320 C14 and fuse holder

# SETUP

## LAMP

### Maximizing the life of your lamp

**To ensure the longest and most efficient use of the lamp always wait between 10 and 15 minutes before re-applying power after a shutdown.**

**Failure to do so could result in premature aging of the lamp and failure to the electronics that drive it.**

You will need to install a lamp prior to the initial operation of the fixture. A HMI575 high intensity discharge lamp is included. Do not touch the envelope (glass area) of the bulb with bare hands. If this happens, clean the lamp with alcohol and wipe it with a lint free cloth before installation.

### Lamp Installation

1. Unscrew (S1) to detach the top cover.


2. Unscrew (S2) to remove lamp cover and expose lamp compartment.

3. If installing a new lamp, loosen both screws on the double ended lamp to allow for the lamp to slide into the lamp socket slots. Lower lamp evenly.

4. If replacing a lamp, loosen both lamp screws (S3) to relieve tension from lamp socket slots so you can slide the lamp freely, upwards and out of lamp socket. Raise lamp evenly to remove.

5. Before you tighten the lamp end screws, rotate the bulb until the nipple on the envelope (N) of the bulb is facing upwards as illustrated.

6. **DO NOT OPERATE UNIT WITHOUT LAMP AND FIXTURE COVERS SECURELY REPLACED!**

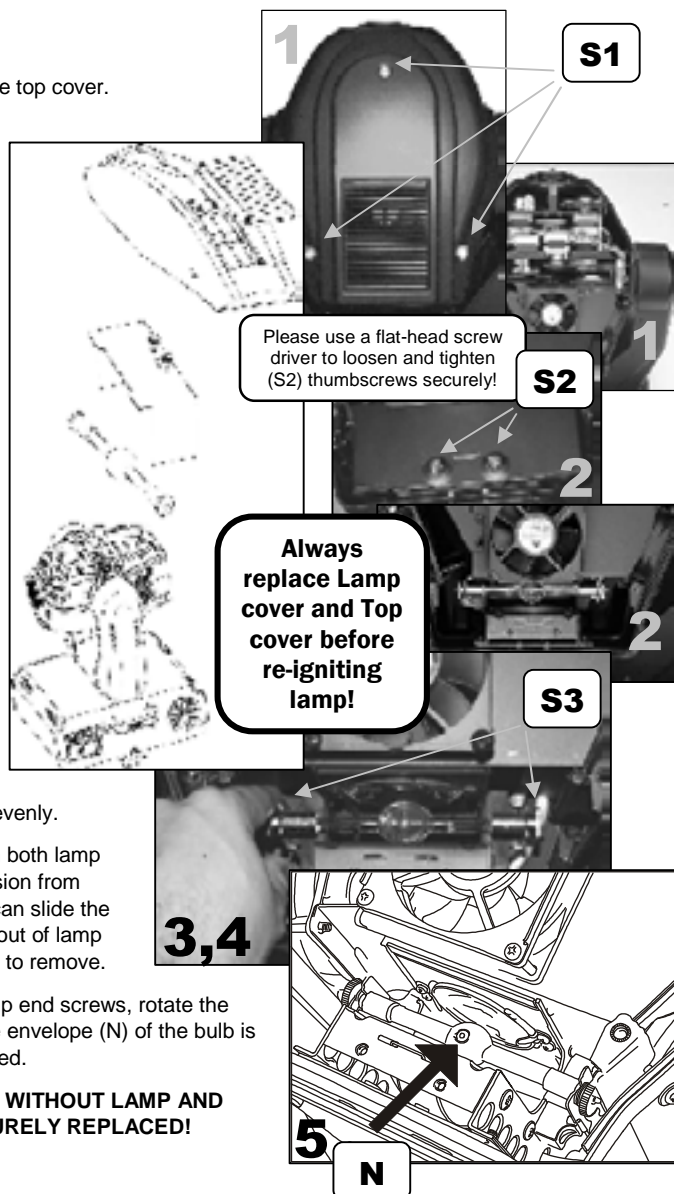

## Power


### Warning!

**Verify that the internal multi-tap transformer is set to match the line voltage applied and that the proper fuse is installed for the appropriate voltage setting. All fixtures must be connected to circuits with a suitable Earth Ground.**

#### CAUTION!

This lighting fixture comes from the factory with a 120V fuse pre-installed. To operate this fixture in 230V, please replace the external fuse with the supplied 230V fuse.

- To determine the power requirements for a particular fixture, see the label affixed to the back plate of the fixture or refer to the fixture's specifications chart.
- A fixture's listed current rating is its average current draw under normal conditions.
- All fixtures must be powered directly off a switched circuit and cannot be run off a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel is used solely for a 0% to 100% switch.
- Before applying power to a fixture, check that the source voltage matches the fixture's requirement.
- All fixtures must be connected to circuits with a suitable Earth Ground.

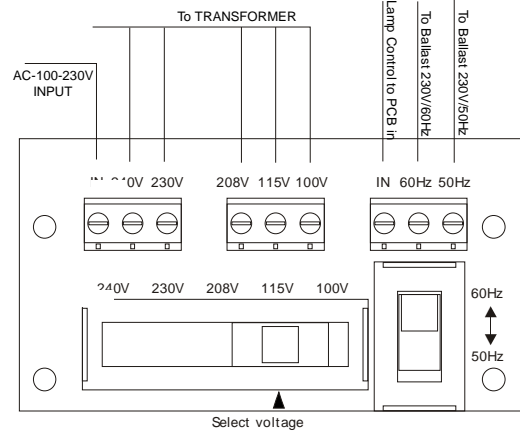

POWER CABLE	PIN	INTERNATIONAL
BROWN	Live	L
BLUE	Neutral	N
YELLOW/GREEN	Earth	EG (Ground)


  

OPERATING VOLTAGE	MUST USE CORRECT FUSE
120V	15A
230V	6.3A

## Exchanging gobos

- Press both tips of the gobo tension ring together and remove from aperture.
- Push the gobo with your finger from the back side following the same direction that the tension ring was removed.

Q-Spot™ 575 Gobo Wheel

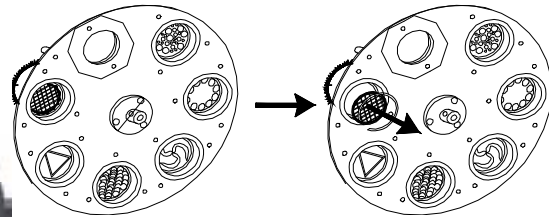

Gobo outside diameter: 31 mm  
 Gobo Image diameter: 22.5 mm  
 Rotating gobo max thickness: 3 mm  
 Static gobo max thickness: 2mm

Extra Gobos for the Q-Spot™ 575



## Mounting

### Orientation


The Q-Spot™ 575 can sit on stage or be mounted on a truss using a clamp in any position, provided, there is adequate room for ventilation.

### Warning

It is important never to obstruct the fan or vents pathway.

- The installation of the projector has to be built and constructed in a way that it can hold 10 times the weight for 1 hour without any harming deformation.
- The installation must always be secured with a secondary safety attachment, e.g. an appropriate catch net. This secondary safety attachment must be constructed in a way that no part of the installation can fall down if the main attachment fails.
- When rigging, de-rigging or servicing the fixture staying in the area below the installation place, on bridges, under high working places and other endangered areas is forbidden.
- **IMPORTANT! OVERHEAD RIGGING REQUIRES EXTENSIVE EXPERIENCE**, including (but not limited to) calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the projector. If you lack these qualifications, do not attempt the installation yourself, but instead use a professional structural rigger. Improper installation can result in bodily injury and or damage to property.
- The projector should be installed out of the reach of people.
- When selecting installation location, take into consideration lamp replacement access and routine maintenance.
- Safety cables should always be used.
- Never mount in places where the fixture will be exposed to rain, high humidity, extreme temperature changes or restricted ventilation.
- The fixture must have a minimum of 1 meter from combustible materials.

### Mounting Bracket

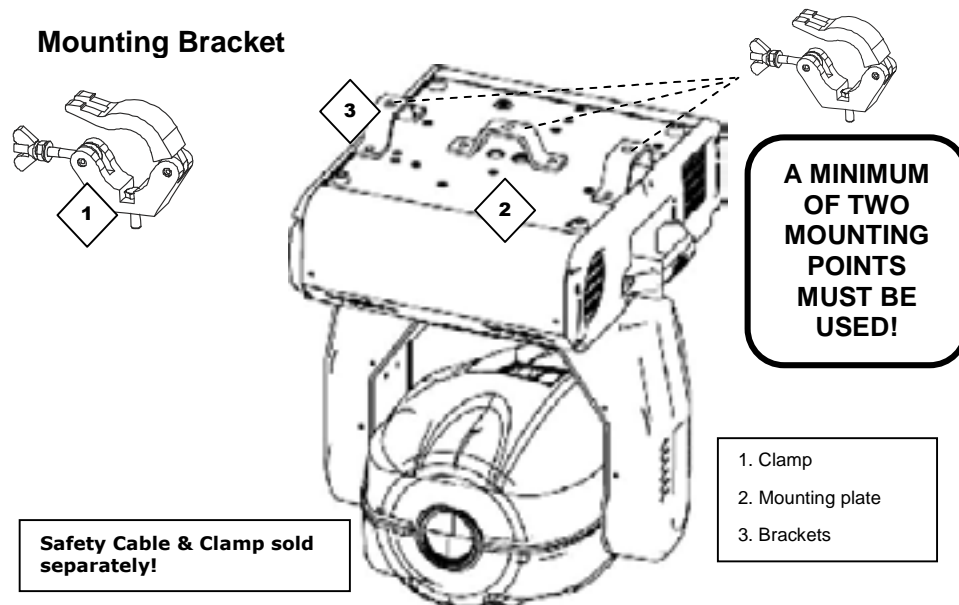

### Rigging

The Q-Spot™ 575 includes 3 mounting bracket to which rigging clamps can be bolted.

1. Verify the structure can hold 10 times the weight of all to-be installed fixtures.
2. From a stable platform, attach two clamps as illustrated on drawing above.



# OPERATING INSTRUCTIONS

## Control Panel

Please be aware that after 12 seconds of no control panel activity the LEDs in the display will turn off. Press any button to initialize.

On the control panel you can set the DMX address, set the fixture to Master/Slave mode, reset the fixture and change fixture personality trait.



**[MODE]** Confirms selection

**[ENTER]** Access to main menu

**[Up]** Toggle menu items in a forward direction

**[Down]** Toggle menu items in a reverse direction

## Control Panel Functions

FUNCTION	OPTIONS	NOTES
PAN	NO/YES	Pan Invert
Tilt	NO/YES	Tilt Invert
Addr	A001	DMX Channel Address
rEst	YES	Fixture reset
COLI	NO/YES	Linear progression of color wheel (split colors)
RUN	dn.Co. Pr6.1 Pr6.2 SLAE Sou.1 Sou.2	DMX-512 Mode Automatic Program 1 (when mounted upside down) Automatic Program 2 (when floor positioned) Slave Mode Music Program 1 (when mounted upside down) Music Program 2 (when floor positioned)
LAMP	ON OFF	Lamp on Lamp off
VEr	1.X	Software version
HEAt	Status	Too hot to strike or no lamp
LA.Er	Status	Lamp error

## Applying changes to Functions (Quick Instructions)

Unless other wise stated changes in the control panel can be applied in the following manner.

1. Press **[MODE]** button repeatedly until the display reads the menu function you wish to change as illustrated in the table above in section "Control Panel Functions"
2. Press the **[ENTER]** key to confirm the selection
3. Press the **[Up]** or **[Down]** button to toggle between the options available for that particular menu function.
4. Press the **[Enter]** button to store your selection.

## Operating Modes

- A stand-alone mode will listen to sound and run through its diverse range of built in programs.
- Master/Slave mode will allow the command of up to as many units you want in a synchronized light show to the sound.
- DMX control mode will provide the greatest flexibility and creativity. Each fixture trait can be controlled individually using any universal DMX-512 controller.

### Master/Stand Alone

Two options are available, a sound-active mode or an automatic mode. In sound-active mode the internal programs are triggered by the beat of the sound. In automatic mode the internal programs run at the chase time pre-recorded. It is your choice to enable each fixture to run in Stand Alone mode by activating either of the two functions below or to proceed to enable slave fixtures as described in the following section.

MENU	SET TO	NOTES
RUN	Pr6.1	Auto 1 (use when fixture is flown and hangs upside down)
	Sou.1	Music 1 (use when fixture is flown and hangs upside down)
	Pr6.2	Auto 2 (use when fixture is floor positioned)
	Sou.2	Music 2 (use when fixture is floor positioned)

### Setting Slave Fixtures

The Master/Slave mode will allow you to link multiple units in a daisy chain fashion. In this mode, the first unit in the daisy chain, the master, will automatically command all other units following. The first unit will operate in a Stand/Alone mode and all units following will synchronize to the first unit.

MENU	SET TO	NOTES
RUN	SLAE	Slave mode

You can Invert the Pan and Tilt settings freely.


### DMX Mode

Operating in a DMX Control mode environment gives the user the greatest flexibility when it comes to customizing or creating a show. You can tailor your programming to suit a specific event. Whether it is a wedding where a spot light may be required or a lead singer requiring a color solo, the opportunities are endless. In this mode you will be able to control each individual trait of the fixture independently.

MENU	SET TO	NOTES
RUN	dn.Co.	DMX-512 mode

### Daisy Chain Connection

1. Connect the (male) 3 pin connector side of the DMX cable to the output (female) 3 pin connector of the first fixture.
2. Connect the end of the cable coming from the first fixture which will have a (female) 3 pin connector to the input connector of the next fixture consisting of a (male) 3 pin connector. Then, proceed to connect from the output as stated above to the input of the following fixture and so on.

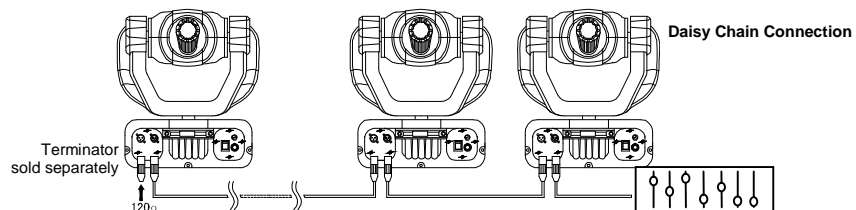

## DMX-512 addressing

This mode enables the use of a universal DMX controller device. Each fixture requires a "start address" from 1 to 511. A fixture requiring one or more channels for control begins to read the data on the channel indicated by the start address. For example, a fixture that occupies or uses 6 channels of DMX and was addressed to start on DMX channel 100, would read data from channels: 100, 101, 102, 103, 104, and 105. Choose start addresses so that the channels used do not overlap and notate the start address selected for future reference.

If this is your first time addressing a fixture using the DMX-512 control protocol than I suggest jumping to the Appendix Section and read the heading "DMX Primer". It contains very useful information that will help you understand its use.

### Setting the starting address

1. Press the **[MENU]** button until the display reads "Addr".
2. Press the **[ENTER]** button confirm selection.
3. Press the **[Up]** and **[Down]** buttons to increase or decrease values until the desired value is achieved.
4. Press the **[Enter]** button to activate selection.

## User Configurations

### Pan Invert & Tilt Invert

It is possible to invert the pan and tilt head movement from within the fixture itself. This could be helpful in situations where the positioning or rigging of a fixture led to a reverse orientation of the fixture in relation to all or most other fixtures installed. When choosing to command the pan or tilt of all fixtures at the same time you will notice that the fixtures whose orientation is different from the others will most likely move opposite of the rest. You can apply a pan and tilt Invert by following the settings in the table below.

FUNCTION	SET TO	NOTES
PAN	YES	Pan Invert
tiLt	YES	Tilt Invert

### Color Wheel (split colors)

Linear progression or advancement of the color wheel will enable you to stop anywhere in between two adjacent colors.

FUNCTION	SET TO	NOTES
COLI	YES	With linear progression or advancement of the color wheel split colors will be achieved.

## Service Functions

### Fixture Reset (all motors)

This function will re-initialize the fixture by returning all motors to its startup positions or otherwise known as (home position).


FUNCTION	SET TO	NOTES
rESt	[ENTER]	Reset fixture

# APPENDIX

## DMX Primer

There are 512 channels in a DMX-512 connection. Channels may be assigned in any manner. A fixture capable of receiving DMX-512 will require one or a number of sequential channels. The user must assign a starting address on the fixture that indicates the first channel reserved in the controller. There are many different types of DMX controllable fixtures and they all may vary in the total number of channels required. Choosing a start address should be planned in advance. Channels should never overlap. If they do, this will result in erratic operation of the fixtures whose starting address is set incorrectly. You can however, control multiple fixtures of the same type using the same starting address as long as the intended result is that of unison movement or operation. In other words, the fixtures will be slaved together and all respond exactly the same.

DMX fixtures are designed to receive data through a serial Daisy Chain. A Daisy Chain connection is where the DATA OUT of one fixture connects to the DATA IN of the next fixture. The order in which the fixtures are connected is not important and has no effect on how a controller communicates to each fixture. Use an order that provides for the easiest and most direct cabling. Connect fixtures using shielded two conductor twisted pair cable with three pin XLR male to female connectors. The shield connection is pin 1, while pin 2 is Data Negative (S-) and pin 3 is Data positive (S+). CHAUVET carries 3-pin XLR DMX compliant cables, DMX-10 (33'), DMX-4.5 (15') and DMX-1.5 (5')

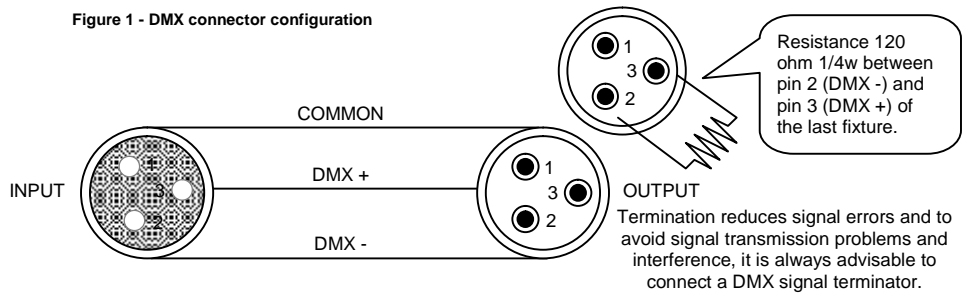

## Fixture Linking

**Note!**

**If you use a controller with a 5 pin DMX output connector, you will need to use a 5 pin to 3 pin adapter. CHAUVET Model No: DMX5M. The chart below details a proper cable conversion:**

3 PIN TO 5 PIN CONVERSION CHART

Conductor	3 Pin Female (output)	5 Pin Male (Input)
Ground/Shield	Pin 1	Pin 1
Data ( - ) signal	Pin 2	Pin 2
Data ( + ) signal	Pin 3	Pin 3
Do not use		Do not use
Do not use		Do not use

## DMX Values

CHANNEL	VALUE	FUNCTION		
1	000 ⇔ 255	<b>Pan</b> Left > Right ( 128 = center)		
2	000 ⇔ 255	<b>Tilt</b> Up > Down (128 = center)		
3	000 ⇔ 255	<b>Pan (Fine)</b> 16 bit		
4	000 ⇔ 255	<b>Tilt (Fine)</b> 16 bit		
5	000 ⇔ 255	<b>Pan/Tilt Speed</b> Fast > Slow		
6	000 ⇔ 127	<b>Lamp on/off &amp; Reset</b> No Function		
	128 ⇔ 139	Lamp on after 3 seconds when lamp is off Fixture reset when lamp is on		
	140 ⇔ 229	No Function		
	230 ⇔ 239	Lamp off after 3 seconds		
	240 ⇔ 255	No Function		
7	000	<b>Color Wheel (Linear)</b> White (Open)	000 ⇔ 007	<b>Color Wheel (Step)</b> White (Open)
	006	White/Blue	008 ⇔ 019	Blue
	012	Blue	020 ⇔ 031	Orange
	018	Blue/Orange	032 ⇔ 043	Quad Color
	024	Orange	044 ⇔ 055	UV
	030	Orange/Quad	056 ⇔ 067	Rose-Red
	036	Yellow/Green/Sky Blue/Orange	068 ⇔ 079	Red
	042	Quad/UV	080 ⇔ 091	Orange-Sky Blue
	048	UV	092 ⇔ 103	Yellow
	053	UV/Rose-Red	104 ⇔ 115	Pink
	059	Rose-Red	116 ⇔ 127	Green
	065	Rose-Red/Red	128 ⇔ 255	Rainbow effect: Fast > Slow (clockwise)
	071	Red		
	076	Red/Orange-Sky Blue		
	082	Orange-Sky Blue		
	088	Orange-Sky Blue/Yellow		
	094	Yellow		
	100	Yellow/Pink		
	106	Pink		
	111	Pink/Green		
117	Green			
122	Green/White			
128 ⇔ 255	Rainbow effect: Fast > Slow (clockwise)			
8	000 ⇔ 127	<b>Prism</b> No Function		
	128 ⇔ 255	3-facet prism		
9	000 ⇔ 004	<b>Prism Rotation</b> No rotation		
	005 ⇔ 127	Clockwise rotation: Fast > Slow		
	128 ⇔ 132	No rotation		
	133 ⇔ 255	Counter-clockwise rotation: Slow > Fast		

Continued on the next page...

CHANNEL	VALUE	FUNCTION
10		<b>Static Gobos</b>
	000 ⇔ 009	Open/White
	010 ⇔ 019	Gobo 1
	020 ⇔ 029	Gobo 2
	030 ⇔ 039	Gobo 3
	040 ⇔ 049	Gobo 4
	050 ⇔ 059	Gobo 5
	060 ⇔ 069	Gobo 6
	070 ⇔ 079	Gobo 7
	080 ⇔ 089	Gobo 8
	090 ⇔ 099	Gobo 9
	100 ⇔ 109	Open
	110 ⇔ 119	Gobo Bounce: Gobo 1 (Slow > Fast)
	120 ⇔ 129	Gobo Bounce: Gobo 2 (Slow > Fast)
	130 ⇔ 139	Gobo Bounce: Gobo 3 (Slow > Fast)
	140 ⇔ 149	Gobo Bounce: Gobo 4 (Slow > Fast)
	150 ⇔ 159	Gobo Bounce: Gobo 5 (Slow > Fast)
	160 ⇔ 169	Gobo Bounce: Gobo 6 (Slow > Fast)
	170 ⇔ 179	Gobo Bounce: Gobo 7 (Slow > Fast)
	180 ⇔ 189	Gobo Bounce: Gobo 8 (Slow > Fast)
190 ⇔ 199	Gobo Bounce: Gobo 9 (Slow > Fast)	
200 ⇔ 255	Gobo Scroll: Slow > Fast	
11		<b>Rotating Gobo</b>
	000 ⇔ 029	Open/White
	030 ⇔ 059	Gobo 1
	060 ⇔ 089	Gobo 2
	090 ⇔ 119	Gobo 3
	120 ⇔ 149	Gobo 4
	150 ⇔ 179	Gobo 5
	180 ⇔ 209	Gobo 6
210 ⇔ 255	Gobo Scroll: Slow > Fast	
12		<b>Gobo Rotation</b>
	000 ⇔ 060	Gobo progressive rotation (0 ~ 540°)
	061 ⇔ 158	Clockwise rotation: Slow > Fast
159 ⇔ 255	Counter-clockwise rotation: Slow > Fast	
13		<b>No Function</b>
14		<b>Focus</b>
	000 ⇔ 225	Far > Near
15		<b>Shutter/Strobe</b>
	000 ⇔ 031	Closed
	032 ⇔ 063	Open
	064 ⇔ 095	Strobe: Slow > Fast (max 10fps)
	096 ⇔ 127	Open
	128 ⇔ 159	Pulse: Slow > Fast
	160 ⇔ 191	Open
	192 ⇔ 223	Random: Slow > Fast
224 ⇔ 255	Open	
16		<b>Dimmer</b>
	000 ⇔ 225	Intensity: 0 ~ 100%

## Maintenance

To maintain optimum performance and minimize wear fixtures should be cleaned frequently. Usage and environment are contributing factors in determining frequency. As a general rule, fixtures should be cleaned at least twice a month. Dust build up reduces light output performance and can cause overheating. This can lead to reduced lamp life and increased mechanical wear. Be sure to power off fixture before conducting maintenance.

Unplug fixture from power. Use a vacuum or air compressor and a soft brush to remove dust collected on external vents and internal components. Clean all glass when the fixture is cold with a mild solution of glass cleaner or Isopropyl Alcohol and a soft lint free cotton cloth or lens tissue. Apply solution to the cloth or tissue and drag dirt and grime to the outside of the lens. Gently polish optical surfaces until they are free of haze and lint. Do not touch the lamp glass when cleaning fixture. Oil and dirt can cause damage and premature aging of the lamp. In the event that the lamp is touched or becomes dirty, clean the lamps with an alcohol wipe.

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics. Clean with soft cloth using normal glass cleaning fluid. - Always dry the parts carefully. - Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days.

## Returns Procedure

Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Merchandise Authorization Number (RA #). Products returned without an RA # will be refused. Call CHAUVET and request RA # prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. CHAUVET reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

## Claims

Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise. It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Any other claim for items such as missing component/part, damage not related to shipping, and concealed damage, must be made within seven (7) days of receiving merchandise.

## Gobo Images



Rotating Gobos



Static Gobos

## General Troubleshooting

Symptom	Solution(s)	Applies to			
		Lights	Foggers & Snow	Controllers	Dimmers & Chaser
Auto shut off	Check fan thermal switch reset	✓			
Beam is very dim or not bright	Clean optical system or replace lamp Check 220/110v switch for proper setting	✓			
Breaker/Fuse keeps blowing	Check total load placed on device				✓
Chase is too slow	Check users manual for speed adjustment	✓		✓	✓
Device has no power	Check for power on Mains. Check device's fuse. (internal and/or external)	✓		✓	✓
Fixture is not responding	Check DMX Dip switch settings for correct addressing Check DMX cables Check polarity switch settings	✓			
Fixture is on but there is no movement to the audio	Make sure you have the correct audio mode on the control switches. If audio provided via ¼" jack, make sure a live audio signal exists Adjust sound sensitivity knob	✓		✓	✓
Lamps cuts off sporadically	Possible bad lamp or fixture is overheating. Lamp may be at end of its life.	✓			
Light will not come on after power failure	Some discharge lamps require a cooling off period before the electronics in the fixture can kick start it again, wait 5 to 10 minutes before powering up	✓			
Loss of signal	Use only DMX cables Install terminator Note: Keep DMX cables separated from power cables or black lights.	✓	✓	✓	✓
Motor movements are jerky or jumpy	Possible bad motor driver or sensors Check polarity switch on controller	✓		✓	
Moves slow	Check 220/110v switch for proper setting	✓			
No flash	Re-install bulb, may have shifted in shipping	✓			
No light output	Check slip ring & brushes for contact Install bulb Call service technician	✓			
Relay will not work	Check reset switch Check cable connections				✓
Remote does not work	Make sure connector is firmly connected to device	✓	✓		
Stand alone mode	All CHAUVET lighting fixtures featuring stand-alone functions do not require additional settings, simply power the fixture and it will automatically enter into this mode	✓			
Unit wobbles when rotating	Check for damages possibly incurred during shipping	✓			



## Technical Specifications

### WEIGHT & DIMENSIONS

Length.....	404 mm (15.9 in)
Width.....	348 mm (13.7 in)
Height.....	529 mm (25.4 in)
Weight.....	33.6 Kgs (74 lbs)

### POWER

Internal multi-tap transformer .....	100V, 115V, 208V, 230V, 50 Hz or 60Hz
AC input.....	3 prongs IEC
European version.....	240V 50 Hz
Current draw .....	(inrush 1133W @ 120V), (peak 1326W @ 120V)
Current draw .....	(inrush 1050W @ 230V), (peak 1978W @ 230V)

### LAMPS

Osram™ HMI575/GS .....	1000 hr, 6000K, 575W
------------------------	----------------------

### PHOTO OPTIC

Beam Angle .....	21°
Pan .....	540°
Tilt.....	280°

### GOBOS

Outside diameter.....	31 mm
Image diameter.....	22.5 mm
Maximum thickness.....	3 mm
Static gobo max thickness.....	2 mm

### THERMAL

Maximum ambient temperature.....	45° (113° F)
----------------------------------	--------------

### FUSE

Main (115V) .....	20mm Glass 15A Fast Blow
Main (230V) .....	20mm Glass 6.3A Fast Blow

### CONTROL & PROGRAMMING

Data input .....	locking 3-pin XLR male socket
Data output .....	locking 3-pin XLR female socket
Data pin configuration .....	pin 1 shield, pin 2 (-), pin 3 (+)
Protocols.....	DMX-512 USITT
DMX Channels (Q-SPOT575) .....	16

### ORDERING INFORMATION

Q-Spot™ 575 .....	Q-SPOT575
Fuse 15A .....	P170FUSE015
Fuse 10A .....	P170FUSE010

## Technical Support

Address:	Service Dept. 3000 N 29 <sup>th</sup> Ct, Hollywood, FL 33020 (U.S.A.)
Support (Email):	<a href="mailto:tech@chauvetlighting.com">tech@chauvetlighting.com</a>
Telephone:	(954) 929-1115 - (Press 4)
Fax:	(954) 929-5560 - (Attention: Service)
Website:.....	<a href="http://www.chauvetlighting.com">http://www.chauvetlighting.com</a>