

Wave



User Instructions

American DJ
4295 Charter Street
Los Angeles CA. 90058
www.americandj.com

Rev. 1/07

Wave

General Information

Unpacking: Thank you for purchasing the Wave by American DJ®. Every Wave has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your fixture for any damage and be sure all equipment necessary to operate the unit has arrived intact. In the event damage has been found or parts are missing, please contact our toll free customer support number for further instructions. Do not return this unit to your dealer without first contacting customer support.

Introduction: The Wave is an intelligent fixture that can operate in DMX mode, as a stand alone piece, or in a Master/Slave configuration. This piece is best used with a fog or haze machine to enhance the beam output. When used in DMX mode the fixture uses 2 DMX channels. When used as a stand alone unit or when used in multiples linked in a master/slave configuration an optional BC 30 controller may be used to control a blackout function.

Customer Support: American DJ® provides a toll free customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at www.americandj.com for any comments or suggestions. Service Hours are Monday through Friday 9:00 a.m. to 5:00 p.m. Pacific Standard Time.

Voice: (800) 322-6337

Fax: (323) 582-2941

E-mail: support@americandj.com

To purchase parts online visit <http://parts.americandj.com>

Warning! To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

Caution! There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, doing so will void your manufactures warranty. In the unlikely event your unit may require service please contact American DJ®.

Wave

Product Registration

The Wave carries a one year (365 days) limited warranty. Please fill out the enclosed warranty card to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. Please contact American DJ® customer support for a R.A. number.

Wave

Main Features

- LL-JS800 120v/800w Lamp
- DMX-512 Compatible
- Fan Cooled.
- Master/Slave Operation
- Optional BC 30 Remote Control (Not Included)

Wave

Safety Precautions

- To reduce the risk of electrical shock or fire, do not expose this unit rain or moisture
- Do not spill water or other liquids into or on to your unit.
- Be sure that the local power outlet match that of the required voltage for your unit.
- Do not attempt to operate this unit if the power cord has been frayed or broken.
- Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- Disconnect from main power before making any type of connection.
- Do not remove the cover under any conditions. There are no user serviceable parts inside.
- Never operate this unit when it's cover is removed.
- Never plug this unit in to a dimmer pack
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Do not attempt to operate this unit, if it becomes damaged.
- This unit is intended for indoor use only, use of this product outdoors voids all warranties.
- During long periods of non-use, disconnect the unit's main power.
- Always mount this unit in safe and stable matter.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
- Cleaning -The fixture should be cleaned only as recommended by the manufacturer. See page 13 for cleaning details.
- Heat -The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- The fixture should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged.
 - B. Objects have fallen, or liquid has been spilled into the appliance.
 - C. The appliance has been exposed to rain or water.
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance.


Power Supply: Before plugging your unit in, be sure the source voltage in your area matches the required voltage for your American DJ® Deco 250.™ The American DJ® Wave is available in a 120v and 220v version. Because line voltage may vary from venue to venue, you should be sure your unit voltages matches the wall outlet voltage before attempting to operate you fixture.

DMX-512: DMX is short for Digital Multiplex. This is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA “IN” and DATA “OUT” XLR terminals located on all DMX fixtures (most controllers only have a DATA “OUT” terminal).

DMX Linking: DMX is a language allowing all makes and models of different manufactures to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

Dip-switches in DMX mode: This unit uses dipswitches to assign a DMX address. Each dipswitch represents a binary value.

Dipswitch 1 address equals 1
 Dipswitch 2 address equals 2
 Dipswitch 3 address equals 4
 Dipswitch 4 address equals 8
 Dipswitch 5 address equals 16
 Dipswitch 6 address equals 32
 Dipswitch 7 address equals 64
 Dipswitch 8 address equals 128
 Dipswitch 9 address equals 256
 Dipswitch 10 - Some units omit dipswitch 10. When a unit does include

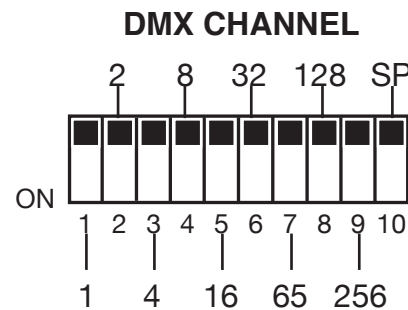

dipswitch 10 it is used for special functions such as sound activation.

Each dipswitch has a preset value. A specific DMX address is set by combining the dipswitches that sum your desired value. For example: To achieve a DMX address of 21, combine dipswitches 1, 3, and 5. Sense dipswitch 1 has a value of 1, dipswitch 3 has a value of 4, and dipswitch 5 has a value of 16, the combination of the create a DMX value of 21.

Set DMX address 21:

Dipswitch # 1 = 1
 Dipswitch # 3 = 4
 Dipswitch # 5 = 16
 = 21

Set DMX address 201:

Dipswitch # 1 = 1
 Dipswitch # 4 = 8
 Dipswitch # 7 = 64
 Dipswitch # 8 = 128
 = 201

Data Cable (DMX Cable) Requirements (For DMX and Master/Slave Operation):

The Wave can be controlled via DMX-512 protocol. The American DJ® Wave is a two channel DMX unit. The DMX address is set on the back panel of the Wave. Your unit and your DMX controller require a standard 3-pin XLR connector for data input and data output (Figure 1). If you are making your own cables, be sure to use standard two conductor shielded cable (This cable may be purchased at almost all pro sound and lighting stores). Your cables should be made with a male and female XLR connector on either end of the cable. Also remember that DMX cable must be daisy chained and can not be split.



Figure 1

Notice: Be sure to follow figures two and three when making your own cables. Do not use the ground lug on the XLR connector. Do not connect the cable's shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR's outer casing. Grounding the shield could cause a short circuit and erratic behavior.




Figure 2

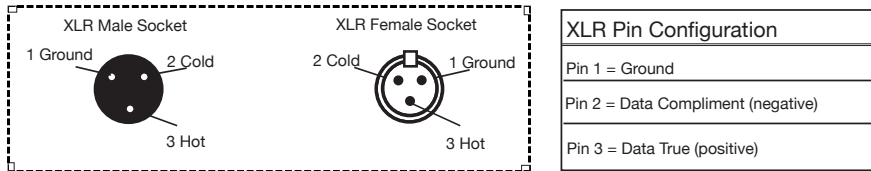


Figure 3

Special Note: Line Termination. When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behavior. A terminator is a 90-120 ohm 1/4 watt resistor which is connected between pins 2 and 3 of a male XLR connector (DATA + and DATA -). This unit is inserted in the female XLR connector of the last unit in your daisy chain to terminate the line. Using a cable terminator (ADJ part number ZDMX/T) will decrease the possibilities of erratic behavior.



Termination reduces signal errors and avoids signal transmission problems and interference. It is always advisable to connect a DMX terminal. (Resistance 120 Ohm 1/4 W) between PIN 2 (DMX-) and PIN 3 (DMX +) of the last fixture.

Figure 4

5-Pin XLR DMX Connectors. Some manufactures use 5-pin XLR connectors for DATA transmission in place of 3-pin. 5-pin XLR fixtures may be implemented in a 3-pin XLR DMX line. When inserting standard 5-pin XLR connectors in to a 3-pin line a cable adaptor must be used, these adaptors are readily available at most electric stores. The chart below details a proper cable conversion.

3-Pin XLR to 5-Pin XLR Conversion		
Conductor	3-Pin XLR Female (Out)	5-Pin XLR Male (In)
Ground/Shield	Pin 1	Pin 1
Data Compliment (- signal)	Pin 2	Pin 2
Data True (+ signal)	Pin 3	Pin 3
Not Used		Do Not Use
Not Used		Do Not Use

Operating Modes:

You may operate your Wave in two different ways:

Note: For control with the optional BC 30 remote control see page 10.

- **Stand Alone or Master/Slave Mode** - This mode allows you to run one stand alone unit or daisy chain up to 4 units together to get a synchronized light show.

- **DMX Mode** - This function will allow you to control each individual fixtures traits with a standard DMX 512 controller such as the Elation® Show Designer.™

Stand Alone or Master-Slave Operation: This function will allow you to run one unit alone or link up to 4 units together. The unit(s) will run an automatic program or you can control the unit(s) with the optional BC 30. In Master-Slave operation one unit will act as the controlling unit and the others will react to the controlling units programs. Any unit can act as a Master or as a Slave.

1. Using standard XLR microphone cables, daisy chain your units together via the XLR connector on the rear of the units. Remember the Male XLR connector is the input and the Female XLR connector is the output. The first unit in the chain (master) will use the female XLR connector only - The last unit in the chain will use the male XLR connector only. For longer cable runs we suggest a terminator at the last fixture.
2. Choose a unit to function as the Master and set dipswitch #1 to the "ON" position, and all other dipswitches to the "OFF" position. Then simply daisy chain the units together using XLR cables.
3. For SLAVE units, set dipswitches 2-9 to the "ON" position, and they will react the same as the MASTER. Note: **They cannot have the same dipswitches set to the "ON" position.**
4. The optional BC 30 Remote Control may be used with this mode to control stand-by (blackout).

Universal DMX Control: This function allows you to use a universal DMX-512 controller such as the Elation® DMX Operator™ or Show Designer.™ to control the DMX traits. Operating through a DMX controller gives freedom to create unique programs tailored to one's individual needs.

Wave	Operation
------	-----------


1. The Wave uses 2 DMX channels. Channel 1 controls the rotation speed of the lamp, and channel 2 controls the strobe effect. See page 10 for detailed description of the DMX traits.
2. To control your fixture in DMX mode, follow the set-up procedures on pages 5 - 7 as well as the set-up specifications that are included with your DMX controller. Assign a DMX address to the unit.
3. Use the controller's faders to control the various DMX fixture traits.
4. This will allow you to create your own programs.
5. For help operating in DMX operation consult the manual included with your DMX controller.
6. For longer cable runs (more than a 100 feet) use a terminator on the last fixture.

Wave	BC 30 Controls
------	----------------

Stand by	Blackout the unit	
Function	1. Strobe in synchroflash 2. Strobe in 2-light show	1. Slow speed clockwise 2. Slow speed counterclockwise
Mode	Sound (LED OFF)	Slow (LED ON)

Wave	DMX Traits
------	------------

Channel	Value	Function
1 ↓	0 - 7	<u>LAMP ROTATION</u> NO ROTATION CLOCKWISE ROTATION FAST → SLOW
	8 - 130	
↓	131	NO ROTATION COUNTERCLOCKWISE ROTATION SLOW → FAST
	132 - 255	
2 ↓	0 - 7	<u>STROBE</u> BLACKOUT SLOW → FAST STROBE FULL ON
	8 - 247	
	248 - 255	

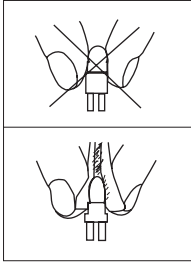

This fixture is fitted with halogen lamps which are highly susceptible to damage if improperly handled. Never touch the lamps with your bare fingers as the oil from your hands will shorten lamp life. Also, never move the fixture until the lamps have had ample time to cool. Remember, lamps are not covered under warranty conditions.


Caution: Always replace with the exact same type lamp, unless otherwise specified by an authorized American DJ® technician. Replace with anything other than the specified part can damage your unit and will void your manufactures warranty.

Warning: If you continue to blow either the lamp or the fuse, STOP using the unit. Contact customer support for further instructions, you may have to return the unit for servicing. Continuing to use the unit may cause serious damage.

Fuse Replacement: Locate and remove the unit's power cord. Once the cord has been removed located the fuse holder located inside the power socket. Insert a flat-head screw driver into the power socket and gently pry out the fuse holder. Remove the bad fuse and replace with a new one. The fuse holder has a built-in socket for a spare fuse be sure not to confuse the spare fuse with active fuse.

Lamp Replacement: Caution! Never attempt to change the lamp while the fixture is plugged in. Always disconnect the main power and allow the unit ample time to cool before attempting to replace the lamp.

1. Be sure to follow the proper handling procedures that deal with the lamp.
2. Remove the thumb screws on the top of the unit.
3. After removing the thumb screws, pull off lamp protective cover.
4. Carefully remove the old lamp by pushing in on one end of the lamp socket. **Pushing the metal ends will not do any good, you must push either of the the white ceramic sockets toward the metal piece (away from the lamp), and then slide the lamp out (See next page).** Remove the lamp and discard it in the trash.
5. Replace the lamp with an exact match and reassemble in reverse order.

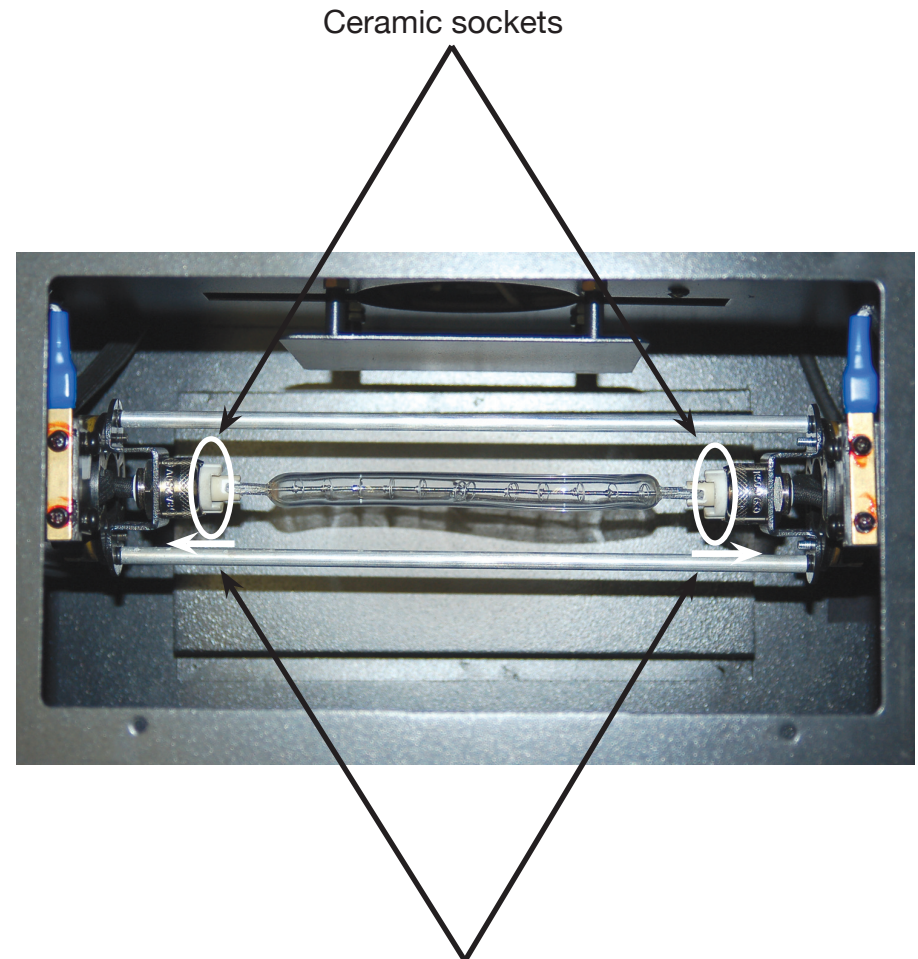

Push either of the ceramic sockets away from the lamp, then pull that side of the lamp out first.

Fixture Cleaning: Due to fog residue, smoke, and dust cleaning the internal and external optical lenses and mirror should be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates (I.e. smoke, fog residue, dust, dew). In heavy club use we recommend cleaning on a monthly basis. Periodic cleaning will ensure longevity, and crisp output.

1. Use normal glass cleaner and a soft cloth to wipe down the outside casing.
2. Use a brush to wipe down the cooling vents and fan grill.
3. Clean the external optics with glass cleaner and a soft cloth every 20 days.
4. Clean the internal optics with glass cleaner and a soft cloth every 30-60 days.
5. Always be sure to dry all parts completely before plugging the unit back in.

Trouble Shooting: Listed below are a few common problems that you may encounter, with solutions.

No light output from the unit;

1. Be sure you have connected your unit into a wall outlet with a matching power supply.
2. Be sure the fuse has not blown. The fuse is located on the rear panel of the unit.
3. Remove the lamp cover and be sure the lamp is seated in its socket properly.

1-YEAR LIMITED WARRANTY

A. American DJ® hereby warrants, to the original purchaser, American DJ® products to be free of manufacturing defects in material and workmanship for a period of 1 Year (365 days) from the date of purchase. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.

B. For warranty service, send the product only to the American DJ® factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, American DJ® will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, American DJ® shall have no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.

C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which American DJ® concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the American DJ® factory unless prior written authorization was issued to purchaser by American DJ®; if the product is damaged because not properly maintained as set forth in the instruction manual.

D. This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check-up. During the period specified above, American DJ® will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of American DJ® under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of American DJ®. All products covered by this warranty were manufactured after January 1, 1990, and bear identifying marks to that effect.

E. American DJ® reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.

F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by American DJ® in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall American DJ® be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.

G. This warranty is the only written warranty applicable to American DJ® Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

H. Lamps are not covered under this or any other warranty, either written or implied.

Technical Specifications:

Model:	Wave
Lamps:	LL-JS800, 120v/800w/240v 800w
Voltage:	120v~60Hz / 230v~50Hz
Dimensions:	13" (L) x 14.7" (W) x 9.1" (H) 329mm x 374mm x 230mm
Weight:	14.3 Lbs. / 6.5 Kgs
Breaker:	120V 15A/ 230V 10A
Duty Cycle:	None
DMX:	2 Channels
Sound Active:	Yes
Working Position:	Any Safe, Secure Position
Warranty:	1 Year (365 days)

Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.

American DJ®

©American DJ® World Headquarters:
4295 Charter Street Los Angeles, CA 90058 USA

Tel: 323-582-2650 Fax: 323-582-2610

Web: www.americandj.com E-mail: info@americandj.com