


LEG-5000

Legend™ 5000X (575W)

USER MANUAL

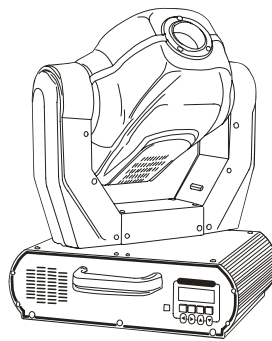

CHAUVET, 3000 N 29th Ct, Hollywood, FL 33020 U.S.A
(800) 762-1084 – (954) 929-1115
FAX (954) 929-5560
www.chauvetlighting.com

TABLE OF CONTENT

TABLE OF CONTENT	2
WHAT IS INCLUDED	3
UNPACKING INSTRUCTIONS.....	3
AC POWER	3
SAFETY INSTRUCTIONS.....	3
INTRODUCTION	4
CONTROL FEATURES	4
FEATURES.....	4
DMX CHANNEL SUMMARY	5
PRODUCT OVERVIEW.....	6
SETUP	7
LAMP.....	7
POWER	8
REPLACING GOBOS	9
MOUNTING	10
<i>Orientation</i>	10
OPERATING INSTRUCTIONS	11
CONTROL BOARD	11
CONTROL BOARD FUNCTIONS.....	11
APPLYING CHANGES TO FUNCTIONS (QUICK INSTRUCTIONS)	12
OPERATING MODE.....	12
MENU FUNCTIONS	12
<i>DMX-512 addressing</i>	12
<i>User Configurations</i>	13
<i>Segment Display Configurations</i>	14
<i>Service Functions</i>	15
<i>Self Demonstration</i>	15
APPENDIX	16
DMX PRIMER	16
DMX CHANNEL VALUES	17
<i>16 Bit Movement</i>	17
<i>8 Bit Movement</i>	18
DIP SWITCHES (SETTINGS EXPLAINED)	19
MAINTENANCE	19
<i>Air Filter</i>	19
GOBOS (ILLUSTRATED)	20
RETURNS PROCEDURE	20
CLAIMS	20
GENERAL TROUBLESHOOTING	21
TECHNICAL SPECIFICATIONS.....	22
TECHNICAL SUPPORT	22

Before You Begin

What is included

- LEG-5000, Legend™ 5000X
- Power cord with plug
- 9 additional metal gobos
- HMI575 Discharge lamp
- 2 Clamp mounting brackets
- Manual
- Warranty Card

Unpacking Instructions

Immediately upon receiving a fixture, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

AC Power

To determine the power requirements for a particular fixture, see the label affixed to the back plate of the fixture or refer to the fixture's specifications chart. A fixture's listed current rating is its average current draw under normal conditions. All fixtures must be powered directly off a switched circuit and cannot be run off a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel is used solely for a 0% to 100% switch. Before applying power to a fixture, check that the source voltage matches the fixture's requirement. Check the fixture or device carefully to make sure that if a voltage selection switch exists that it is set to the correct line voltage you will use.

Warning! *Verify that the power select switch on your unit matches the line voltage applied. All fixtures must be connected to circuits with a suitable Earth Ground.*

Safety Instructions



Please read these instructions carefully, which includes important information about the installation, usage and maintenance?



- Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.
- Always make sure that you are connecting to the proper voltage and that the line voltage you are connecting to is not higher than that stated on decal or rear panel of the fixture.
- This product is intended for indoor use only!
- To prevent risk of fire or shock, do not expose fixture to rain or moisture. Make sure there are no flammable materials close to the unit while operating.
- The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Always disconnect from power source before servicing or replacing lamp or fuse and be sure to replace with same lamp source.
- Secure fixture to fastening device using a safety chain. Never carry the fixture solely by its head. Use its carrying handles.
- Maximum ambient temperature is $T_a: 40^\circ$. Do not operate fixture at temperatures higher than this.
- In the event of serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- Don't connect the device to a dimmer pack.
- Make sure power cord is never crimped or damaged.
- Never disconnect power cord by pulling or tugging on the cord.
- Avoid direct eye exposure to lamp while it is on.

INTRODUCTION

Control Features

Legend™ 5000X (575W)

- Mechanical dimmer (0~100%)
- Variable shutter/strobe (7fps)
- Color wheel
 - 11 colors plus open
 - Rainbow color spin
 - in both directions
 - at variable speeds
- Second color wheel
 - 11 colors plus open
 - 1 CT filter, 4 solid, 4 split-colors & 2 quad-colors
 - Rainbow color spin
 - in both directions at variable speeds
- Static gobo wheel
 - 9 interchangeable gobos plus open
 - Gobo wheel spin
 - in both directions at variable speeds
- Indexing rotating gobos
 - 6 interchangeable rotating gobos
 - 5 metal, 1 dichroic gobo
 - Additional gobos: 9 metal
 - Gobos fully indexed
 - Rotating gobo wheel spin
 - in both directions at variable speeds
- 3-facet high speed rotating prism
- Mechanical iris
- Motorized focus
- Remote fixture reset
- Remote lamp ON/OFF
- HMI575 (575W) lamp source

Features

- Automatic Pan & Tilt correction
- Micro-stepping motors
- LED display
- Thermal switch
- Fan cooled
- User selectable 16-bit or 8-bit Pan/Tilt resolution
- Removable air filter

DMX Channel Summary


16-Bit Mode

CHANNEL	FUNCTION	CHANNEL	FUNCTION
1	Dimmer	9	Iris
2	Shutter/Strobe	10	Focus
3	Colors 1	11	Pan
4	Colors 2	12	Tilt
5	Static Gobos	13	Pan (Fine)
6	Rotating Gobos	14	Tilt (Fine)
7	Gobo Rotation	15	Control
8	Prism	16	Lamp ON/OFF



8-Bit Mode

CHANNEL	FUNCTION	CHANNEL	FUNCTION
1	Dimmer	8	Prism
2	Shutter/Strobe	9	Iris
3	Colors 1	10	Focus
4	Colors 2	11	Pan
5	Static Gobos	12	Tilt
6	Rotating Gobos	13	Control
7	Gobo Rotation	14	Lamp ON/OFF

Product Overview

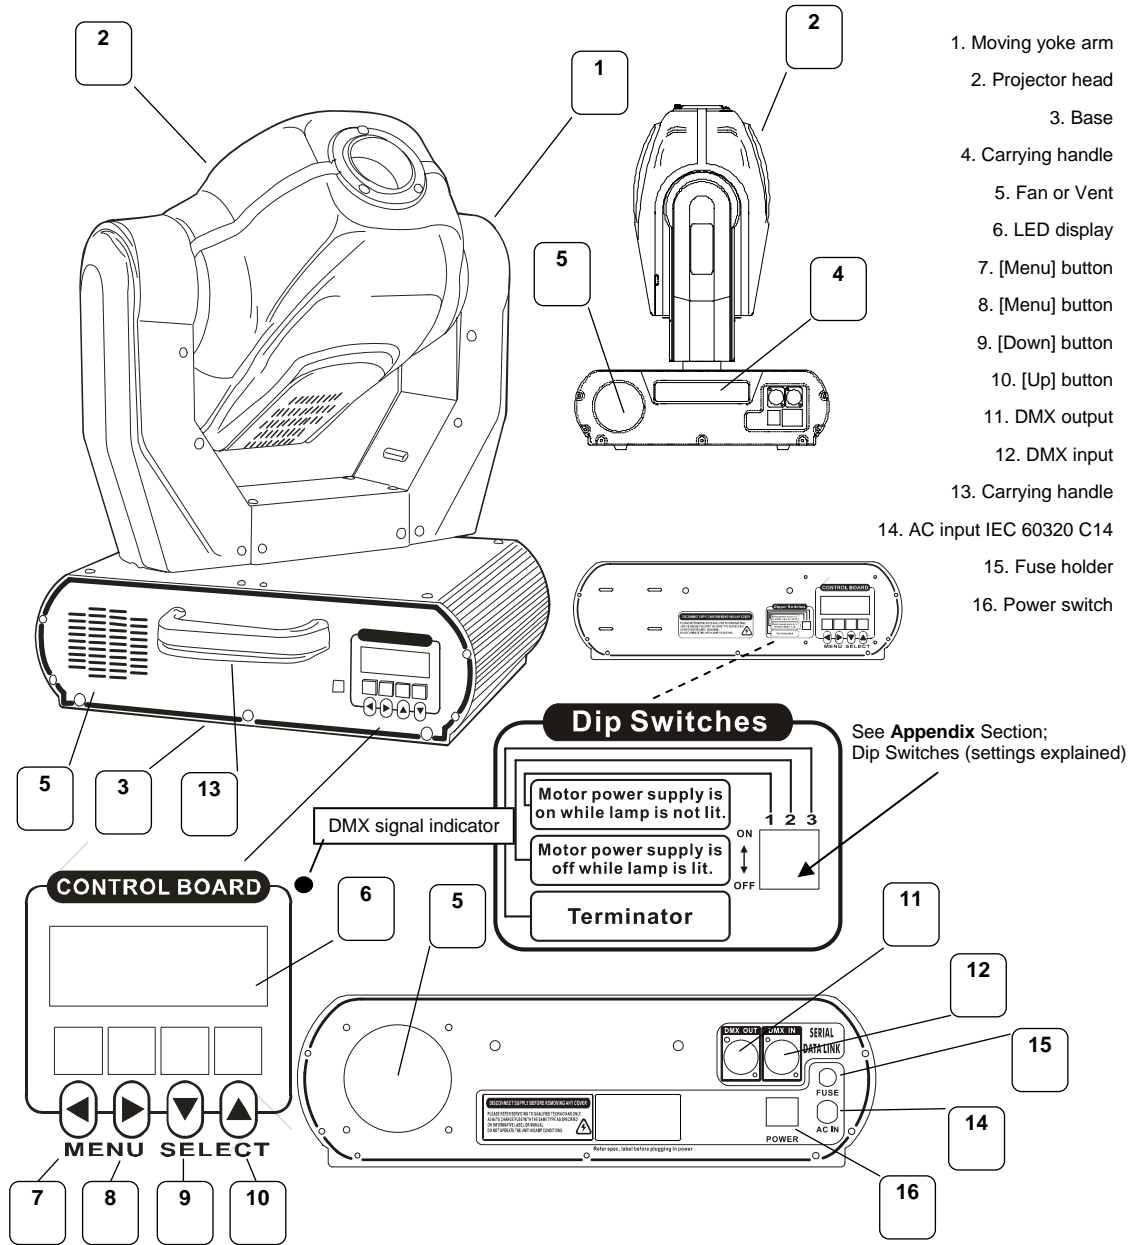

- 1. Moving yoke arm
- 2. Projector head
- 3. Base
- 4. Carrying handle
- 5. Fan or Vent
- 6. LED display
- 7. [Menu] button
- 8. [Menu] button
- 9. [Down] button
- 10. [Up] button
- 11. DMX output
- 12. DMX input
- 13. Carrying handle
- 14. AC input IEC 60320 C14
- 15. Fuse holder
- 16. Power switch

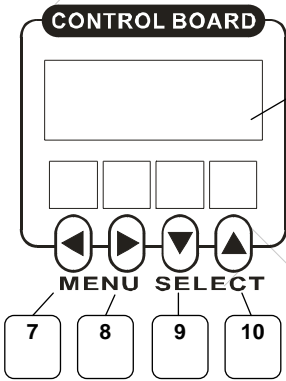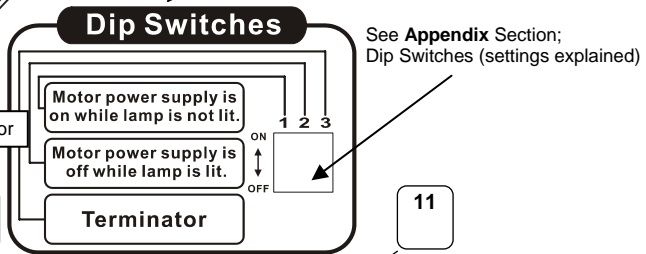

SEGMENT BUTTONS I/O PANEL OVERVIEW

BUTTONS	
MENU ◀	Toggles Menu Functions
MENU ▶	Toggles Menu Functions
SELECT ▼	Steps backwards through selections or addressing
SELECT ▲	Steps forward through selections or addressing

I/O PANEL	
DMX Out & In	DMX-512 connectors
Power	AC input IEC 60320 C14 and fuse holder

SETUP

Lamp


You will need to install a lamp prior to the initial operation of the fixture. A HMI575 high intensity discharge lamp is included.

Warning! *When replacing the lamp, please wait 15 minutes after powering down to allow the unit to cool down! Always disconnect from main power prior to lamp replacement.*

Do not touch the envelope (glass area) of the bulb with bare hands. If this happens, clean the lamp with alcohol and wipe it with a lint free cloth before installation.

Lamp Installation

1. Unscrew thumbscrews (S1) to detach the top cover.
2. Unscrew screws (S2) to remove lamp cover and expose lamp compartment.
3. If installing a new lamp, loosen both screws on the double ended lamp to allow for the lamp to slide into the lamp socket slots. Lower lamp evenly.
4. If replacing a lamp, loosen both lamp screws (S3) to relieve tension from lamp socket slots so you can slide the lamp freely, upwards and out of lamp socket. Raise lamp evenly to remove.
5. Before you tighten the lamp end screws, rotate the bulb until the nipple on the envelope (N) of the bulb is facing upwards as illustrated.
6. If you are replacing the lamp, you may want to log the fixture hours in order to track the lamps use. Navigate to the {LPti} on the menu display to obtain this information. (Page 14, Control Board Functions)

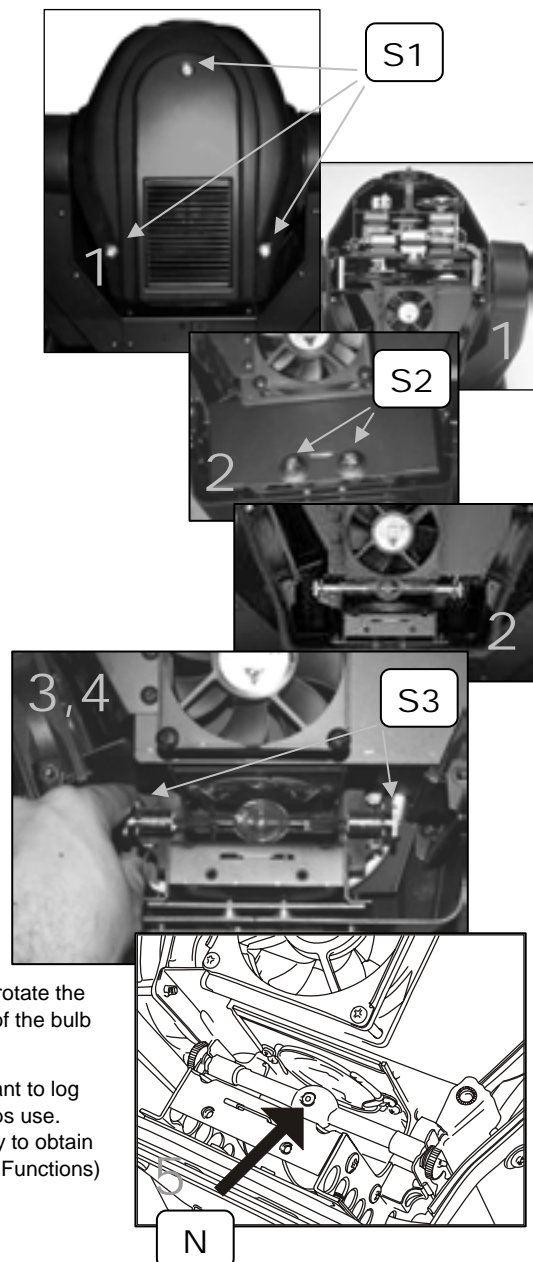


Power

Your product is equipped with an internal input-voltage select switch.

Warning!

Verify that the power select switch on your unit matches the line voltage applied. All fixtures must be connected to circuits with a suitable Earth Ground.

- To determine the power requirements for a particular fixture, see the label affixed to the back plate of the fixture or refer to the fixture's specifications chart.
- A fixture's listed current rating is its average current draw under normal conditions.
- All fixtures must be powered directly off a switched circuit and cannot be run off a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel is used solely for a 0% to 100% switch.
- Before applying power to a fixture, check that the source voltage matches the fixture's requirement.
- All fixtures must be connected to circuits with a suitable Earth Ground.

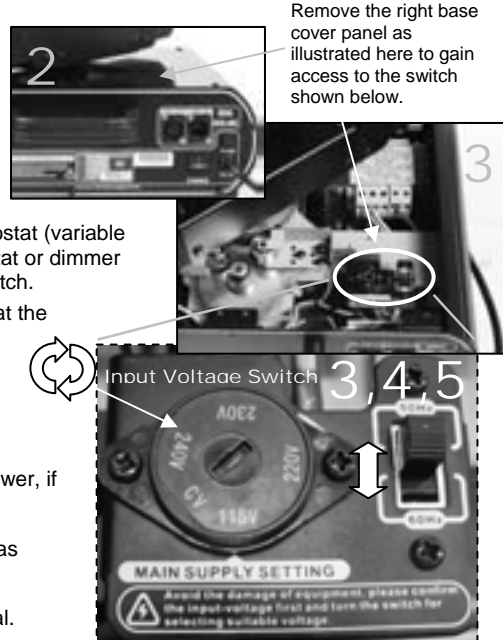

Remove the right base cover panel as illustrated here to gain access to the switch shown below.


7. Make sure the fixture is not connected to power, if so disconnect.
8. Remove the right base access cover panel as illustrated on the right.
9. Locate the power selection switches and dial.
10. Rotate the voltage dial to the setting that most closely matches the local AC voltage. If your voltage falls halfway between two settings, select the higher voltage on the dial.
11. Move the frequency switch to the setting that matches the local AC frequency; 50 or 60 Hz.
12. Replace access cover.

Power Cable Configuration


CABLE	PIN	INTERNATIONAL
BROWN	Live	L
BLUE	Neutral	N
YELLOW/GREEN	Earth	EG (Ground)

Replacing Gobos


1. Unscrew thumbscrews (S1) to detach the top cover.

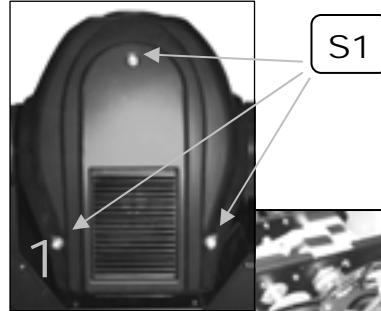


2. Remove screws labeled (S2) and pull out air channel guide (A1) to allow more space for the replacement of gobos.

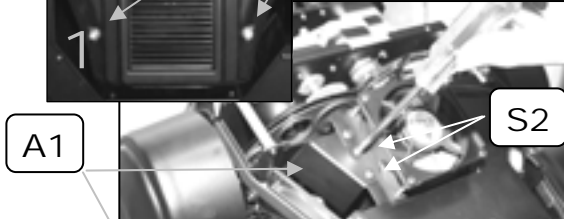

3. Rotate the gobo wheel so that the gobo to be replaced lies in the center of the "U" shaped opening.

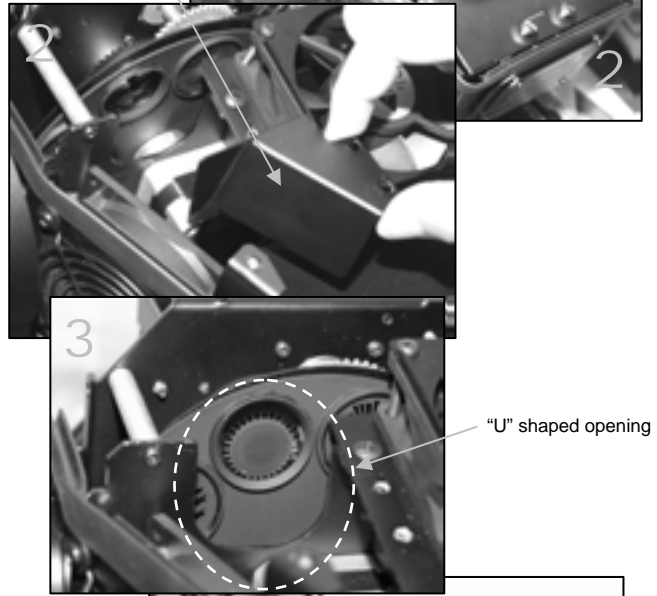

4. Press both tips of the gobo tension ring together and remove from the gobo aperture.
5. Push the gobo with your finger from the back side following the same direction that the tension ring was removed.

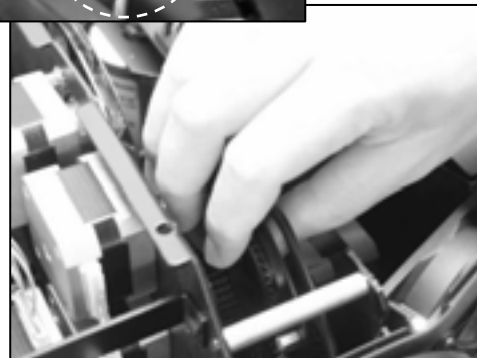


Caution!

Tension ring could pop out abruptly and fall inside the fixture. Please use caution when removing and if necessary use both hands.

NOTE!

Replacing the gobos on the static gobo wheel is achieved using the same method as the rotating gobo wheel. However, the spring needs to be removed first using a small flat head screw driver before pushing the gobo out of the aperture.

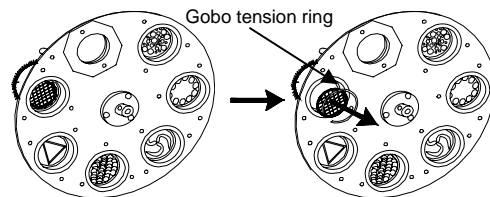

Mounting



Orientation

All models described in this manual can sit on stage or be mounted on a truss using a clamp in any position, provided, there is adequate room for ventilation.

Warning

It is important never to obstruct the fan or vents pathway.

- When selecting installation location, take into consideration lamp replacement access and routine maintenance.
- Safety cables should always be used.
- Never mount in places where the fixture will be exposed to rain, high humidity, extreme temperature changes or restricted ventilation.
- The fixture must have a minimum of 1 meter from combustible materials.

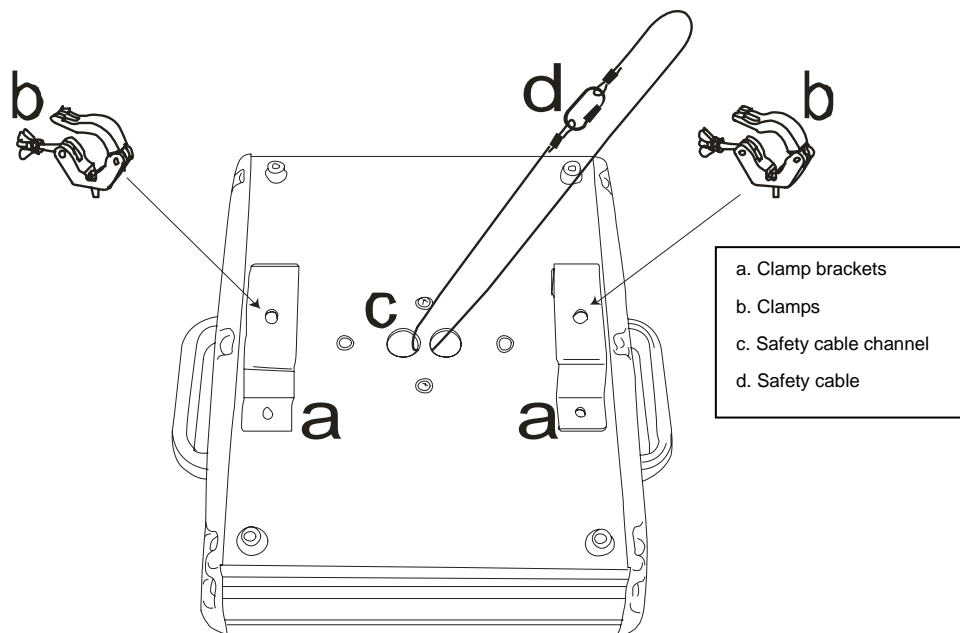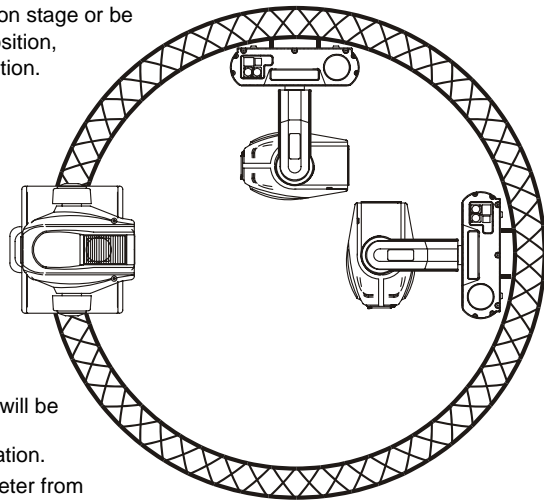

Rigging

All models described include 2 clamp mounting brackets to which a half-coupler pipe clamp can be bolted.

1. Verify the structure can hold 10 times the weight of all fixtures to-be installed.
2. Attach two clamps as illustrated above (b).


OPERATING INSTRUCTIONS

Control Board

On the control panel you can set the DMX address, reset the fixture and change fixture personality trait.

[MENU] Toggles menu functions.

[SELECT] Changes menu function status and is used to set DMX address.

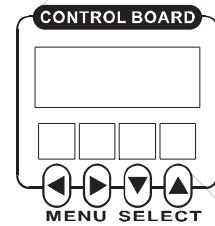


Control Board Functions

FUNCTION	OPTIONS	NOTES
Addr	000~512	DMX channel addressing
LP.ti	001	Used lamp time Pressing •• simultaneously zeroes lamp counter.
Shut	Off/On	Off: Normal On: Shutter closes during the changing of color, gobos or prism. Shutter will open after color, gobo or prism is in position.
Col.1	Off/On	Off: Color wheel gradually advances to the next color allowing the user to stop between colors. On: Color wheel will jump to the next color.
Col.2	Off/On	Off: Color wheel gradually advances to the next color allowing the user to stop between colors. On: Color wheel will jump to the next color.
Iris	Off/On	Off: Iris dims from narrow to wide On: Iris dims from wide to narrow
Focu	Off/On	Off: Normal On: Focus adjustment
r.Pan	Off/On	Off: Left to right head movement (Pan Normal) On: Right to left head movement (Pan Inverted)
r.tilt	Off/On	Off: Down to up head movement (Tilt Normal) On: Up to Down head movement (Tilt Inverted)
16.br	Off/On	Off: 8 bit control mode On: 16 bit control mode
deMo	Off/On	Off: Normal On: Self-demo
SoFt	Off/On	Off: Quick paced function demonstration On: Slow paced function demonstration Note: Only works with δ&No = On
dPSE	Off/on	Off: Display off, press any key to turn on display On: Display On
rSEt	Off/On	Off: Normal On: Reset all motors at once
dF.SE	Off/On	Off: Normal On: Reset entire unit, defaults to Off
LAMP	Off/On	Off: Lamp Off On: Lamp On
turn	Off/On	Off: Normal On: Reverse display
CHnl	Off/On	Off: Assign Pan & Tilt's DMX address to channel 11-14 On: Assign Pan & Tilt's DMX address to channel 1-4
Fi.ti	001	Fixture use timer. Press ▼▲ simultaneously for 3 seconds to zero the timer. Unit: hour

Applying changes to Functions (Quick Instructions)

Unless otherwise stated changes in the control board can be applied in the following manner.

1. Press any of the **[MENU]** arrow buttons repeatedly until the display reads the menu function you wish to change.
2. Press any one of the **[SELECT]** arrow buttons to activate menu function. The display will show the current state of the function, either "Off" or "On" with exception for DMX addressing and Lamp Time.
3. Press any one of the **[SELECT]** arrow buttons again to change the currently selected setting.

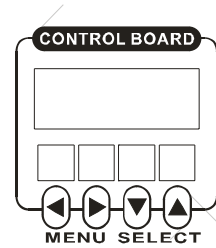

Operating Mode

- DMX control mode will provide the greatest flexibility and creativity. Each fixture trait can be controlled individually using any universal DMX-512 controller.

DMX Mode

Operating in a DMX Control mode environment gives the user the greatest flexibility when it comes to customizing or creating a show. You can tailor your programming to suit a specific event. Whether it is a wedding where a spot light may be required or a lead singer requiring a color solo, the opportunities are endless. In this mode you will be able to control each individual trait of the fixture independently.


Daisy Chain Connection

1. Connect the (male) 3 pin connector side of the DMX cable to the output (female) 3 pin connector of the first fixture.
2. Connect the end of the cable coming from the first fixture which will have a (female) 3 pin connector to the input connector of the next fixture consisting of a (male) 3 pin connector. Then, proceed to connect from the output as stated above to the input of the following fixture and so on.

Menu Functions

DMX-512 addressing

DMX mode enables the use of a universal DMX controller device. Each fixture requires a "start address" from 1 to 511. A fixture requiring one or more channels for control begins to read the data on the channel indicated by the start address. For example, a fixture that occupies or uses 6 channels of DMX and was addressed to start on DMX channel 100, would read data from channels: 100, 101, 102, 103, 104, and 105. Choose start addresses so that the channels used do not overlap and notate the start address selected for future reference.

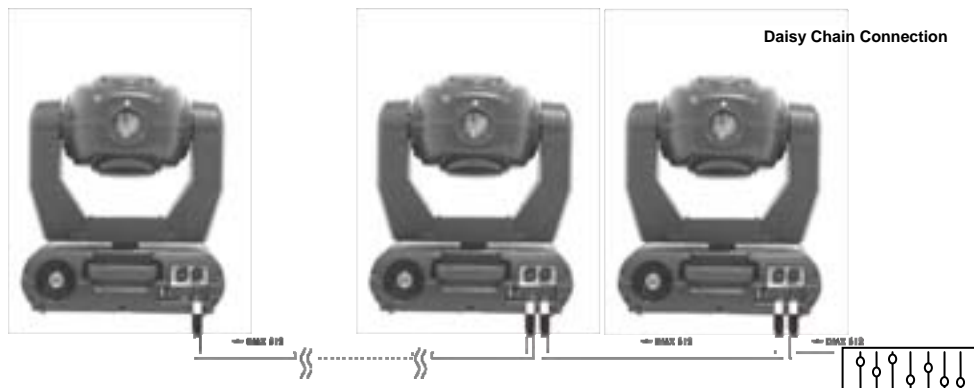

If this is your first time addressing a fixture using the DMX-512 control protocol than I suggest jumping to the Appendix Section and read the heading “DMX Primer”. It contains very useful information that will help you understand its use.

Setting the starting address

1. Press the **[MENU]** arrow button until the display reads “Addr” .
2. Press the **[SELECT]** arrow buttons to increase or decrease values until the desired value is achieved.
3. Press the **[MENU]** button to activate selection.

User Configurations

{16.br} 8/16 bit Control Channel

In the 16 bit Control Channel mode you gain a higher degree of resolution in both Pan and Tilt movement. One extra channel for both the Pan and the Tilt are added and they perform as the “Fine” movement.

The primary Pan or Tilt channel is known as the MSB “Most Significant Bit”. This is the channel that controls the course or broader range of movement. On a DMX signal stream, there are 255 values for one channel.

The “Fine” Pan or Tilt channel is known as the LSB “Least Significant Bit”. This channel gives you control of the space between any two MSB values. In other words, it increases the resolution of both the Pan and Tilt movement, by providing the control of 255 additional values in between each Primary channel value.

FUNCTION	SET TO	NOTES
16.br	Off	8 bit Control Channel
	On	16 bit Control Channel

{r.pan} Pan reverse / {r.tilt} Tilt reverse

It is possible to invert the pan and tilt mirror movement from within the fixture itself. This could be helpful in situations where the positioning or rigging of a fixture led to a reverse orientation of the fixture in relation to all or most other fixtures installed. When choosing to command the pan or tilt of all fixtures at the same time you will notice that the fixtures whose orientation is different from the others will most likely move opposite of the rest. You can apply a pan and tilt Invert by following the settings in the table below.

FUNCTION	SET TO	NOTES
r.pan	Off	Left to Right
	On	Right to Left
r.tilt	Off	Down to Up
	On	Up to Down

{CHn1} – Pan/Tilt control channel re-assign

This function will re-position the pan & tilt control channels to start at DMX value number 1.

FUNCTION	SET TO	NOTES
CHn1	Off	Default (Pan/Tilt start on 10)
	On	Pan/Tilt re-assign to channel 1-4

{shut} - Shutter auto-close

The shutter will close momentarily during the color, gobo or prism changes. The shutter will re-open once the color, gobo or prism has reached its position.

FUNCTION	SET TO	NOTES
Shut	Off	Normal
	On	Shutter auto-close

{Col.1} & {Col.2} - Color wheel linear/step behavior

This function set to "Off" will allow the linear or gradual progression for the selection of a color on the color wheel. It gives the user the ability to stop the wheel in between colors. The default "On" setting advances the color wheel full or complete steps.

FUNCTION	SET TO	NOTES
Col.	Off	Linear progression
	On	Step advance

{iris} - Iris raindrop effect

Choose the raindrop effect iris dim method.

FUNCTION	SET TO	NOTES
iris	Off	From narrow to wide
	On	From wide to narrow

{Focu} - Manual focus

The user can use this function to manually adjust the focus. This feature can be used in conjunction with operating the demo show or during maintenance and alignment.

FUNCTION	SET TO	NOTES
Focu	Off	Normal
	On	Adjust focus

Segment Display Configurations**{dP.SE} - Display Auto-off**

The led display can be set to automatically turn off during normal operations.

FUNCTION	SET TO	NOTES
dP.SE	Off	Display Auto-Off, press any key to turn on display
	On	Always on

{turn} - Reverse the display

You can rotate the display 180° so that it becomes easier to read when the fixture is positioned upside down.

FUNCTION	SET TO	NOTES
turn	Off	Normal display view
	On	Reverse the display

Service Functions

{rSET} - Fixture Reset (all motors)

This function will re-initialize the fixture by returning all motors to its startup positions or otherwise known as (home position).

FUNCTION	SET TO	NOTES
rSET	Off	Normal
	On	Reset all motors

{dF.SE} - Fixture Reset (excludes Pan & Tilt)

This function will re-initialize the fixture with exception of the Pan and Tilt motors.

FUNCTION	SET TO	NOTES
dF.SE	Off	Normal
	On	Reset unit

{LP.ti} - Lamp Time

The (lamp time) readout displays the number of hours the lamp has been in use. It is not uncommon to find new fixtures with a few logged hours. This means the fixture was thoroughly tested prior to delivery.

4. Press the [◀ MENU] button until the display reads "ΛΠ.τl".
5. Press [▼SELECT] button to read the number of hours used.
6. Press both [▼▲ SELECT] buttons at the same time to reset the lamp counter to zero if changing a lamp.

{Fi.ti} - Fixture Timer

The (Fixture Timer) readout displays the total number of operating hours of the fixture. It is not uncommon to find new fixtures with a few logged hours.

Self Demonstration

{dEMO} - Self-demo

This function will execute the built-in program in the fixture.

FUNCTION	SET TO	NOTES
dEMO	Off	Normal
	On	Run self-demonstration

{sOFt} - Demo speed

You can set the pace of the demo to either quick or fast.


FUNCTION	SET TO	NOTES
sOFt	Off	Quick paced
	On	Slow paced

APPENDIX

DMX Primer

There are 512 channels in a DMX-512 connection. Channels may be assigned in any manner. A fixture capable of receiving DMX-512 will require one or a number of sequential channels. The user must assign a starting address on the fixture that indicates the first channel reserved in the controller. There are many different types of DMX controllable fixtures and they all may vary in the total number of channels required. Choosing a start address should be planned in advance. Channels should never overlap. If they do, this will result in erratic operation of the fixtures whose starting address is set incorrectly. You can however, control multiple fixtures of the same type using the same starting address as long as the intended result is that of unison movement or operation. In other words, the fixtures will be slaved together and all respond exactly the same.

DMX fixtures are designed to receive data through a serial Daisy Chain. A Daisy Chain connection is where the DATA OUT of one fixture connects to the DATA IN of the next fixture. The order in which the fixtures are connected is not important and has no effect on how a controller communicates to each fixture. Use an order that provides for the easiest and most direct cabling. Connect fixtures using shielded two conductor twisted pair cable with three pin XLR male to female connectors. The shield connection is pin 1, while pin 2 is Data Negative (S-) and pin 3 is Data positive (S+). CHAUVET carries 3-pin XLR DMX compliant cables, DMX-10 (33'), DMX-4.5 (15') and DMX-1.5 (5')

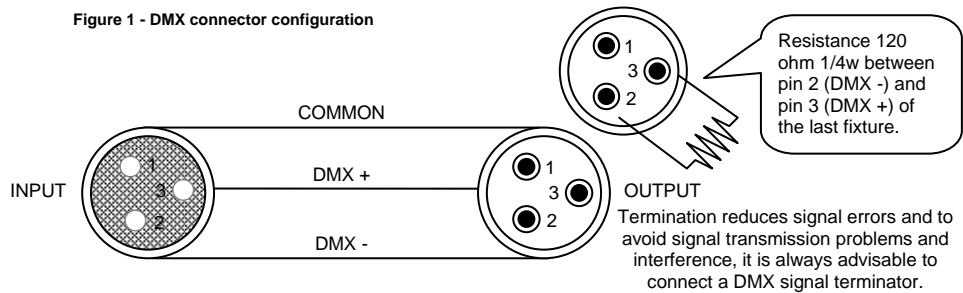

Fixture Linking

Note!

If you use a controller with a 5 pin DMX output connector, you will need to use a 5 pin to 3 pin adapter. CHAUVET Model No: DMX5M. The chart below details a proper cable conversion:

3 PIN TO 5 PIN CONVERSION CHART

Conductor	3 Pin Female (output)	5 Pin Male (Input)
Ground/Shield	Pin 1	Pin 1
Data (-) signal	Pin 2	Pin 2
Data (+) signal	Pin 3	Pin 3
Do not use		Do not use
Do not use		Do not use

DMX Channel Values

16 Bit Movement

CHANNEL	VALUE	FUNCTION
1	000 ⇔ 255	Dimmer Closed > Open (0-100%)
2	000 ⇔ 001 002 ⇔ 007 008 ⇔ 063 064 ⇔ 071 072 ⇔ 127 128 ⇔ 135 136 ⇔ 191 192 ⇔ 199 200 ⇔ 253 254 ⇔ 255	Shutter/Strobe Blackout Open Strobe: Slow > Fast (max 7fps) Open Pulse Strobe: Dark > Bright & Slow > Fast Open Pulse Strobe: Bright > Dark & Slow > Fast Open Random Strobe: Slow > Fast Open
3	000 ⇔ 013 014 ⇔ 027 028 ⇔ 041 042 ⇔ 055 056 ⇔ 069 070 ⇔ 083 084 ⇔ 097 098 ⇔ 111 112 ⇔ 125 126 ⇔ 139 140 ⇔ 153 154 ⇔ 167 168 ⇔ 255	Color Wheel 1 White (Open) Steel Blue Orange Green Blue Bright Blue Bright Pink Red Deep Blue Yellow Dark Pink Moss Green Light Blue Rainbow effect: Slow > Fast
4	000 ⇔ 013 014 ⇔ 027 028 ⇔ 041 042 ⇔ 055 056 ⇔ 069 070 ⇔ 083 084 ⇔ 097 098 ⇔ 111 112 ⇔ 125 126 ⇔ 139 140 ⇔ 153 154 ⇔ 167 168 ⇔ 255	Color Wheel 2 White (Open) Steel Blue Rose Pink Yellow Pale Blue C.T. Orange Pale Blue – C.T. Orange Steel Blue - Orange Green - Yellow Rose Pink – Moss Green Rose Pink – Yellow – Steel Blue - Green Yellow – Moss Green – Orange – Steel Blue Rainbow effect: Slow > Fast
5	000 ⇔ 015 016 ⇔ 031 032 ⇔ 047 048 ⇔ 063 064 ⇔ 079 080 ⇔ 095 096 ⇔ 111 112 ⇔ 127 128 ⇔ 143 144 ⇔ 159 160 ⇔ 255	Fixed Gobo Wheel Open Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 7 Gobo 8 Gobo 9 Gobo Spin: Slow > Fast
6	000 ⇔ 012 013 ⇔ 025 026 ⇔ 038 039 ⇔ 051 052 ⇔ 064 065 ⇔ 077 078 ⇔ 095 096 ⇔ 111 112 ⇔ 127 128 ⇔ 143 144 ⇔ 159 160 ⇔ 175	Rotating Gobo Open Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 1 Bounce: Slow > Fast Gobo 2 Bounce: Slow > Fast Gobo 3 Bounce: Slow > Fast Gobo 4 Bounce: Slow > Fast Gobo 5 Bounce: Slow > Fast

	176 ⇔ 191 192 ⇔ 221 222 ⇔ 225 226 ⇔ 255	Gobo 6 Bounce: Slow > Fast Gobo Spin Clockwise: Fast > Slow Stop Gobo Spin Counter-clockwise: Slow > Fast
7	000 ⇔ 127 128 ⇔ 191 192 ⇔ 255	Gobo Rotation & Indexing Gobo Index (0° ~ 360°) Clockwise gobo rotation: Slow > Fast Counter clockwise gobo rotation: Fast > Slow
8	000 ⇔ 001 002 ⇔ 007 008 ⇔ 131 132 ⇔ 253 254 ⇔ 255	Prism Open Prism (static) Prism clockwise rotation: Slow > Fast Prism counter-clockwise rotation: Fast > Slow Prism (static)
9	000 ⇔ 000 001 ⇔ 159 160 ⇔ 207 208 ⇔ 253 254 ⇔ 255	Iris Closed Closed > Open Raindrop effect: Slow > Fast Raindrop effect: Fast > Slow Open
10	000 ⇔ 255	Focus Near > Far
11	000 ⇔ 255	Pan Right (0°) > Left (570°) (128 = half way point)
12	000 ⇔ 255	Tilt Down (0°) > Up (270°) (128 = half way point)
13	000 ⇔ 255	Pan (Fine)
14	000 ⇔ 255	Tilt (Fine)
15	000 ⇔ 007 008 ⇔ 063 064 ⇔ 127 128 ⇔ 255	Control Pan/Tilt Tracking Mode Pan/Tilt Vector Mode: Slow > Fast Reserved Mechanical reset after 3 seconds
16	000 ⇔ 047 048 ⇔ 095 096 ⇔ 159 160 ⇔ 207 208 ⇔ 255	Lamp ON/OFF Standby Hold 3 seconds for Lamp ON Standby Hold 3 seconds for Lamp OFF Standby

8 Bit Movement

In the 8 bit Pan/Tilt resolution setting both (FINE) channels is removed. All other channel parameters remain the same as in the "DMX Channel Values" table.

CHANNEL	FUNCTION
1	Dimmer
2	Shutter
3	Color 1
4	Color 2
5	Static Gobos
6	Rotating Gobos
7	Gobo Rotation
8	Prism
9	Iris
10	Focus
11	Pan
12	Tilt
13	Control
14	Lamp ON/OFF

Dip Switches (settings explained)

DIP SWITCH	EVENT	NOTES
All Off	The lamp will strike first. If striking of the lamp succeeds, in approximately 15 seconds the fixture's motors will be powered and initialized. If the lamp does not strike, the remainder of the fixture will not initialize and you will not have control of the fixture. Please wait 15 minutes before re-starting the fixture, otherwise perform a service check.	This is the default setting on the fixture and helps in reducing the amount of striking or inrush current used by the fixture upon startup.
1-On	Lamp and motors are powered at the same time.	Will consume the most amount of inrush current in the startup phase.
2-On	Only the lamp will turn on in the fixture	
1-On, 2-On		
3-On	This switch will terminate the dmx connection.	Use only at the end of a DMX daisy chain.

Maintenance

To maintain optimum performance and minimize wear fixtures should be cleaned frequently. Usage and environment are contributing factors in determining frequency. As a general rule, fixtures should be cleaned at least twice a month. Dust build up reduces light output performance and can cause overheating. This can lead to reduced lamp life and increased mechanical wear. Be sure to power off fixture before conducting maintenance.

Unplug fixture from power. Use a vacuum or air compressor and a soft brush to remove dust collected on external vents and internal components. Clean all glass when the fixture is cold with a mild solution of glass cleaner or Isopropyl Alcohol and a soft lint free cotton cloth or lens tissue. Apply solution to the cloth or tissue and drag dirt and grime to the outside of the lens. Gently polish optical surfaces until they are free of haze and lint. Do not touch the lamp glass when cleaning fixture. Oil and dirt can cause damage and premature aging of the lamp. In the event that the lamp is touched or becomes dirty, clean the lamps with an alcohol wipe.

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics. Clean with soft cloth using normal glass cleaning fluid. - Always dry the parts carefully. - Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days.

Air Filter

The Legend™ 5000X is equipped with an air filter located directly behind a fan grill on the rear of the projector's head. You should clean this filter every two weeks or sooner if necessary depending on your particular environment.



Gobos (Illustrated)



Returns Procedure

Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Merchandise Authorization Number (RA #). Products returned without an RA # will be refused. Call CHAUVET and request RA # prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. CHAUVET reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

Claims

Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise. It is the customer's responsibility to notify and submit claims with the shipper in the event that a fixture is damaged due to shipping. Any other claim for items such as missing component/part, damage not related to shipping, and concealed damage, must be made within seven (7) days of receiving merchandise.

General Troubleshooting

Symptom	Solution(s)	Applies to			
		Lights	Foggers & Snow	Controllers	Dimmers & Chaser
Auto shut off	Check fan thermal switch reset	✓			
Beam is very dim or not bright	Clean optical system or replace lamp Check 220/110v switch for proper setting	✓			
Breaker/Fuse keeps blowing	Check total load placed on device				✓
Chase is too slow	Check users manual for speed adjustment	✓		✓	✓
Device has no power	Check for power on Mains. Check device's fuse. (internal and/or external)	✓		✓	✓
Fixture is not responding	Check DMX Dip switch settings for correct addressing Check DMX cables Check polarity switch settings	✓			
Fixture is on but there is no movement to the audio	Make sure you have the correct audio mode on the control switches. If audio provided via ¼" jack, make sure a live audio signal exists Adjust sound sensitivity knob	✓		✓	✓
Lamps cuts off sporadically	Possible bad lamp or fixture is overheating. Lamp may be at end of its life.	✓			
Light will not come on after power failure	Some discharge lamps require a cooling off period before the electronics in the fixture can kick start it again, wait 5 to 10 minutes before powering up	✓			
Loss of signal	Use only DMX cables Install terminator Note: Keep DMX cables separated from power cables or black lights.	✓	✓	✓	✓
Motor movements are jerky or jumpy	Possible bad motor driver or sensors Check polarity switch on controller	✓		✓	
Moves slow	Check 220/110v switch for proper setting	✓			
No flash	Re-install bulb, may have shifted in shipping	✓			
No light output	Check slip ring & brushes for contact Install bulb Call service technician	✓			
Relay will not work	Check reset switch Check cable connections				✓
Remote does not work	Make sure connector is firmly connected to device	✓	✓		
Stand alone mode	All CHAUVET lighting fixtures featuring stand-alone functions do not require additional settings, simply power the fixture and it will automatically enter into this mode	✓			
Unit wobbles when rotating	Check for damages possibly incurred during shipping	✓			

Technical Specifications

WEIGHT & DIMENSIONS

Length.....	406 mm (16 in)
Width	406 mm (16 in)
Height.....	609 mm (24 in)
Weight	32.4 kg (71.5 lbs)
Shipping Weight	36.20 kg (79.8 lbs)

POWER

Switch-selectable power settings (Internal).....	100V, 220V, 230V, 240V – 50/60Hz
AC input.....	3 prongs IEC 60320 C14
European version	230V/240V
Current draw.....	(peak 936W @ 120V), (inrush 1,320W @ 120V)

LAMPS

Osram™ HMI575/GS	1000 hr, 6000K, 575W
Philips™ MSI-575/2.....	1000 hr, 7000K, 575W
Philips™ MSI-575/HR	1000 hr, 6000K, 575W

PHOTO OPTIC

Beam Angle.....	15°
Pan	570°
Tilt.....	270°

GOBOS

Outside diameter	31 mm (1.22 in)
Image diameter (maximum)	24 mm (.94 in)
Thickness	3 mm (.12 in)

THERMAL

Maximum ambient temperature.....	40° (104° F)
----------------------------------	--------------

FUSE

Main.....	20mm Glass 15A 250V Fast Blow
Internal PCB	20mm Glass 5A 250V Fast Blow

CONTROL & PROGRAMMING

Data input	non-locking 3-pin XLR male socket
Data output.....	non-locking 3-pin XLR female socket
Data pin configuration	pin 1 shield, pin 2 (-), pin 3 (+)
Protocols.....	DMX-512 USITT
DMX Channels (16bit)	16
DMX Channels (8bit)	14

ORDERING INFORMATION

Legend™ 5000X	LEG-5000
Fuse 5A 250V.....	P170FUSE005
Fuse 15A 250V.....	P170FUSE015

Technical Support

Address:	Service Dept. 3000 N 29 th Ct, Hollywood, FL 33020 (U.S.A.)
Support (Email):	tech@chauvetlighting.com
Telephone:	(954) 929-1115 - (Press 4)
Fax:	(954) 929-5560 - (Attention: Service)
Website:	http://www.chauvetlighting.com

Osram™ and HMI® are registered trademarks of OSRAM GmbH. Osram Sylvania Inc. Danvers, MA
Philips™ and MSI® are registered trademarks of Koninklijke Philips Electronics N.V.