


YPOCC¹ BASIC₂₅₀

Instruction Manual



from software version 1.0
(instruction version 1.05)

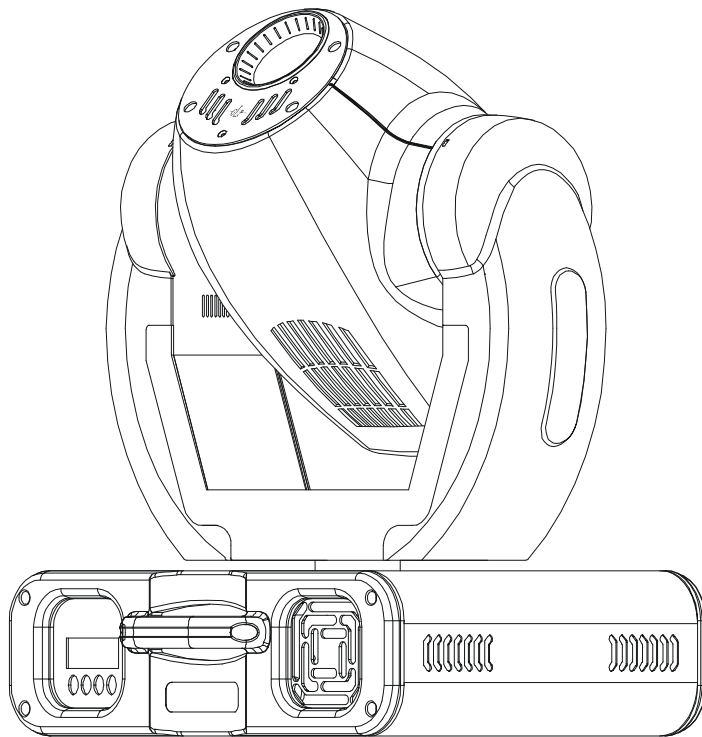

**GERMAN LIGHT
PRODUCTS**

e-mail: service@glp.de
Internet: <http://www.GLP.de>


This side is intentionally unlabelled.

Table of contents

1	Description of Device	5
1.1	Safety Instructions.....	6
2	Preparation and Installation	7
2.1	Mounting	7
2.1.1	Clamps	7
2.1.2	Mounting plate	7
2.2	Secure the YPOC 250 Basic.....	8
2.3	Connections	9
2.3.1	Power supply	9
2.3.2	DMX.....	9
2.4	Fuse	9
3	The Menu Field.....	10
3.1	Adjust the DMX- Address [D00 0].....	11
3.2	The Test Program [TEST].....	11
3.3	The Audio Program [AUD 1].....	11
3.4	Lamp On/Off [LAMP].....	12
3.5	Reset [RESE]	12
3.6	Running time of lamp and unit [TIME]	12
3.7	Invert Pan Movement [RPAN].....	12
3.8	Invert Tilt Movement [RTL T]	12
3.9	Special Functions [SPEC].....	13
3.9.1	Manual Drive [MANU].....	13
3.9.2	Lamp On automatically [LAPU].....	13
3.9.3	Lamp Off via DMX [LOF].....	14
3.9.4	DMX Input [DMX I].....	14
3.9.5	Display [DISP]	14
3.9.6	Fixture Temperature [TEMP].....	15
3.9.7	Fan Control [FANS].....	15
3.9.8	Adjustments and Calibrations [ADJU].....	15
3.9.9	Default Settings [DFSE].....	16
3.9.10	Feedback [FEE].....	16
3.9.11	Correction of faults [EFLG]	17
3.10	Error and Information Messages	17
4	DMX Channel Selection (DMX Protocol).....	17


5	Change the Lamp	20
5.1	Safety Regulations	20
5.2	Realize the Lamp Change	21
5.3	Lamp adjustment.....	21
6	Change a Gobo	22
6.1	Safety Regulations	22
6.2	Realize the Gobo Change	22
7	Maintenance and Cleaning the YPOC 250 Basic	23
7.1	Safety Regulations	23
7.2	Circumference and Interval (rule-of-thumb).....	23
7.3	Cleaning the Optical System	24
8	Technical Specification	25
9	Index	27

1 Description of Device

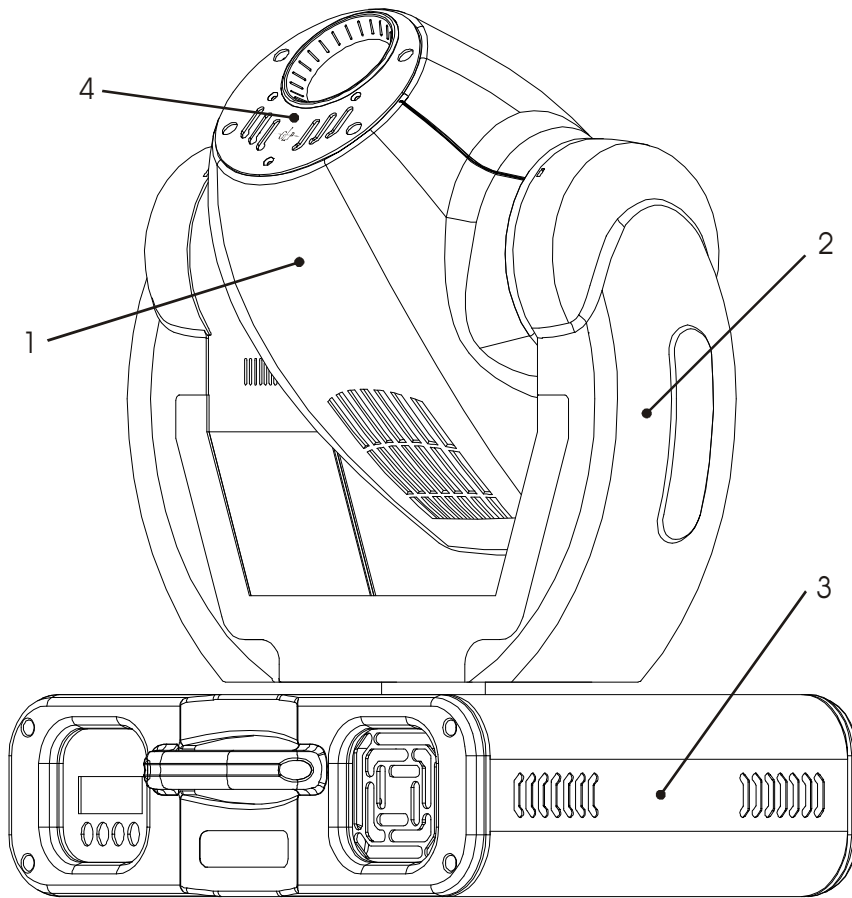

- 1 Moving Head
- 2 Arm
- 3 Base
- 4 Focus Adjustment

- 5 Up- button
- 6 Down- button
- 7 Enter- button
- 8 Mode- button
- 9 LED- Display
- 10 Software-Update connector
- 11 Microphone- Intensity
- 12 DMX- Input
- 13 DMX- Output
- 14 Power On/Off
- 15 Fuse F3,15 A
- 16 Fan (air inlet)

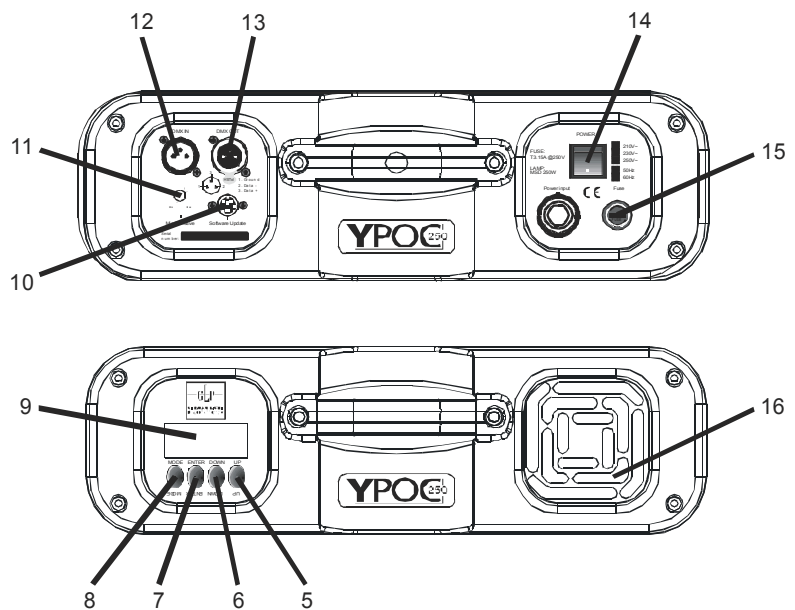

1.1 Safety Instructions



The **YPOC 250 Basic** is a High-Tech Product. To guarantee a smooth operation, it is necessary to keep following rules. The manufacturer of this device will not take responsibility of damages through disregard of the information in this manual. Warranty adjustments will be canceled.

1. Make sure before putting into operation, that the fan and the air inlets are clean and not blocked by anything.
2. **Attention:** Don't touch the device during the operation. This can cause injuries or damages.
3. **Unplug the YPOC 250 Basic from the AC outlet before any service.**
4. It is necessary to wait at least 30 minutes after disconnecting the AC before you open the **YPOC 250 Basic**. Please do not touch the bulb of the lamp if you are not absolutely sure it is cold. **-Danger of BURNING-**
5. Never look directly into the beam of the lamp. You risk injury of your retina and blindness.
6. Pay attention of the maximum lamp operation time. You have to change it if the lamp shows any deformations or damages. The same is with all glass components, color filters, lenses and mirrors.
7. To allow a secure operation, follow also the Installation guide described in chapter 2. Operating the **YPOC 250 Basic** without suited safety aids like Safety cables or clamps/hooks can increase the risk of an accident.
8. The installation should be done by qualified staff only. You need to pay attention to the common rules of technology that are not explicit mentioned in this manual.
9. Use only original spare parts. Any structural modification will cancel all warranty adjustments.




Attention: Laser of class 3R may injure your retina after a short residence time even without any optical instrument. **Avoid any direct exposure of your eyes!**

2 Preparation and Installation

2.1 Mounting

The **YPOC 250 Basic** is fully operational whether it hangs or is mounted to the wall. It can also be operated while standing on the floor. Keep a safety distance of 0.5 m towards any easy inflammable materials (decoration etc.). Install a safety wire that can hold at least 10 times the weight of the fixture. Never use the carrying handles for secondary attachment.

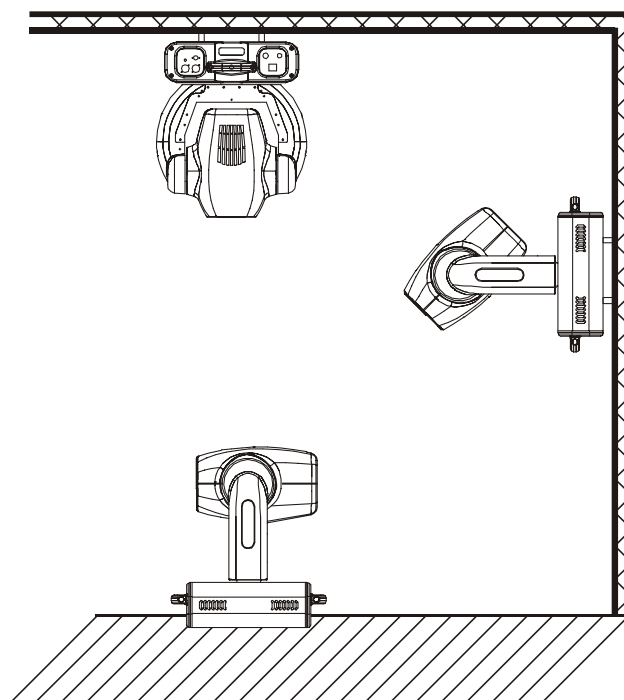

Pay attention to the regulations of: BGV C1 (former VBG 70) and DIN VDE 0711-217. Regulations of show laser BGV B2 (11.2001), E DIN 56912 part 6, DIN-EN 60825 part 1+2. The installation should be done by qualified staff only.

2.1.1 Clamps


Use two clamps on the backside of the **YPOC 250 Basic** to mount the unit on a truss (each two opposite threads max. M10x20). See also printing on the backside of the case.

2.1.2 Mounting plate

For a permanent installation of the **YPOC 250 Basic** you can use a optional mounting plate to fix the unit on a wall. The plate uses 4x screws M6x20.

2.2 Secure the YPOC 250 Basic

Regardless of the rigging of the **YPOC 250 Basic** you have to use a stipulated safety wire. Therefore you have to thread to safety wire through to two provided holes on the backside of the fixture and connect it with the truss-support. Pay attention to a safe and proper fastening.

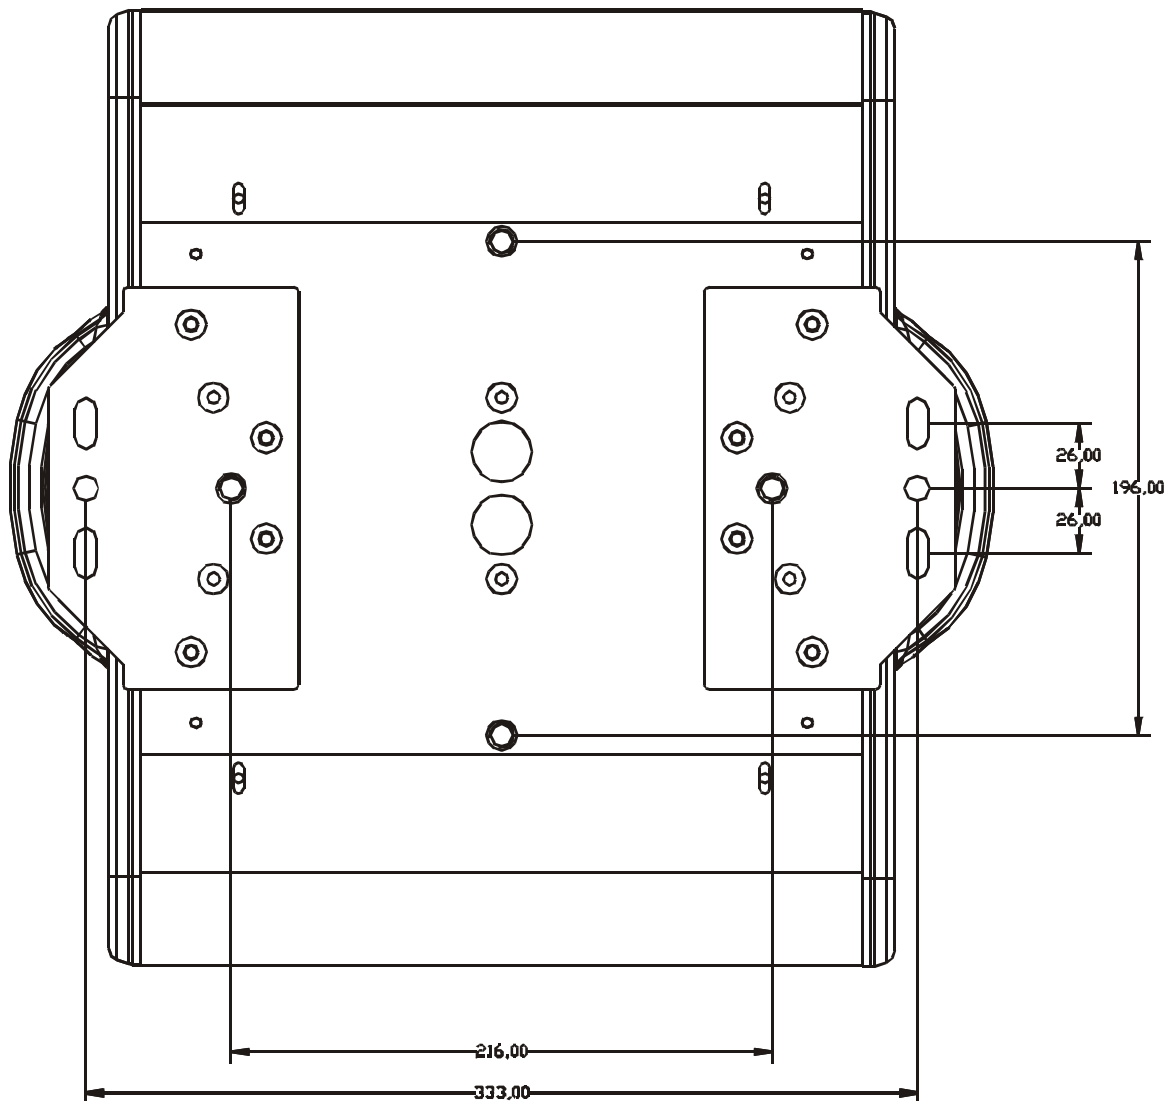

2.3 Connections

2.3.1 Power supply

230 Volt, 50 Hz,

Connected load 500W \Leftrightarrow 2,2 A (blind current compensation).

or 115V, 60 Hz

Connected load 500W \Leftrightarrow 4,4 A (blind current compensation).

Please see printing on the case for the right Power supply !

2.3.2 DMX

DMX 512 Standard input/output. See also printing on the case for the right pin assignment.

[+] = Pin 3 / [-] = Pin 2 / [Ground] = Pin 1

The DMX- Addressing starts at the DMX- Address [001].

2.4 Fuse

The **YPOC 250 Basic** electronic system is protected by a 5x20 mm fuse.

230V / T 3,15A (EU model) or 115V / T 6,3A (US model)


Please see the printing on the **YPOC 250 Basic** for more details.

Attention:

- **Disconnect AC outlet before changing a fuse!**
- **Use only the original declared fuse type!**

3 The Menu Field

You find the control board on the side part of the base. It allows you to make all necessary adjustments of the **YPOC 250 Basic**. With the **Mode**-key you get into the main menu. Afterwards you can navigate through the menu with the **Up/Down**-keys. Push the **Enter**-key to get in the next menu level or to confirm your settings. Make them and set functions **ON/OFF** with the **Up/Down**-keys. Confirm and save it with the **Enter**-key (the display shows **OK**). Push the **Mode**-key to cancel the entry and go back to the main menu.

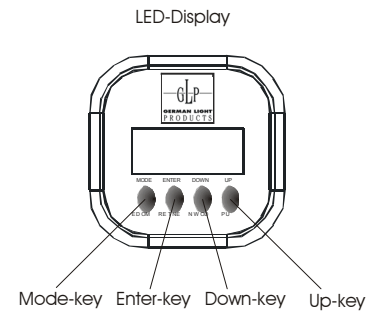

Level 1	Level 2	Level 3	Remark	
DMX1			Define the DMX start address	
TEST			Test program of all functions	
AUDIO	ASLW		Self-running audio program (slow)	
	AFST		Self-running audio program (fast)	
	MSTR		Master for the audio program	
	SVPT		Basic position for the audio program	
	SIZE		Size for the audio program (NORM-BIG-MIDL-SMAL)	
	LAMP		Switch on/of the lamp direct at the YPOC 250 Basic	
RESE		Reset		
TIME	POWER		Running time of the fixture (no destructible)	
	LA1		Running time of the lamp (erasable)	
	LA2		Running time of the lamp (no destructible)	
RPAN		Reverse Pan-direction		
RTL		Reverse Tilt-direction		
SPEC	MANU		Manual drive of all device functions	
	LARU		Automatic lamp start	
	DMX1		Switch off lamp via DMX	
	DISP		Reed out actual DMX-values	
			Display On/Off	
			Twist the display	
	TEMP		Reed out internal temperature	
	FANS	HIGH		Maximum cooling fan velocity
		REG		Automatic cooling fan control
		LODF		Low cooling fan speed → lamp off
		Low cooling fan speed → automatic		
ADJU	CODE XXXX		Use the code for entering the calibration menu (for authorized person only)	
			Calibration of the color wheel	
			Calibration of the gobo wheel	
			Calibration of the shutter 1	
			Calibration of the shutter 2	
			Settings in the internal memory (superuser only)	
			Must read on. Protected with a code.	
			Call on the default function values	
DFSE		Pan/Tilt feedback (error correction) On/Off		
FEE		Correction of faults		
EFLG				

3.1 Adjust the DMX- Address [100]

Right after turning on the **YPOC 250 Basic** you can see the current DMX-Address. If there is no DMX- Signal the display flashes.



For the address setting please follow this procedure:

1. Switch On the **YPOC 250 Basic** and wait until the fixture reset has finished ('RESE' is flashing in the display).
2. Press the **Mode**-key in order to access the main menu. Browse through the menu by pressing the **Up/Down**-keys until the display shows **100 |**. Confirm by pressing the **Enter**-key (the decimal point is flashing)
3. Use the **Up/Down**-keys to select the desired address. Confirm the setting by pressing the **Enter**-key (the display shows **OK**) or press the **Mode**-key to cancel.

The DMX- Address is stored also while switching off the **YPOC 250 Basic**!

3.2 The Test Program [TEST]



The **Test**-Program allows you to run a complete self test procedure of all functions. Press **Enter** to confirm or **Mode** to cancel.

3.3 The Audio Program [AUDI]



The **Audio**-menu allows you to run a stand alone audio program. This chaser can run either fast or slow. **FFST**: Every soundimpulse on step of the chaser. **ASLW**: Every second soundimpulse one step of the chaser.

Additional you can choose a basic position for this audio chaser. Use therefore either the internal manual mode or an external controller to set the desired Pan/Tilt position. Confirm this setting in the **SVPT** menu by pressing the **Enter**-key.

You can also set the size of the audio chaser in the **SIZE** menu. You have the choice between: NORM (no basic position has to be chosen), 'BIG', 'MIDL' and 'SMAL').

If you want to run the systems simultaneously, one of the **YPOCs** must be switched as the master. All others must be "Slave" Master = OFF. **Notice:** The Audio function is only working if **no** DMX is connected. This function can work e.g. on small events or as an emergency program.

3.4 Lamp On/Off [LAMP]

LAMP

Use the **Up/Down**-keys to select lamp **ON** or lamp **OFF** Press **Enter** to confirm or **Mode** to cancel and return to the main menu. (The lamp **OFF** command is only working if the shutter is closed at the same time. Use an external controller or the manual drive mode, see 3.9.1)

3.5 Reset [RESE]

RESE

Press the **Enter**-key to run a reset of all fixture functions (**RST** is shown in the display).

3.6 Running time of lamp and unit [TIME]

TIME

By this option can read out three different running times of the fixture.

POWR	Running time of the fixture (no destructible).
LA 1	Running time of the lamp (erasable). Push the Up/Down -keys at one time to delete this running time.
LA 2	Running time of the lamp (no destructible).

3.7 Invert Pan Movement [RPAI]

RPAI

This function allows you to invert the Pan movement. Use the **Up/Down**-keys to select invert **ON** or **OFF**. Press **Enter** to confirm or **Mode** to cancel and return to the main menu.

3.8 Invert Tilt Movement [RTL T]

RTL T

This function allows you to invert the Tilt movement. Use the **Up/Down**-keys to select invert *ON* or *OFF*. Press **Enter** to confirm or **Mode** to cancel.

3.9 Special Functions (SPEC)



This menu allows you to enter further special functions of the **Ypoc 250 Basic**.

In detail they are:

3.9.1 Manual Drive (MANU)



This function allows you to drive all the fixture functions manually. Select the desired function with the **Up/Down**-keys and confirm with **Enter**. Now choose the desired value with the **Up/Down**-keys and confirm again with **Enter** or cancel and return to the menu with the **Mode**-key.

Function	Value	Remark
PAN	000 - 255	Pan Position
TILT	000 - 255	Tilt Position
COLOR	000 - 255	Color wheel
GOGO	000 - 255	Gobo wheel
SHUT	000 - 255	Shutter / Strobe function (the lamp strikes at DMX 255 if dimmer is "open" = DMX 255)
DIMR	000 - 255	Dimmer
SPEC	000 - 255	Lamp Off, Reset, ...
LASR	000 - 255	Laser

3.9.2 Lamp On automatically (LAAU)



This function enables to switch On the lamp automatically after switching On the fixture. Use the **Up/Down**-keys to select *ON* if you want to switch on the lamp automatically after switching on the fixture or *OFF* if you don't want this function. Press **Enter** to confirm or **Mode** to cancel and return to the menu.

If you have chosen *OFF* you have the possibility to start the lamp either via DMX or direct at the **Ypoc 250 Basic** in the Lamp menu.

3.9.3 Lamp Off via DMX [DLOF]

DLOF

This function enables to switch off the lamp via DMX or not. Use the **Up/Down**-keys to select **ON** if you want to switch off the lamp via DMX or **OFF** if you don't want this function. Press **Enter** to confirm or **Mode** to cancel and return to the menu.

If you have chosen **OFF** you have the possibility to switch off the lamp either direct at the **Ypoc 250 Basic** in the Lamp menu or switch off the main switch.

3.9.4 DMX Input [DMX1]

DMX1

Readout DMX values of each channel received by the fixture. Use the **Up/Down**-keys to select desired channel and press **Enter** to read its value.

Function	Value	Remark
PAN	000 - 255	Pan Position
TILT	000 - 255	Tilt Position
COLO	000 - 255	Color wheel
GOGO	000 - 255	Gobo wheel
SHUT	000 - 255	Shutter / Strobe function
DIMR	000 - 255	Dimmer
SPEC	000 - 255	Lamp Off, Reset, ...
MOVE	000 - 255	Movement
SPEED	000 - 255	Speed Pan/Tilt
LASER	000 - 255	Laser

3.9.5 Display [DISP]

DISP

Use this function to choose between different display indications. Use the **Up/Down**-keys to select desired function and press **Enter** to confirm or **Mode** to cancel and return to the menu.

D ON	Display On/Off (If you've chosen OFF , the display will go out within 15 seconds after the last input. The next key touch will reactivate the display).
REV	Turn around the display

3.9.6 Fixture Temperature [TEMP]

TEMP

This function allows you to read out the actual temperature of the **Ypoc 250 Basic**. Press **Enter** to confirm or **Mode** to cancel. Inside temperatures below 80°C are not critical. 80°C and more lead the lamp being switched off at a critical point. Please note for a save operation that the outside temperature should not exceed 45°C.

3.9.7 Fan Control [FANS]

FANS

By using this function you can choose between 4 types of fan speed operations. Use the **Up/Down**-keys to select desired function and press **Enter** to confirm or **Mode** to cancel and return to the menu.

<i>HIGH</i>	The cooling fan works continuously at max. speed.
<i>REG</i>	The fan automatically raises its speed in order to control inside temperature of the fixture.
<i>LOOF</i>	The fan keeps the adjusted low speed until the temperature exceeds max. inside temperature, then the Ypoc 250 Basic automatically switch off the lamp.
<i>LOHI</i>	The fan keeps the adjusted low speed until the temperature exceeds max. inside temperature, then the Ypoc 250 Basic automatically switch from low to high fan speed.

3.9.8 Adjustments and Calibrations [ADJU]

ADJU

By this function you can adjust and calibrate the positions of the different wheels and other motors. This can be necessary after a service or repair work.

For this function you have to entry the fixture code. This work should be done only by authorized persons.

Use the **Up/Down**-keys to select desired function and press **Enter** to confirm or **Mode** to cancel and return to the menu. Use now the **Up/Down**-keys to set the adjustment values and confirm once more with the **Enter**-key or cancel with the **Mode**-key.

Function	Value	Remark
COLO	- 99 - + 99	Color wheel
GOBO	- 99 - + 99	Gobo wheel
SHT 1	- 99 - + 99	Shutter 1
SHT 2	- 99 - + 99	Shutter 2
CLRE	Adjustments in the internal circuit.	

3.9.9 Default Settings [DFSE]

DFSE

Press **Enter** to reset all fixture personalities (not the adjusted functions) to the default values. On the display will appear **OK** to indicate that the defaults are set.

Function	Display	Default Settings	
DMX Address	DMX 1	DMX 1	
Pan reverse	R PAN	ON	OFF ✓
Tilt reverse	RTL T	ON	OFF ✓
Automatic lamp on	L APU	ON	OFF ✓
Lamp on via DMX	DMX OF	ON ✓	OFF
Display	DISP	ON ✓	
Cooling fan	FANS	HIGH REG ✓	LOOF LOHI
Feedback	FEED	ON ✓	OFF

3.9.10 Feedback [FEED]

FEED

The **YPOC 250 Basic** is provided with a automatic position correction (feedback) for the Pan and Tilt movement. Use the **Up/Down**-keys to select **ON** if you want to enable the feedback function or **OFF** if you don't want this function. Press **Enter** to confirm or **Mode** to cancel and return to the menu.

3.9.11 Correction of faults [EFLG]

EFLG

(Function available for authorized persons only)

3.10 Error and Information Messages

HEAT	This message appears if you try to switch on the lamp within 5 minutes after having switched off (lamp too hot). The message will appear on the display if the lamp doesn't ignite within 20 seconds. The fixture will store this command and automatically ignite the lamp after 5 minutes.
LAER	After the ignition of the lamp was two times not successful the display will show LAER . That means the lamp could be damaged or even missed, the fixture is overheating or there could be a failure on the igniter or ballast. Switch off the power supply and solve the possible problem.
OTMP	This error message informs you that the fixture was overheating and that the relay switches off the lamp. Please look for possible reasons (fan faulty, air in/outlets blocked or very dirty, lamp broken or very old, too high ambient temperature. Switch off the power supply and solve the possible problem.
RSER	This message informs you that one of the fixture function wasn't able to do its reset correct (magnetic sensor, stepping motor, driver on the PCB, cables, etc.). Repair the defect and start the fixture again.

4 DMX Channel Selection (DMX Protocol)

Channel	Function	Time and Value	DMX	HEX	%
1) PAN-coarse	0 .. 530°	min. 2,65 s	0..255	00..FF	0..100
2) PAN-fine	High- Pos ... High- Pos + 2,1° (16 Bit)		0..255	00..FF	0..100
3) Tilt-coarse	0 .. 285°	min. 1,8 s	0..255	00..FF	0..100
4) Tilt-fine	High- Pos ... High- Pos + 1,1° (16 Bit)		0..255	00..FF	0..100
5) Color	open (fast)	Chaser from color to color max. 140 BPM => 0,43 s	0..1	00..01	0,2
	open / color 1 (fast)		2..3	02..03	1,0
	color 1, Brilliant Blue (fast)		4..5	04..05	1,8
	color 1 / color 2 (fast)		6..7	06..07	2,5
	color 2, Blue (fast)		8..9	08..09	3,3
	color 2 / color 3 (fast)		10..11	0A..0B	4,1
	color 3, Blue Purple (fast)		12..13	0C..0D	4,9

Channel	Function	Time and Value	DMX	HEX	%
	color 3 / color 4 (fast)		14..15	0E..0F	5,7
	color 4, Magenta (fast)		16..17	10..11	6,5
	color 4 / color 5 (fast)		18..19	12..13	7,3
	color 5, Pink (fast)		20..21	14..15	8,0
	color 5 / color 6 (fast)		22..23	16..17	8,8
	color 6, Orange (fast)		24..25	18..19	9,6
	color 6 / color 7 (fast)		26..27	1A..1B	10,4
	color 7, Canary (fast)		28..29	1C..1D	11,2
	color 7 / color 8 (fast)		30..31	1E..1F	12,0
	color 8, Italian Blue (fast)		32..33	20..21	12,7
	color 8 / color 9 (fast)		34..35	22..23	13,5
	color 9, Turquoise (fast)		36..37	24..25	14,3
	color 9 / color 10 (fast)		38..39	26..27	15,1
	color 10, Jade (fast)		40..41	28..29	15,9
	color 10 / color 11 (fast)		42..43	2A..2B	16,7
	color 11, Red (fast)		44..45	2C..2D	17,5
	color 11 / open (fast)		46..47	2E..2F	18,2
	open (fast)		48..63	30..3F	19,0
	open (slow)	Chaser from color to	64..65	40..41	25,3
	open / color 1 (slow)	color max. 70 BPM	66..67	42..43	26,1
	color 1, Brilliant Blue (slow)	=> 0,86 s	68..69	44..45	26,9
	color 1 / color 2 (slow)		70..71	46..47	27,6
	color 2, Blue (slow)		72..73	48..49	28,4
	color 2 / color 3 (slow)		74..75	4A..4B	29,2
	color 3, Blue Purple (slow)		76..77	4C..4D	30,0
	color 3 / color 4 (slow)		78..79	4E..4F	30,8
	color 4, Magenta (slow)		80..81	50..51	31,6
	color 4 / color 5 (slow)		82..83	52..53	32,4
	color 5, Pink (slow)		84..85	54..55	33,1
	color 5 / color 6 (slow)		86..87	56..57	33,9
	color 6, Orange (slow)		88..89	58..59	34,7
	color 6 / color 7 (slow)		90..91	5A..5B	35,5
	color 7, Canary (slow)		92..93	5C..5D	36,3
	color 7 / color 8 (slow)		94..95	5E..5F	37,1
	color 8, Italian Blue (slow)		96..97	60..61	37,8
	color 8 / color 9 (slow)		98..99	62..63	38,6
	color 9, Turquoise (slow)		100..101	64..65	39,4
	color 9 / color 10 (slow)		102..103	66..67	40,2
	color 10, Jade (slow)		104..105	68..69	41,0
	color 10 / color 11 (slow)		106..107	6A..6B	41,8
	color 11, Red (slow)		108..109	6C..6D	42,5
	color 11 / open (slow)		110..111	6E..6F	43,3
	open (slow)		112..127	70..7F	44,1
	color rotation, slow-fast, CW	min. 1,4 turns/h	128..191	80..BF	50..75
	color rotation, fast-slow, CCW	max. 2,9 turns/sec.	192..253	C0..FD	76..98
	Audio color chaser slow	each 4th sound impulse → new color	254	FE	99
	Audio color chaser fast	each sound impulse → new color	255	FF	100
6) Gobo	Gobo 1 (open, fast)	Chaser from gobo to gobo max. 100 BPM => 0,6 s	0..3	00..03	0..1
	Gobo 2 (fast)		4..7	04..07	2..3
	Gobo 3 (fast)		8..11	08..0B	3..4
	Gobo 4 (fast)		12..15	0C..0F	5..6
	Gobo 5 (fast)		16..19	10..13	6..7
	Gobo 6 (fast)		20..23	14..17	8..9

Channel	Function	Time and Value	DMX	HEX	%	
	Gobo 7 (fast)		24..27	18..1B	9..10	
	Gobo 8 (fast)		28..31	1C..1F	11..12	
	Gobo 9 (fast)		32..35	20..23	13..14	
	Gobo 1 (open, fast)		36..39	24..27	14..15	
	Gobo 1 (open, slow)	Chaser from gobo to gobo max. 40 BPM => 1,51 s	40..65	28..41	16..25	
	Gobo 2 (slow)		66..67	42..43	26	
	Gobo 3 (slow)		68..71	44..47	27..28	
	Gobo 4 (slow)		72..75	48..4B	28..29	
	Gobo 5 (slow)		76..80	4C..50	30..31	
	Gobo 6 (slow)		81..83	51..53	32..33	
	Gobo 7 (slow)		84..87	54..57	33..34	
	Gobo 8 (slow)		88..91	58..5B	35..36	
	Gobo 9 (slow)		92..95	5C..5F	36..37	
	Gobo 1 (open, slow)		96..99	60..63	38..39	
	Gobo rotation, slow-fast, CW	min. 1,4 turns/h	100..103	64..67	39..40	
	Gobo rotation, fast-slow, CCW	max. 1.0 turns/sec.	104..107	68..6B	41..42	
	Audio gobo chase, slow	each 4th sound impulse → new gobo	108..191	6C..BF	42..75	
	Audio gobo chase, fast	each sound impulse → new gobo	192..253	C0..FD	75..98	
7) Shutter	Shutter closed		0..15	00..0F	0..6	
	Random Strobe (different pattern)		16..31	10..1F	7..11,9	
	Strobe Pulse effect , slow - fast	min. frequent 0,7 Hz	32..47	20..2F	12..12,9	
	Strobe effect , slow - fast	max. frequent 10 Hz	48..239	30..EF	13..93	
	Shutter open (lamp start)		240..255	F0..FF	94..100	
8) Dimmer	Dimmer closed (0%)		0..3	0..3	0..1	
	Dimmer 1%...99%	movement time 0,3 sec.	4..251	4..FB	2..98	
	Dimmer open (100%)		252..255	FC..FF	99..100	
9) Special	no function		0..15	00..0F	0..6	
	Gobo-seesaw +/- 10° slow – fast	3,5 moves / min. up to 60 moves / max.	16..31	10..1F	7..12	
	Gobo-seesaw +/- 20° slow – fast	3,5 moves / min. up to 60 moves / max.	32..47	20..2F	13..18	
	Gobo-seesaw +/- 30° slow – fast	3,5 moves / min. up to 60 moves / max.	48..63	30..3F	19..24	
	Color-chaser C / C+1 slow – fast	0,7 BPS ... 2,3 BPS => 1,43 s ... 0,43 s	64..79	40..4F	25..31	
	Color-chaser C / C+2 slow – fast	0,7 BPS ... 2,0 BPS => 1,43 s ... 0,5 s	80..95	50..5F	32..37	
	Audio Pan / Tilt slow	each 4th sound impulse → new position	96..111	60..6F	38..43	
	Audio Pan / Tilt fast	each sound impulse → new position	112..127	70..7F	44..50	
	no function		128..249	80..E5	50..97	
	Lamp OFF (3 sec.)		230..249	E6..F9	92..97	
	Reset		250..255	FA..FF	98..100	
	10) Move- ment	no movement		0	00	0
		Movement	Size	Phase		
PAN		1	0°	01..01	01..01	0,5
		1	90°	02..03	02..03	1,0
		1	180°	04..05	04..05	1,7
		1	270°	06..07	06..07	2,5
PAN		2	0°	08..09	08..09	3,3
		2	90°	10..11	0A..0B	4,1
		2	180°	12..13	0C..0D	4,9

Channel	Function	Time and Value	DMX	HEX	%	
	PAN	2	270°	14..15	0E..0F	5,7
		3	0°	16..17	11..11	6,5
		3	90°	18..19	12..13	7,3
		3	180°	20..21	14..15	8,0
		3	270°	22..23	16..17	8,8
	PAN	4	0°	24..25	18..19	9,6
		4	90°	26..27	1A..1B	10,4
		4	180°	28..29	1C..1D	11,2
		4	270°	30..31	1E..1F	12
	TILT		size / phase see also PAN	32..63	20..3F	13..25
	PAN / TILT		size / phase see also PAN	64..95	40..5F	26..37
	PAN / TILT (inverse)		size / phase see also PAN	96..127	60..7F	38..50
	Circle		size / phase see also PAN	128..159	80..9F	51..62
	Circle (inverse)		size / phase see also PAN	160..191	A0..BF	63..75
lying eight		size / phase see also PAN	192..223	C0..DF	76..87	
random movement		size see also PAN	224..255	E0..FF	88..100	
11) Speed Pan/Tilt	Pan/Tilt relative movement		0..15	00..0F	0..6	
	Pan/Tilt slow – fast Use this channel 14) also for the speed of the movements (channel 13).		Pan min. 530° = 200 s Pan max. 530° = 2,65 s Tilt min. 285° = 110 s Tilt max. 285° = 1,8 s	16..255	10..FF	7..100
12) Laser	Laser OFF		0..15	00..0F	0..6	
	Laser flashing random		16..31	10..1F	7..12	
	Audio Laser		32..47	20..2F	13..18	
	Blinking slow - fast		48..127	30..7F	19..50	
	Flashing slow - fast		128..239	80..EF	51..93	
	Laser ON		240..255	FO..FF	94..100	
Lamp ON	Shutter open		240..255	F0..FF	94..100	
Lamp OFF	Channel 9 (min. 3 sec.) (only if shutter is closed, channel 7 = 0 ..15)		230..249	6E..9F	92..97	

5 Change the Lamp


For a frictionless operation please read this chapter carefully and follow all instructions.

5.1 Safety Regulations

- **Pull out the main plug!**
- Wait min. 20 minutes after the last operation to cool down the fixture.
- Don't touch the bulb of the lamp with bare fingers (this can cause damages).
- Before you put the **YPOC 250 Basic** into operation close the casing, otherwise your retina can be hurt!

5.2 Realize the Lamp Change

1. Pull out the main plug!
2. Open the upper shell of the head casing by loosening the 4 Phillips screws. Two on the front side and 2 on the back side of the head.
3. Open the 3 screws at the lamp sheet and remove it.
4. Remove the old or broken lamp out of the socket. **Attention:** The glass bulb of the lamp can splinter. For that reason remove the lamp with safety gloves or some cloth.
5. Put in the new lamp securely into the socket. **Attention:** Use only the original lamp type!
6. Adjust the optimum distance between the lamp bulb and the lens (1.0-1.5 mm) with the adjusting screw [A]. This can be necessary through different manufacturer.
7. Close the **YPOC 250 Basic** in reverse order.
8. The running time of the lamp *LR I* can be reseed in the *TIME* Menu.

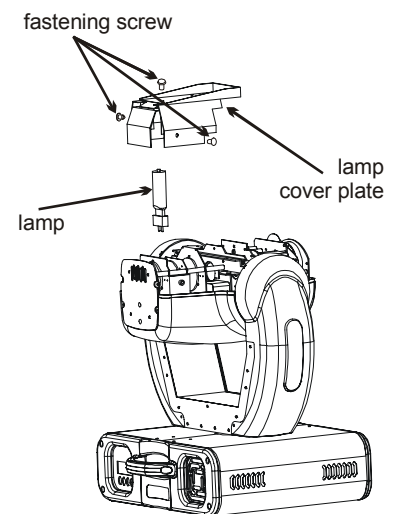


Attention:

Pay attention on a firm fit of the lamp and on the optimum distance between the lamp and the lens (1.0 - 1.5 mm)!

5.3 Lamp adjustment

The optimum distance between the lamp and the lens must be controlled after every lamp change. The lower deviation amount is **min. 1.0mm**. Running the fixture within a lower deviation can cause damages of lamp and/or lens.

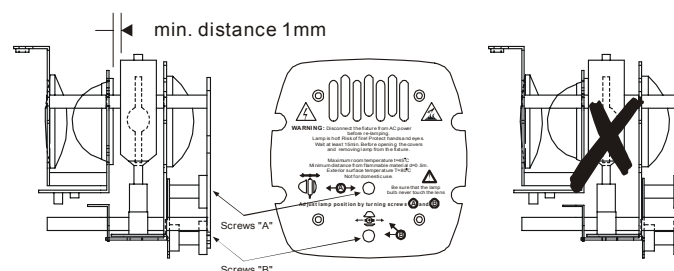

The **Ypoc 250 Basic** lamp holder is aligned at the factory. Due to differences between lamps, fine adjustments may improve light performance.

Pease follow this procedure:

1. Strike the lamp (for example in the *LAMP* menu) and wait a while until full intensity of the lamp.
2. Direct the beam straight on a flat and bright surface/wall (beam open, white, no gobo, no effects).

Remark: As the optimum distance of the lamp from lens was adjusted during the installation or changing the lamp (by turning the screw **A**), it is necessary to adjust only the second position by turning the screw **B**, in order to center the so-called '**Hot-Spot**' (the brightest part of the beam).

3. If the Hot-Spot is not in the middle, you can adjust this by turning the screw **B**.
4. If the Hot-Spot is too bright and the beam not even, you can adjust this again by turning the screw **A** clockwise (get nearer towards the reflector). **Remark:** A complete even beam can't be reached because of the design of the lamp.
5. Appears the beam more bright at the edge, you can adjust this by turning the screw **A** counter-clockwise (get nearer towards the lens).

Attention: Never remain the minimum distance between lamp and lens (1.0mm). Is there any doubt, open the fixture and control the distance!

6 Change a Gobo

The **YPOC 250 Basic** is fitted with standard gobos (outside diameter 27 mm, image size 23 mm). You can use ether steel or glass gobos.


6.1 Safety Regulations

- **Pull out the main plug!**
- Wait min. 20 minutes after the last operation to cool down the fixture.
- Before you put the **YPOC 250 Basic** into operation close the casing, otherwise your retina can be hurt!

6.2 Realize the Gobo Change

1. **Pull out the main plug!**
2. Open the upper shell of the head casing by loosening the 4 Phillips screws. Two on the front side and 2 on the back side of the head.
3. Remove the Gobo carefully by hand.

4. Change the gobo and fix it again under the spring. Pay attention on a safe fit.
5. Close the **YPOC 250 Basic** in reverse order.

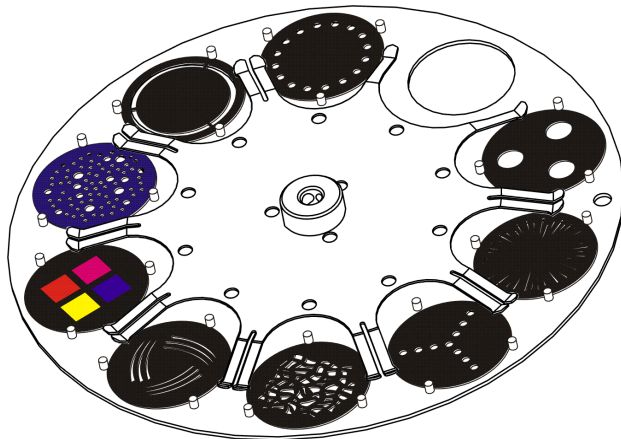

Attention:

If you use glass gobos, the non-vaporized side must be fitted towards the lamp direction.

7 Maintenance and Cleaning the YPOC 250 Basic

It is absolutely essential that the fixture is kept clean and that dust, dirt and smoke-fluid residues must not built up on or within the fixture. Otherwise the fixture's light-output will be significantly reduced. Regular cleaning will not only ensure the maximum light-output, but will also allow the fixture to function reliable throughout its life.

A soft lint-free cloth moistened with any good glass cleaning fluid is recommended, under no circumstances should alcohol or solvents be used!

The inside optical system should be maintained only by authorized persons. Please contact your local dealer.

7.1 Safety Regulations

- **Pull out the main plug!**
- Wait min. 20 minutes after the last operation to cool down the fixture.
- Before you put the **YPOC 250 Basic** into operation close the casing, otherwise your retina can be hurt!

7.2 Circumference and Interval (rule-of-thumb)

The contamination of the fixture depends on the environment details. Therefore no general guidelines can be given. From this it follows that the intervals are only

suggestions from our practice experience.

Position	Interval	In this way
Outside optic	weekly	soft cloth and glass cleaning fluid
Color filter	monthly	soft cloth and glass cleaning fluid
Gobos	yearly	vacuum cleaner, airbrush, etc.
Glass gobos	monthly	soft cloth and glass cleaning fluid
Dimmer/Shutter	yearly	vacuum cleaner, airbrush, etc.
Inside lens	monthly	soft cloth no glass cleaning fluid
Fan and air channel	monthly	vacuum cleaner, airbrush, etc.
Reflector	never	
Lamp	never	
Moveable parts	yearly	suitable fatty oil

Attention:


- **Never let optical parts come into contact with oil or fat.**
- **Before running the fixture wait until all parts are dried up.**
- **Never clean the aspheric lens with water or other cleaners. Change the lens if it looks milky (about 1-2 years). For that please contact your local dealer.**

7.3 *Cleaning the Optical System*

1. **Pull out the main plug!**
2. Wait min. 20 minutes after the last operation to cool down the fixture.
3. Open the upper shell of the head casing by loosening the 4 Phillips screws.
Two on the front side and 2 on the back side of the head.
4. Do the work as explained in the list above.
5. Before you put the **YPOC 250 Basic** into operation close the casing, otherwise your retina can be hurt!

8 Technical Specification

Power supply	
Power consumption	500 Watt (blind current compensated)
EU-model	AC 230V / 50 Hz~
Fuse protection	T3,15A, 250 BasicV, 5x20 mm (fine-wire fuse)
US-model	AC 115V / 60 Hz~
Fuse protection	T6,3A, 115V, 5x20 mm (fine-wire fuse)
Lamp	
Type 1	MSD 230V/250 BasicW, socket GY-9,5
Type 2	MSD 230V/200W, socket GY-9,5
Optical system	
Parabolic reflector	
Doubles condenser lens	
15° standard objective (optional 12° or 18°)	
Lens anti-reflex	
Color	
11 dichroic filter plus white	
Gobos	
9 exchangeable standard gobos plus open	
Gobo outside diameter 27 mm, image size 23 mm	
Shutter / Strobe / Dimmer	
Strobe- effect with variable speed 1 - 10 flashes per second	
Continuously mechanical dimmer 0 - 100%	
Focus	
Manually driven focus from near to far away	
Drive	
Standard DMX-512, 3 pole XLR; [+] = Pin 3 [-] = Pin 2 [Ground] = Pin 1. The DMX- addressing starts at the DMX- address [001].	
Pan / Tilt	
Pan- movement	530° in max. 2,65 seconds, 16 bit resolution
Tilt- movement	280° in max. 1,68 seconds, 16 bit resolution
Weights and measures	
Width of the base	380 mm
Length of the base	315 mm (390 mm incl. handle)
height (head vertical)	510 mm
Weight (net)	18 kg

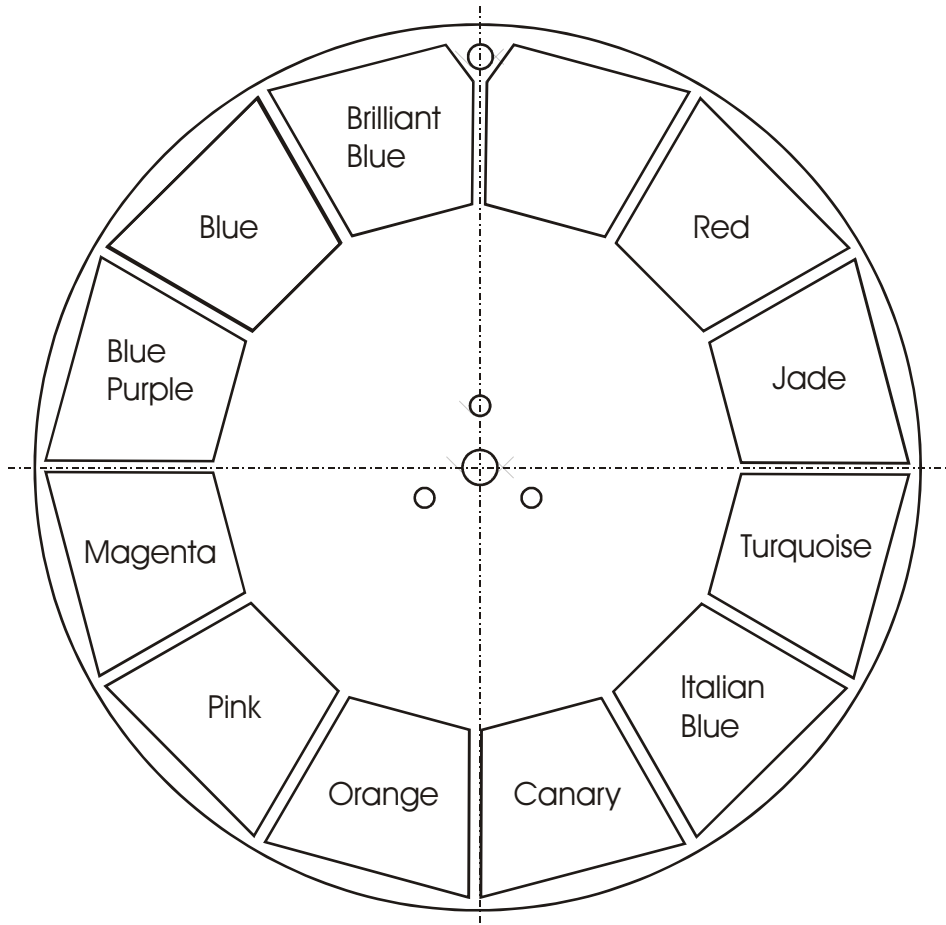

9 Index

A		Invert..... 12
Adjustments	15	
aspheric lens	24	
Audio	11	
B		
BGV C1	7	
C		
Calibrations	15	
Change a Gobo	22	
Circumference	23	
Clamps	7	
Cleaning	24	
Connected load	9	
D		
Description of Device	5	
DIN VDE 0711-217	7	
Display	14	
DMX	9	
DMX- Address	11	
DMX Input	14	
DMX Protocol	17	
E		
Error Messages	17	
EU model	9	
F		
Fan	15	
Feedback	16	
Fixture Temperature	15	
Fuse	9	
G		
Glass Gobos	23	
I		
Injury of the retina	6	
L		
Lamp adjustment	21	
M		
Maintenance	23	
Measures	25	
Menu Field	10	
Mounting	7	
Mounting plate	7	
P		
Pan- movement	25	
Permanent installation	7	
Power supply	9	
R		
<i>Reset</i>	12	
Running time.....	12	
S		
Safety Instructions	6	
Secure the YPOC 250	8	
Special Functions	13	
T		
Technical Specification	25	
Test Program	11	
Tilt- movement	25	
U		
US model	9	
V		
VBG 70	7	
W		
Weights	25	

